








# Getting to know MyPal

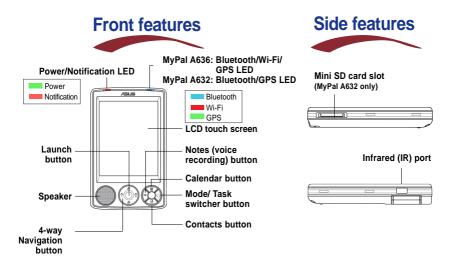



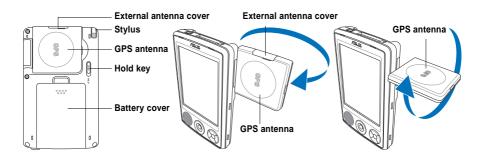


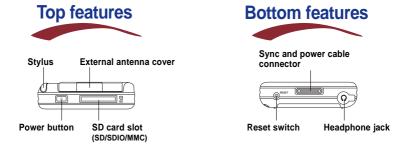

## Setting up MyPal

**NOTE** Install the battery before connecting the AC adapter to a power source. See "Installing and removing the battery" of the User Manual for proper battery installation.

#### Connecting power adapter and charging the battery

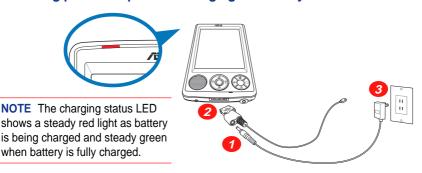


#### Using the GPS car kit

The GPS car kit includes a car holder and gooseneck. Use the car charger to supply DC power to the device through the car's cigarette lighter socket.

- Attach the gooseneck to the car's windshield.
- 2. Carefully slide the device into the holder.
- Connect the car charger to the power jack at the lower side of the holder.
- Plug the other end of the car charger to the cigarette lighter socket.

**NOTE** The device must carefully be placed into the holder to avoid damaging the 26-pin device connector and causing the device to breakdown.

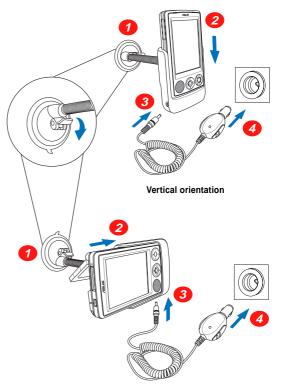

Horizontal orientation


## Synchronizing MyPal

Use the Companion CD to install Microsoft® ActiveSync® on your desktop or notebook. ActiveSync is already installed on your device.

**NOTE** Do not connect your device to your computer until you have installed ActiveSync.


#### Connecting to the computer

When MyPal A636/A632 is connnected to the computer's USB port, it allows data synchronization and battery charging at the same time.

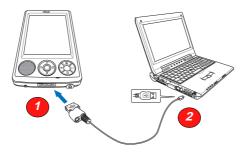

#### Synchronizing with the computer

Upon connection, your device is automatically synchronized with your computer.

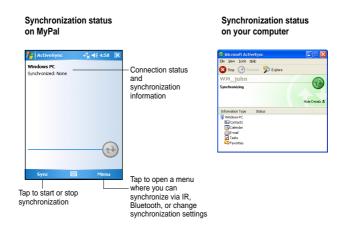


# Using Windows Mobile™ 5.0

MyPal runs on Microsoft Windows Mobile™ 5.0 Pocket PC Edition, and you will find applications such as Outlook E-mail, PowerPoint Mobile, Word Mobile, Excel Mobile, Pocket MSN, Internet Explorer and more.


### **Today screen**

The Today screen appears when you turn on your device. The Today screen gives you a summary of the important information for the day. Tap any of the listed items with the stylus to display the details.

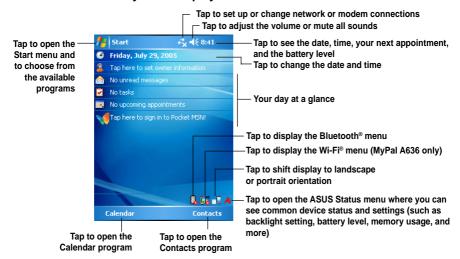

#### Start menu

From the Start menu, you can select programs, settings, and Help topics. To open the Start menu, tap the Bicon from the top of the screen.

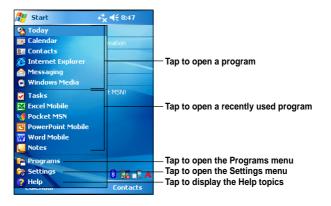

## **Entering Information**

Use any one of the following ways to enter information on your device

• **Typing** Tap the keyboard icon at the bottom of the screen, then key in the

word.

• Writing Tap Menu > Draw and use the stylus to write. Then, select the text

and tap Menu > Tools > Recognize.

• **Drawing** Tap **Menu > Draw** and then use the stylus to draw.

• Recording Tap Menu > View Recording Toolbar. Then, tap the Record button

on the toolbar.









## Reference information

Refer to the following sources for additional information on the ASUS MyPal A636/ A632 Pocket PC.

Operation MyPal A636/A632 User Manual

Online Help Windows® Mobile 5.0 Help (on your device)

ActiveSync® Help (on your computer)

### Web sites and technical support

Technical support: +886-2-2894-3447
Support Fax: +886-2-2890-7698
Support e-mail: tsd@asus.com.tw
Web site: www.asus.com.tw
Software download: support.asus.com.tw

Pocket PC web site: www.microsoft.com/mobile/pocketpc