



Overview

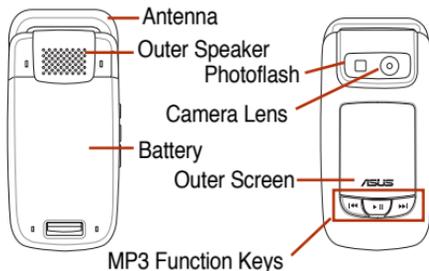

The SIM Card & Battery Installation


1. Push rightward and unlock the SIM card holder.

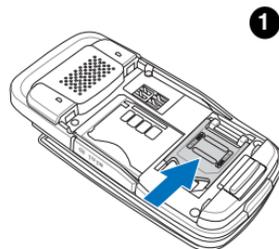

2. insert the SIM card in the correct orientation with the gold contacts facedown.




3. Reinstall the battery and press to snap it back into place.

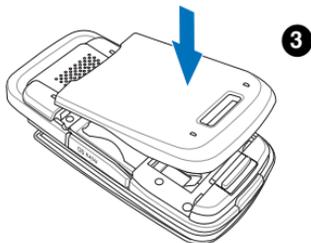


The mini SD Card Installation & Uninstallation

1. **Install:** Open the cover and place the mini SD card into the slot with the gold contact facedown.
2. **Uninstall:** Press the mini SD card and it will uninstall itself.

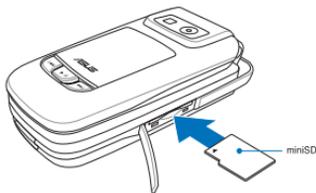

Battery Charging

1. Connect the charger to a wall outlet.
2. Connect the charger to the charger port at the bottom of the phone in a correct orientation.
3. The battery will then be charged, and the screen will display a charging animation. .

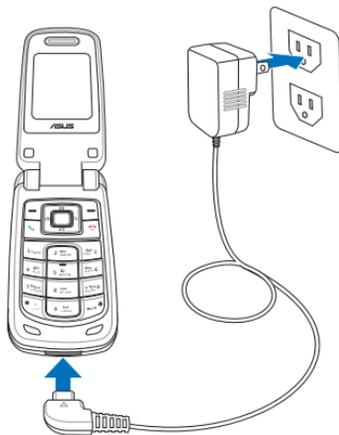

Main Menu

In the idle mode, press  to enter the main menu and navigate with joysticks. Press  to select an item. For exit from the main menu or sub-menu, simply press  or . The table beneath will introduce the icons and functions in the main menu.

Icon	Discription
	Network: Enables users to specify the WAP and data settings and set up GSM and GPRS settings. Provides access to the internet and to STK SIM card service.
	Messages: Enables users to check, compose and send SMS, MMS, or Email. Also, enables users to chat and broadcast messages.
	Manner: Enables users to set up and personalize manners, including ringtones, volumes, ring types and answer modes.

Icon	Discription
	Settings: Enables users to set up the phone, display, ringtones, network, security, call and also restore to the factory default settings.
	Camera: Enables users to take pictures and record videos. Users can also save and send the files to friends.
	Media Center: Enables users to play MP3 music files, play JAVA games and compose ringtones.
	Organizer: Contains useful tools, including an alarm, schedule planner, calculator, currency and unit converter, stopwatch, file manager and etc.
	Phonebook: Helps users to manage names and phone numbers for easy access and caller recognition.
	Calls: Stores information about dialed, answered, missed calls.

Calls Making

Common Calls

1. Flip open the phone and enter the number for dialing. Press  (right soft key) to clear the last number and long press to clear all.
2. After the phone number is completed, press  (left soft key) to save it to the phonebook. Or press  to start connecting.

Speed Dialing

3-1. From the phonebook

In the idle mode, press  to enter the phonebook and use the joysticks (up and down) to select a contact name for dialing. Press  to start connecting.

3-2. From Call Log

Press  to show the dialed and received call history. Select a contact and press  to connect the number.

Call Ending

Press  to end the call.

Silent and Hands-free Speaker

Press  to start the silence function and again to stop it during the call.

Press  while dialing or long press  during connecting to enable the speaker and again to disable it.

Call Answering

You can only answer the phone call when the phone is on. When a call is coming, the phone will alert users with a ringtone or a vibration based on users' previous setup. The display will show the incoming number, contact name (only on the contact list) or hidden number. The display will also show the picture if users have set up earlier in the phonebook.

1. Users could just flip open the phone to answer the phone.
2. For answering the call by pressing any key, go to **Settings > Call Settings > Answering Mode** and select **Any Key**.

Call Log

Press  to check the information of “missed calls,” “dialed calls,” “answered calls.”

The limit of the Call Log is 60 calls and 20 records for each missed call, dialed call, answered call. The previous history record will be dropped from the list when the quota is exceeded.

Common Settings

In the **Settings** section, users can customize their preference setup, such as ringtones, display settings, date/time or language.

Date/Time

Go to **Settings > Phone Settings > Date/Time**.

1. Select **Set Date/Time** and key in with keypad. Press  to confirm.
2. Go to **Set Time Zone** to locate your home city or the nearest one and press  to confirm.
3. Go to **Date Format** and set a wanted format-**DD.MM.YYYY**, **MM.DD.YYYY**, or **YYYY.MM.DD**.

4. Go to **Time Format** to choose **24-Hour** or **12-Hour**.
5. Users have to press  to select **Show Date** and **Show Time** in **Settings > Displays Settings > Main Idle Screen** first and the date/time will show up then.

Shortcut

Go to **Settings > Phone Settings > Shortcut**. Select an (EMPTY) space and press  to start editing. Choose one function from the **Shortcut List** and press  to confirm.

Manner

In the **Manner** menu, users can select manners, including **Normal**, **Meeting**, **Indoor**, **Outdoor**, **Custom** and even further personalize and rename those manners.

Wallpaper

Wallpaper from built-in images

1. Go to **Settings > Display Settings > Wallpaper > Main Wallpaper/ Sub Wallpaper**.

2. Navigate upward and downward to browse the built-in images and select one. Press  and press  > **Set as** > **Main Wallpaper/ Sub Wallpaper**.

Wallpaper from user's images

1. To set the images captured with M307 camera as the wallpaper, please go to **Camera** > **My Album** > **Handset**.
2. Locate the wanted picture and press  > **Set as** > **Main Wallpaper**. Name it and press  to confirm.
3. Repeat the previous steps in the built-in images section to set up the wallpaper.

Ringtone Settings

In the **Settings** > **Ringtone Settings**, users can set up their preferred ringtones for incoming calls, messages tone, ring mode, message mode and etc.. Or users can customize their own music by going to **Media Center** > **Music** > **Ringtone** > **Composer**.

SMS Composing/Sending

1. Select **Message** > **Edit SMS**.

2. Press  to "**To:**" Enter the number or press  to select a contact and press  to confirm.
2. Press  to enter "Content:" and start editing the contents. Users can edit content directly or press  to apply **Common Words**.
3. After the editing is over, press  to confirm and press  > **Send**.
4. "Save to outbox" message will show up and press Yes to save it to outbox.

MMS Composing/Sending

Composing Text

1. Go to **Message** > **MMS** > **Edit MMS**.
2. Select "Content:" and press  >  > **Add Text** to start editing.
3. When finish editing, press  to confirm.
4. If users would like to edit or delete the text, simply press  to **Edit**, set up **Duration** or **Delete**.

Adding Image

1. After the text part is done, press  > **Add Image** > .

2. Locate the wanted image and press  to confirm the addition.
3. If users would like to edit or delete the image, simply press  to **Edit**, set up **Duration** or **Delete**.

Adding Audio

1. After the image part is done, press  > **Add Audio** > .
2. Locate the audio file and press  to confirm the addition.
3. If users would like to edit or delete the audio, simply press  to **Edit**, set up **Duration** or **Delete**.

Adding Slide

A slide can only hold a combination of text, image and audio. To have a multi-slide MMS, just press  > **Add Slide** and repeat the previous steps to add text, image and audio.

Sending MMS


1. There are To:, Cc:, Bcc:, Subject: in the Edit MMS menu.

2. Users cannot enter phone numbers directly. Just highlight To: and press  >  > **Add**. Users can add a recipient from phonebook, or enter the phone number. Press  to confirm and press  to return the menu.
3. For more recipients, repeat the previous step.
4. Press  > **Send** >  to send the MMS. Users can find a copy in the MMS Outbox.

MP3 Player

M307 is equipped with a high quality MP3 player for digital music files.

Go to **Media Center** > **MP3 Player** and the interface on the right side will show up. Or, users can simply press  to enter the media center menu.

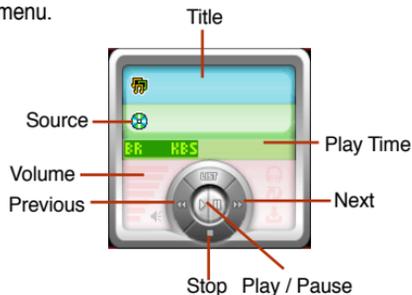

Playing MP3 Music

1. When users enter **Media Center > MP3 Player** for the first time, the player will automatically create a playlist "Playlist_All.m3u" and put all the music stored in "My Music" in the memory card to the list.
2. Press   for previous or next songs, and press  to show the current list or  to stop.
3. Press   to adjust the volume.
4. Or press  to activate the MP3 player when the phone is close.

In addition to the auto-generated playlist Playlist_All.m3u, users can use this function to create other playlists.

1. Go to **Media Center > MP3 Player** and press  to select **Playlist Manager**.
2. Press  to use the functions below.

Capture

1. Go to **Camera > Capture**; or press the left joystick key  and choose **Capture**; or press  button on the left side.

2. Preview in the screen and press  to capture.
3. If the picture is satisfactory, then press  to save it to my album and if not, press  to discard it.

Video Recorder

1. Go to **Camera > Video Recorder** and press  to start video taping.
2. After the recording stops, press  to save or press  to stop the recording and save it automatically. Press  to exit video recording. The file will be in the **My Video** folder.