


# Getting to know your phone

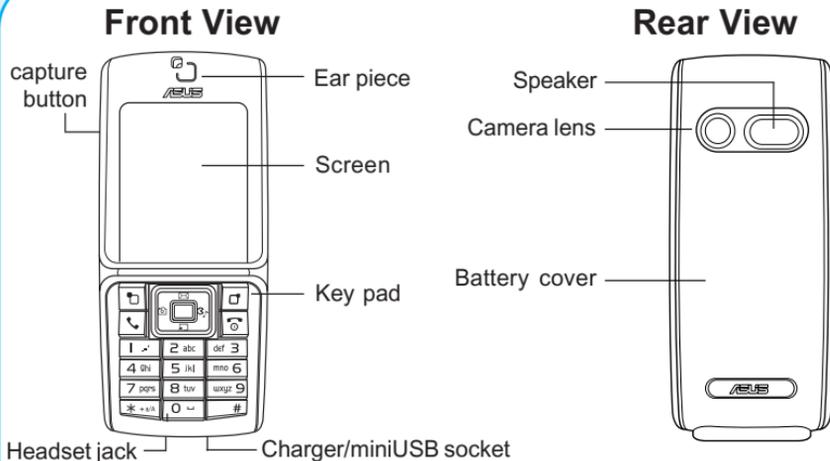

**Power/end button:** Press and hold to turn the phone on. Press to cancel or reject a call, or exit a menu.



**Call key:** Press to send or answer calls, and to dial the last number.



**Left soft key/Menu:** Press to select the function displayed at the bottom left of the screen, and to select Game mode.



**Right soft key/clear:** Press to select the function displayed at the bottom right of the screen and to exit when playing games.






**Joystick key:** Use to navigate around the menu system and press the center button to select a highlighted option.

# Installing SIM Card and Battery

## Installing a SIM card




- 1 Slide off the battery cover.
- 2 Insert the SIM card.
- 3 Close the SIM card retaining door.

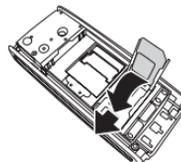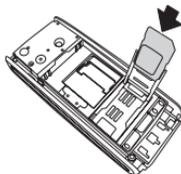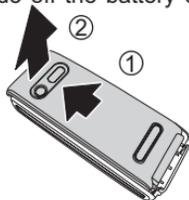

**Note:** The handset supports a miniSD card. Please refer to the user manual for more details. In some regions the mini SD card may be supplied as an optional accessory.

## Installing the battery

- 1 Slide off the battery cover.
- 2 Push it firmly into place.
- 3 Slide the battery cover back on.

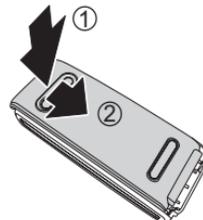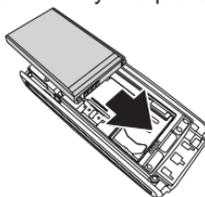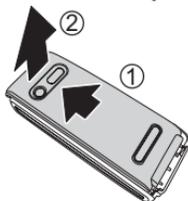

**Note:** Make sure to put the pins into the bottom case first then slide down to close it.

## Charging the battery

1. Connect the charger to a wall outlet.
2. Connect the charger to the miniUSB socket on the bottom of the phone.

**Note:** For best battery performance, allow the battery to charge and discharge completely the first few times you use it.



# The Main Menu

The main menu screen is where you can access all the features and submenus of your cell phone. In standby mode, use the left soft key  to enter the main menu, use the joystick key to scroll through the choices, and use the left soft key or the center joystick key to select the highlighted option.



**Network:** Enables you to specify the WAP and data settings and set up GSM and GPRS settings. Enables access to the internet and to STK SIM card services.



**Messages:** Gives you access to messages received. Compose and send text (SMS) and multimedia (MMS) messages here. You can also check e-mail, chat, and broadcast a message using this menu.



**Manner:** Enables you to select and customize the phone settings including the ring tone, volume, ring type, and answer mode.



**Camera:** Enables you to take pictures as well as record video with your phone. You can also access all your pictures and videos from this menu item.



**Calls:** Stores information about calls made, received, and missed.



**Settings:** Lets you adjust phone settings such as call settings, themes, shortcuts, network settings, and security settings. You can also restore all settings to their factory default from this menu.



**Phonebook:** Enables you to manage names and telephone numbers for easy access and caller recognition.



**Media Center:** Consists of an audio player, FM radio, games, and a melody composer.



**Organizer:** Contains useful tools such as an alarm, a calendar for scheduling appointments, a to do list, and a simple calculator. You can also record memos, edit simple images, manage all your data using a file manager, or convert units or currency

# Getting started

## Turning on for the first time


To turn the phone on, press and hold the power button .

A welcome screen is displayed for a few seconds and the phone searches for a network before going into standby mode.

## Standby mode

When the phone is turned on but you are not making or receiving a call or using any of the functions, the standby screen is displayed.

See your user manual for details of all the standby screen icons.

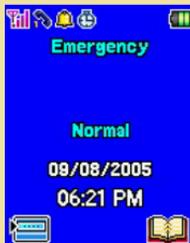

## Locking and unlocking the keypad

To prevent accidental pressing of the keys on the keypad. Your phone is equipped with a keypad lock facility.

The keypad locks automatically after a period of inactivity. To unlock the keypad, press the right soft key  and then the # key.

See your user manual for more details about how to use the keypad lock.

# Making and receiving calls

## Making a call

Enter the number you want to call using the numeric key pad.

**To delete a number** you entered by mistake, press the clear key .

**To connect your call**, press the call key .

**To end your call**, press the power/end key .

### To make an International call:

1. Enter + by holding down the \* key.
2. Enter the telephone number.

### To make a call from phonebook:

1. In standby mode, press the right soft key  to open the phonebook.
2. Select a contact from the list using the joystick.
3. Press the call key  to connect the call.

### To make a call from call logs:

1. In standby mode, press the call key  to load the call logs.
2. Select a phone number or contact entry.
3. Press the call key  to connect the call.

## Receiving a call

1. When the phone rings, press the send/answer key  to answer the call.
2. Press the power/end key  to reject or end the call.

## Volume

To adjust the volume during a call, use the volume key on the side of the phone to increase and decrease the volume.



# Common settings

## To set the date and time

Use the Date/Time menu to set the time, date, time zone and date format. The Date/Time menu can be accessed from the **Settings** menu:

**Settings > Phone Settings > Date/Time**

## To set the menu language

The menus can be displayed in several different languages. Change the language setting in **Settings** menu:

**Settings > Phone Settings > Language**

## To set the manner

You may use the Manner setting to set how your phone sounds and acts. To set a manner, enter the Manner menu and select the Manner by pressing the center joystick. You can also customize each manner setting by selecting:

**Manner > Options > Personalize**

## To set the ringtone

To change a ringtone you must personalize the manner that you are using. For instance, if you are using the **Normal** manner, you must change the ringtone in **Normal** manner.

Personalize the current manner using the **Manner** menu.

**Manner > Options > Personalize > Tone Settings**

# SMS and MMS messages

## To compose text messages (SMS)

You can use your phone to send SMS text messages.

To Compose a text message, select New SMS from the Messages menu.

**Messages > SMS > Write Message**

Enter text using the alphanumeric keypad.

To choose the text input method, select **Option > Input Method** and choose from the list. See your manual for more details.

## To compose multimedia messages (MMS)

To Compose an MMS message, select Edit MMS from the Messages menu.

**Messages > MMS > Edit MMS**

See the User Manual for more details on how to add text, pictures and sounds to your MMS.

## Sending your message

When your message is complete:

1. Select: **Option>Done**
2. For SMS messages, enter a phone number, or select one from the phonebook
3. For MMS messages, enter a phone number or e-mail address in the appropriate field or use the **Edit** menu. You can also enter a subject line.

# Using the camera, MP3 player and FM radio

## Taking a picture or video

1. To take a picture or video, select **Camera** from the main menu or using the left joystick key in standby mode.
2. Press the Capture button to take the picture or start/stop recording video. The picture will appear on the screen.
3. Select **Save** to save the photo in your album. You can adjust camera settings by selecting **Option** when the camera is activated. See your user manual for more details.

## Listening to MP3s

1. Select **Media Center > Audio Player**. The audio player opens.
2. Press the left soft key  to select **List** and display a list of available digital music files.
3. Highlight a music file to play and press the enter key to select it.
4. The enter key and the up, down, right, left joystick keys act as play controls. When you push a key, the corresponding on-screen symbol lights up.

**Note:** Select **List > Option > Settings** to choose the place to load list

## Listening to the radio

To start the radio:

1. From the main menu, select **FM Radio** from the **Media Center** menu. The FM radio opens.
2. To tune the radio, use the left and right joystick keys.
3. To control the volume, use the volume key on the side of the phone.
4. To turn the radio on and off, use the down joystick key.
5. To search for stations, use the up joystick key.

**Note:** You must plug in the earphones and press the button on the microphone module for the FM radio to work.