



Getting to know your phone

Front view (flip open)

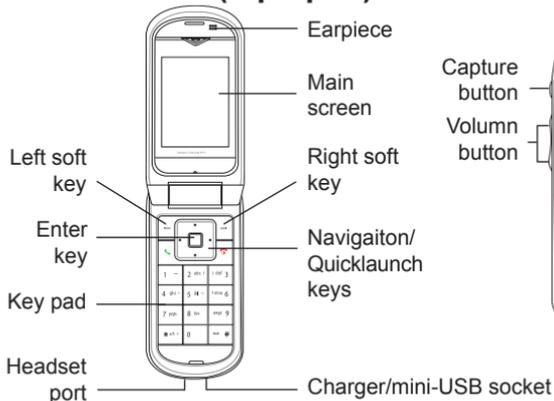

Front view

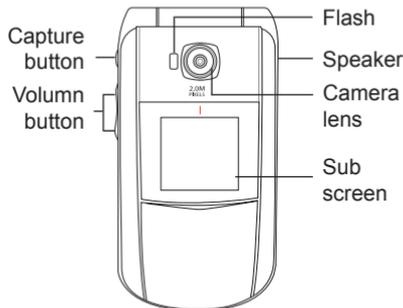

Power/end key: Hold to turn the phone on/off. Press to cancel or reject a call, erase the screen texts, or return to the standby mode.



Call key: Press to dial/ answer calls, and to redial the last number. Press to display call logs.



Left soft key: Press to display the main menu when on standby mode, to confirm selection of a menu item, and to perform the function displayed at the bottom left of the screen.



Right soft key/clear: Press to view contacts when on standby mode. Press

to perform the function displayed on the bottom right corner of the screen. Long-press to launch voice command on standby mode. Press to enable the loudspeaker when dialing a call.



Up/Down/Left Right navigation/ quicklaunch key: Press to scroll through menu items, or to enter Unified Inbox/Shortcut List/Camera/Media Center menu.



Enter key: Press to display the main menu when on standby mode, or to confirm selection of an item.

Installing the SIM card and battery

1. Slide off the battery cover.



2. Insert the SIM card and slide it into the holder with the correct orientation.



3. Insert the microSD™ card (optional) and slide it into the holder with the correct orientation.



NOTE: The handset supports a microSD™ card. Refer to the user manual for more details. In some regions the miniSD™ card may be supplied as an optional accessory.

4. Place the battery into the battery compartment and snaps it.



5. Replace the battery cover.



Charging the battery

1. Connect the charger plug to a power outlet.
2. Connect the charger to the socket at the bottom of the phone.
The connector can only be inserted one way.

NOTE:

- For best battery performance, allow the battery to charge and discharge completely the first few times you use it.
- You can also charge the battery by connecting the phone to a computer using the supplied USB cable.



The Main Menu

The main menu screen is where you can access all the features and submenus of your cell phone. In standby mode, use the left soft key  to enter the main menu, use the navigation keys to scroll through the choices, and press the left soft key  or the enter key to select the highlighted option.



Network: Enables you to specify the WAP and data settings and set up GSM and GPRS settings. Enables access to the internet and STK SIM card services.



Messages: Allows you to access, write, send, receive, and organize text (SMS), multimedia (MMS), and email messages. You can also check email, chat, and broadcast a message using this menu.



Profiles: Enables you to select and customize the phone settings including the ring tone, volume, ring type, and answer mode.



Settings: Lets you adjust phone settings, display settings, tone settings, call settings, network settings, bluetooth settings, and security settings. You can also restore all settings to their factory default from this menu.



Camera: Enables you to take pictures as well as record video with your phone. You can access and organize all your pictures and videos. You can also edit images from this menu.



Media Center: Consists of an audio player, FM radio, and games. You can manage all your data using a file manager.



Organizer: Contains useful tools such as an alarm, a calendar for scheduling appointments, a to-do-list, a stopwatch, a countdown function, and a calculator. You can also record memos and radio programs, enable a language-learning tool, convert units or currency, and manage your health.



Contacts: Enables you to manage names and telephone numbers for easy access and caller recognition.



Calls: Stores information about calls made, received, and missed. You can also track call costs, SMS sent and received, and GPRS usage from this menu.

Getting started

Turning on for the first time

To turn the phone on:

- Flip open the phone.
- Press and hold the power/end key .

A welcome screen is displayed for a few seconds and the phone searches for a network before going into standby mode.

Standby mode

When the phone is turned on but you are not making or receiving a call or using any of the functions, the standby screen is displayed.

See your user manual for details of all the standby screen icons.

Locking and unlocking the keypad

To prevent accidental touching of the keypad, press the right soft key  and the # key successively to lock the keypad. A key lock icon  appears on top of the standby screen to indicate the lock status. To unlock the keypad, repeat the same process.

Making and receiving calls

Making a call

Enter the number you want to call using the numeric keypad.

To delete a number you entered by mistake, press the clear key .

To connect your call, press the call key .

To end your call, press the power/end key .

To make an international call:

1. Enter + by holding down the * key.
2. Enter the telephone number.

To make a call from phonebook:

1. In standby mode, press the right soft key  to open the phonebook.
2. Select a contact from the list using the up/down navigation key.
3. Press the call key  to connect the call.

To make a call from call logs:


1. In standby mode, press the call key  to load the call logs.
2. Select a phone number or contact entry.
3. Press the call key  to connect the call.

Receiving a call

1. When the phone rings, press the call key  to answer the call.
2. Press the power/end key  to reject or end the call.

Volume

To adjust the volume during a call, use the volume key on the left side of the phone to increase and decrease the volume.

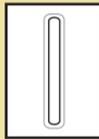

Common settings

To set the date and time

Use the Date/Time menu to set the time, date, time zone and date format. The Date/Time menu can be accessed from the **Settings** menu:

[Settings > Phone Settings > Date/Time](#)

To set the menu language

The menus can be displayed in several different languages. Change the language setting in **Settings** menu:

[Settings > Phone Settings > Language](#)

To set the profile

You may use the Profiles menu to set how your phone sounds and acts. To set a profile, enter the **Profiles** menu and select the profile by pressing the enter key. You can also customize each profile setting by selecting:

[Profiles > Options > Personalize](#)

To set the ringtone

To change a ringtone you must personalize the profile that you are using. For instance, if you are using the **Normal** profile, you must change the ringtone in **Normal** profile.

Personalize the current profile using the **Profiles** menu.

[Profiles > Options > Personalize > Tone Settings](#)

SMS and MMS messages

To compose text messages (SMS)

You can use your phone to send SMS text messages.

To Compose a text message: From the Message menu, select

Messages > SMS > Write Message

Enter text using the alphanumeric keypad.

To choose the text input method, select

Options > Input Method

and choose from the list. See your manual for more details.

To compose multimedia messages (MMS)

To Compose an MMS message, select Edit MMS from the Messages menu.

Messages > MMS > Edit MMS

See the User Manual for more details on how to add text, image, and audio to your MMS.

Sending your message

When your message is complete:

1. Select:
Options > Send
2. For SMS messages, enter a phone number, or select one from the phonebook.
3. For MMS messages, enter a phone number or e-mail address in the appropriate field or use the **Edit** menu. You can also enter a subject line.

Using the camera, MP3 player, and FM radio

Taking a picture or video

1. To take a picture or video, select **Camera > Capture** from the main menu or use the capture button on the left side of the handset.
2. Press the capture button to take the picture or start/stop recording video. The picture will appear on the screen.

3. Select **Save** to save the photo in your album.

You can adjust camera settings by selecting **Options** when the camera is activated. See your user manual for more details.

Listening to MP3s

1. From the main menu, select **Media Center > Audio Player**. The audio player opens.
2. Press the up navigation key to select **Current Playlist** and display a list of available digital music files.

NOTE: Select **Options > Settings** to choose the location of the file to play.

3. Highlight a music file to play and select **Play**.
4. The enter key and the up, down, right, left navigation keys act as play controls. When you press a key, the corresponding onscreen symbol lights up. Refer to the user manual for the key assignments.

NOTE: Make sure to add mp3 files to "Music" folder first.

Listening to FM radio

1. From the main menu, select **Media Center > FM Radio**. The FM radio opens.

NOTE: Make sure to plug an earphone to the earphone socket on the bottom of the phone to listen to the radio.

2. Press the left/right navigation key to jump to the channel set. Hold the left/right navigation key to automatically search for channels.
3. You can adjust radio settings by selecting **Options** when the FM radio is activated. See your user manual for more details.