



Getting to know your phone

Front view

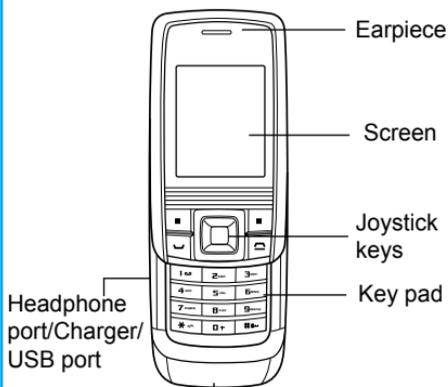

Rear view

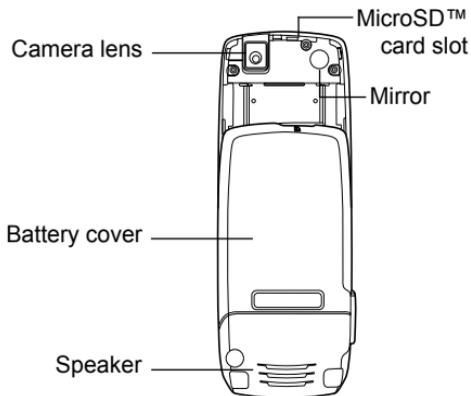

Power/end button: Hold to turn the phone on/off. Press to cancel or reject a call, or exit a menu/submenu.



Call/OK key: Press to dial/ answer calls, and to redial the last number. Hold to display call logs. Press to confirm selection of a menu item.



Left soft key: Press to display the menu when the phone is in standby mode, to confirm selection of a menu item, and to select the function displayed at the bottom left of the screen.



Right soft key/clear: Press to view the phonebook when the phone is in standby mode. Press to select the function displayed on the bottom right corner of the screen.



Joisticks: Press to navigate the menu or to enter the highlighted function.

Installing the SIM card and battery

1. Slide off the back cover.



2. Pull the protruding film on top of the battery, then remove the battery.



3. Insert the SIM card into the slot.



NOTE: The handset supports a microSD™ card. Refer to the user manual for more details. In some regions the miniSD™ card may be supplied as an optional accessory.

4. Install the microSD™ card (optional) into the slot.



5. Reinstall the battery.




6. Replace the back cover.



Charging the battery

1. Connect the charger plug to a power outlet.
2. Connect the charger to the socket at the side of the phone. The connector can only be inserted one way.

NOTE: For best battery performance, allow the battery to charge and discharge completely the first few times you use it.

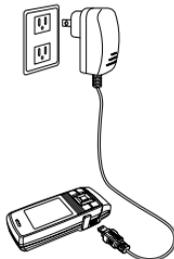

The Main Menu

The main menu screen is where you can access all the features and submenus of your cell phone. In standby mode, use the Enter key (center joystick) to enter the main menu, use the joystick key to scroll through the choices, and use the Enter key to select the highlighted option.



Services: Enables you to specify the WAP and data settings and set up GSM and GPRS settings. Enables access to the internet and STK SIM card services.



Messages: Enables you to check, compose and send SMS, MMS, and email messages; also, enables you to chat and broadcast messages.



Profiles: Enables you to select and customize the phone settings including the ring tone, volume, ring type, and answer mode.



Media Center: Consists of an audio player, video player, camera, FM radio, and a melody composer.



Call History : Stores information about calls made, received, and missed. You can also track call costs, SMS sent and received, and GPRS usage from this menu.



Organizer: Contains useful tools such as Alarm, Calendar, To Do List, and World Clock.



Settings: Lets you set up the phone, display, ringtones, call, network, security and also restore to the factory default settings.



Phonebook: Enables you to manage names and telephone numbers for easy access and caller recognition.



Fun & Game: Contains several interesting games.



Shortcuts: Enables you to create up to ten shortcuts which access specific features directly.



File Manager: Enables you to view and manage files stored on your phone.



Extra: Contains useful tools, including Bluetooth, Calculator, Unit Converter, and Currency Converter.

Getting started

Turning on for the first time

To turn the phone on, press and hold the power button .

A welcome screen is displayed for a few seconds and the phone searches for a network before going into standby mode.

Standby mode

When the phone is turned on but you are not making or receiving a call or using any of the functions, the standby screen is displayed.

See your user manual for details of all the standby screen icons.

Unlocking the Keypad and Slide

To unlock the keypad,

1. In the standby mode, select **Unlock** by pressing the Right Soft key .
2. Press the Left Soft key as prompted on the screen. The keypad and the slide is unlocked.
3. You can also long press # to lock or unlock the keypad and the slide.

Making and receiving calls

Making a call

Enter the number you want to call using the numeric key pad.

To delete a number you entered by mistake, press the clear key .

To connect your call, press the call key .

To end your call, press the power/end key .

To make an international call:

1. Enter + by holding down the 0 key.
2. Enter the telephone number.

To make a call from phonebook:

1. In standby mode, press the right soft key  to open the phonebook.
2. Select a contact from the list using the joystick.
3. Press the call key  to connect the call.

To make a call from call logs:

1. In standby mode, press the call key  to load the call logs.
2. Select a phone number or contact entry.
3. Press the call key  to connect the call.

Receiving a call

1. When the phone rings, press the send/answer key  to answer the call.
2. Press the power/end key  to reject or end the call.

Call Logs

Press  in the standby mode to view missed, dialed, answered call histories and the information of the calls.

Common settings

To set the date and time

Use the Time and Date menu to set the time, date, time zone and date format. The Time and Date menu can be accessed from the **Settings** menu:

[Settings > Phone Setup > Time and Date](#)

To set the menu language

The menus can be displayed in several different languages. Change the language setting in **Settings** menu:

[Settings > Phone Setup > Language](#)

To set the profile

You may use the User Profiles menu to set how your phone sounds and acts. To set a profile, enter the User Profiles menu and select **Option > Activate**. You can also customize each profile setting by selecting:

[Profiles > Option > Customize](#)

To set the ringtone

To change a ringtone you must personalize the profile that you are using. For instance, if you are using the **Normal** profile, you must change the ringtone in **Normal** profile.

Personalize the current profile using the **User Profiles** menu.

[User Profiles > Option > Customize > Tone Setup](#)

SMS and MMS messages

To compose text messages (SMS)

You can use your phone to send SMS text messages.

To Compose a text message: From the Message menu, select

Messages > SMS > Write Message

Enter text using the alphanumeric keypad.

To choose the text input method, select

Option > Input Method

and choose from the list. See the User Manual for more details.

To compose multimedia messages (MMS)

To Compose an MMS message: From the Message menu, select

Messages > MMS > Write Message

See the User Manual for more details on how to add text, image, and audio to your MMS.

Sending your message

When your message is complete:

1. Select:
Option > Done
2. For SMS messages, enter a phone number, or select one from the phonebook.
3. For MMS messages, press Edit to enter a phone number or e-mail address in the appropriate field. You can also enter a subject line.

Using the camera, MP3 player and FM radio

Taking a picture or video

1. To take a picture or video, select **Multimedia > Camera** from the main menu or press the down joystick key while in the standby mode.
2. Press the Capture button to take the picture or start/stop recording video. The picture will appear on the screen.

3. Select **Save** to save the photo in your album.

The capture button is the center joystick key.

You can adjust camera settings by selecting **Option** when the camera is activated. See your user manual for more details.

Listening to MP3s

1. From the main menu, select **Multimedia > Audio Player**. The audio player opens.
2. Press the Left Soft key  to select **List** and display a list of available digital music files.

3. Highlight a music file to play and press OK to select it.
4. The up, down, right, left joystick keys act as play controls. When you push a key, the corresponding onscreen symbol lights up. Refer to the user manual for the key assignments.

NOTE: Make sure to add mp3 files to "My Music" folder first.

Listening to FM Radio

1. Plug the earphone supplied to the earphone socket and select **Multimedia > FM Radio** from the main menu. The FM radio is activated.

NOTE: Make sure to plug the earphone to the earphone socket on the left side of the phone before you listen to FM radio.

2. Press the up/down joystick keys to search channels. Hold the up/down joystick keys to automatically search channels.
3. You can adjust related settings by selecting **Option** when the FM Radio is activated. See your user manual for more details.