


ASUS® LCD-I Controller Module

The ASUS LCD-I controller module allows you to connect a digital flat panel to your PC. This controller module transmits sharp, bright images by eliminating digital-to-analog and analog-to-digital conversions, which can accumulate noise and degrade image quality.

Installation Procedure

1. You must have an ASUS motherboard with a pair of LCD-TV headers.
2. Align the LCD-I module's **LCDTV0** and **LCDTV1** connectors over the motherboard's LCD-TV headers, and press firmly.
3. Connect the digital LCD cable from the LCD and serial combination bracket to the **DFP** connector on the LCD-I module.
4. Secure the bracket to the system chassis with a screw.
5. Plug the signal cable of your digital flat panel into the DFP connector on the bracket (as shown below).

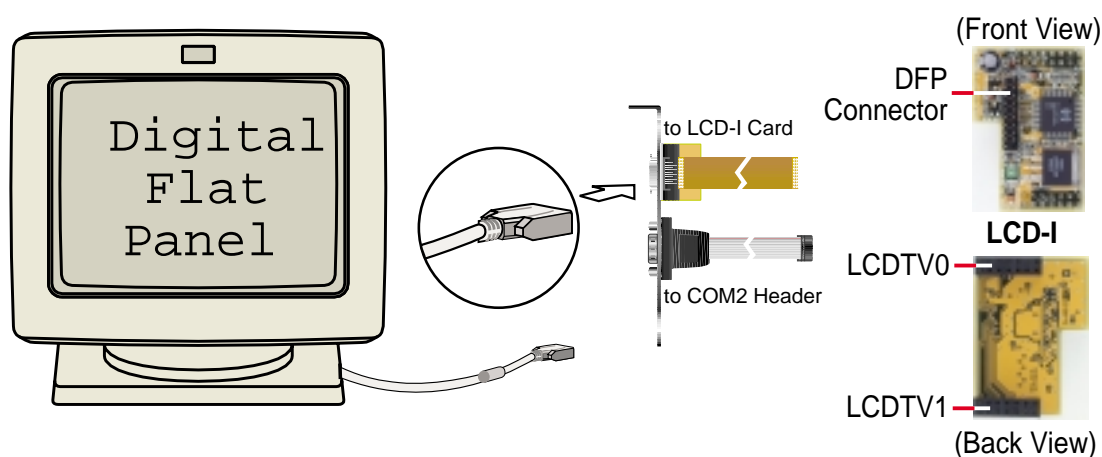

Using the LCD-I Controller Module

NOTE: The LCD-I controller module can work with your LCD panel without any driver. However, if you want to have full-screen display, please set up the VGA driver that comes with your motherboard's support CD.