 


Instant Fun

There are two methods to enter Instant Fun:

- While the Notebook PC is turned OFF, press the Instant ON key.
- While the Notebook PC is booting, press the F3 key.

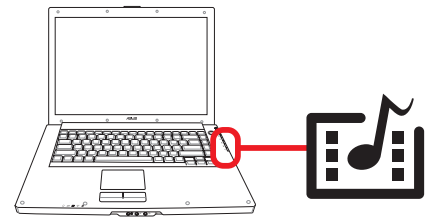

Instant Fun application will launch without entering Windows. Instant Fun allows you to view DVDs, VCDs, videos, photos, or television programs; or listen to music CDs or files.

 
Note: When the Notebook PC is ON and running Windows, pressing the Instant ON button will launch the Mobile Theater application provided with this Notebook PC.




Select the mode using the left/right cursor keys and press Enter.
(Press "Home" key on the keyboard to return to this menu)

Remote control definitions

Card-Sized Wireless Remote Controller

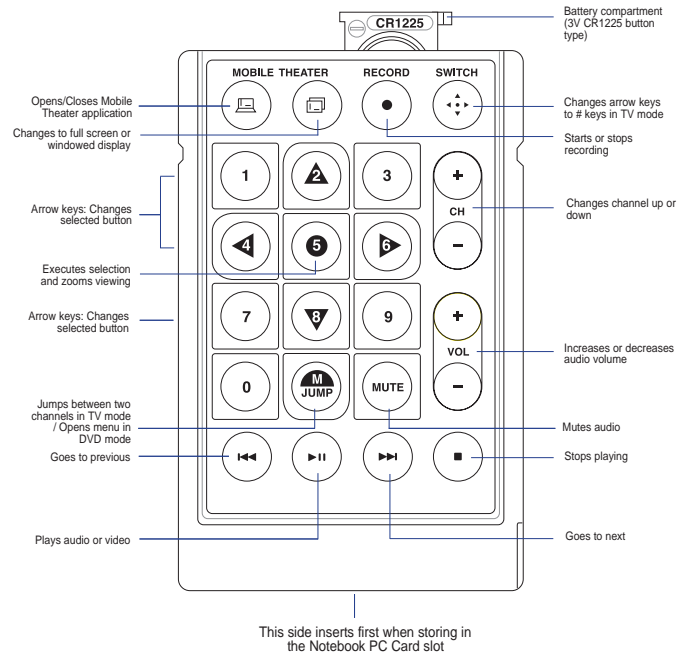

Large Wireless Remote Controller

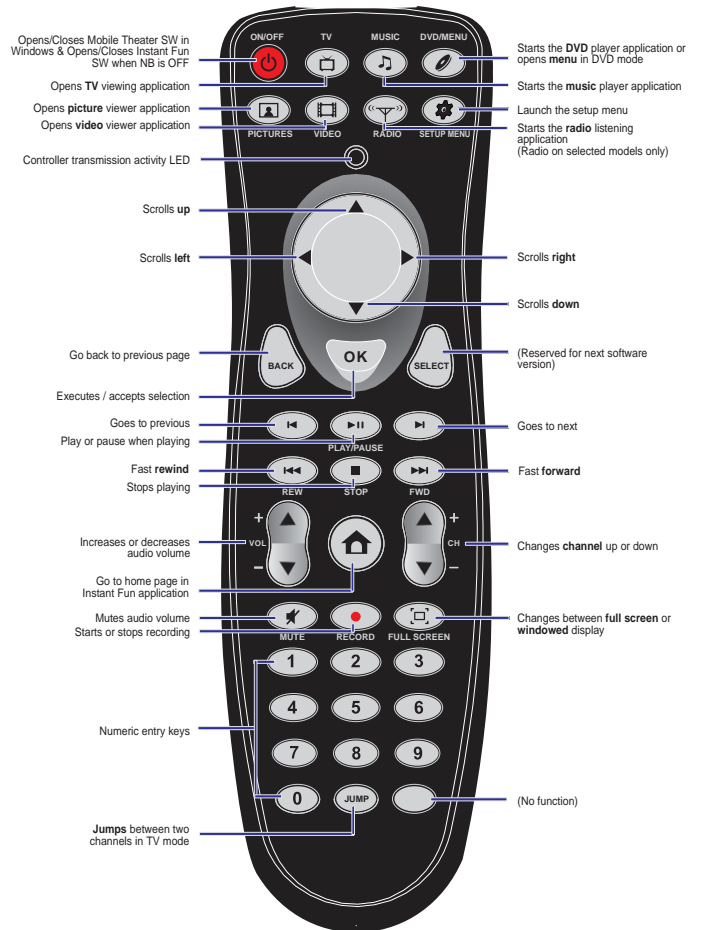 

DVD player keyboard controls

Ctrl D	Go to DVD mode
M	Mute (silence)
Shift ↑	Increase volume
Shift ↓	Decrease volume
Space	Play movie or pause play
End	Stop playing
E	Open disc tray

0-9	Select chapter
Enter	Select
F/R	Forward or Backward
PgUp	Go to next chapter
PgDn	Go to previous chapter
Shift-T	Go to DVD title menu
T	Go to DVD root menu
O	Enable/disable setup menu