 


## Instant Fun

There are two methods to enter Instant Fun:

- While the Notebook PC is turned OFF, press the Instant ON key.
- While the Notebook PC is booting, press the [F3] key.

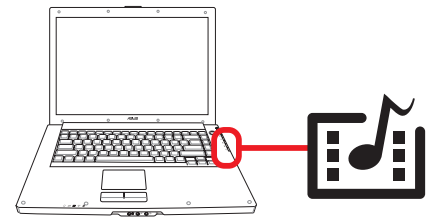

Instant Fun application will launch without entering Windows. Instant Fun allows you to view DVDs, VCDs, videos, photos, or television programs; or listen to music CDs or files.

---

**Note: When the Notebook PC is ON and running Windows, pressing the Instant ON button will launch the Mobile Theater application provided with this Notebook PC.**

---

The image shows the ASUS Instant Fun interface. At the top left is the ASUS logo. The main text reads "Instant Fun" and "One Touch Entertainment". Below this is a 3D rendering of a DVD player with a disc in its tray. At the bottom, there is a horizontal menu with six icons: DVD (a disc tray), TV (a television), PHOTO (a camera lens), VIDEO (a video camera), MUSIC (a CD player), and RADIO (headphones).

Select the mode (DVD, TV, Photo, Video, Music, Radio) using the left/right cursor keys to scroll through the icons.

Press [Enter] to enter the selected mode.


Press [Home] key on the keyboard to return to this menu.

## Keyboard control definitions


| Item          | Mode                    | Usage                                | Keyboard              |
|---------------|-------------------------|--------------------------------------|-----------------------|
| Power Key     | (All)                   | Turn OFF InstantON                   | [NB power switch]     |
| InstantOn Key | (All)                   | Turn ON InstantON                    | [NB instant key]      |
| Main Menu     | (All)                   | Back to Main Menu                    | [Home]                |
| DVD           | (All)                   | Switch to DVD mode                   | [Ctrl d]              |
| Music         | (All)                   | Switch to Music mode                 | [Ctrl m]              |
| Photo View    | (All)                   | Switch to Photo View                 | [Ctrl p]              |
| TV            | (All)                   | Switch to TV mode                    | [Ctrl t]              |
| Video         | (All)                   | Switch to Video mode                 | [Ctrl v]              |
| Radio         | (All)                   | Switch to Radio mode                 | [Ctrl r]              |
| Setup         | (All)                   | Show setup menu                      | [o]                   |
| Help          | (All)                   | Show help                            | [F1]                  |
| Play          | DVD, Music, Video       | Play selection                       | [Space bar]           |
| Stop          | DVD, Music, Video       | Stop selection                       | [End]                 |
| Pause         | DVD, Music, Video       | Pause selection                      | [Space bar]           |
| Eject         | (All, except Main menu) | Eject optical drive tray             | [e]                   |
| Root menu     | DVD                     | Back to Root menu                    | [t]                   |
| Title menu    | DVD                     | Back to Title menu                   | [Shift t]             |
| Fast forward  | DVD, Music, Video       | Fast forward selection               | [f]                   |
| Fast reverse  | DVD, Music, Video       | Fast reverse selection               | [r]                   |
| Next          | DVD, Music, Video       | Next selection                       | [Page Down]           |
| Previous      | DVD, Music, Video       | Previous selection                   | [Page Up]             |
| Channel +     | TV                      | Channel up selection                 | [Page Up]             |
| Channel -     | TV                      | Channel down selection               | [Page Down]           |
| Channel Scan  | TV                      | Smart Scan for TV                    | [Shift a]             |
| Back          | TV                      | (to previous ch. for TV)             | [!]                   |
| Volume +      | (All)                   | Volume up selection                  | [Shift ↑]             |
| Volume -      | (All)                   | Volume down selection                | [Shift ↓]             |
| Mute audio    | (All)                   | Turn volume audio down               | [m]                   |
| Ok/Select     | (All)                   | Select a menu item                   | [Enter]               |
| Arrows        | (All)                   | Change selection on menus            | [↑] [↓] [←] [→]       |
| Sub-title     | DVD                     | Switch DVD sub-title                 | [s]                   |
| Audio         | DVD                     | Switch DVD/TV audio                  | [a]                   |
| Angle         | DVD                     | Switch DVD angle                     | [g]                   |
| Page up       | Music, Photo, Video     | Jump to previous Playlist/thumbnaill | [b]                   |
| Page down     | Music, Photo, Video     | Jump to next Playlist/thumbnaill     | [n]                   |
| Numeric keys  | DVD, TV, Radio          | Enter number selection               | [0 1 2 3 4 5 6 7 8 9] |
| Repeat all    | Music, Photo            | Repeat all songs/photos              | [Shift r]             |
| Shuffle       | Music                   | Shuffle all songs                    | [Shift s]             |

# Remote control definitions

## Card-Sized Wireless Remote Controller

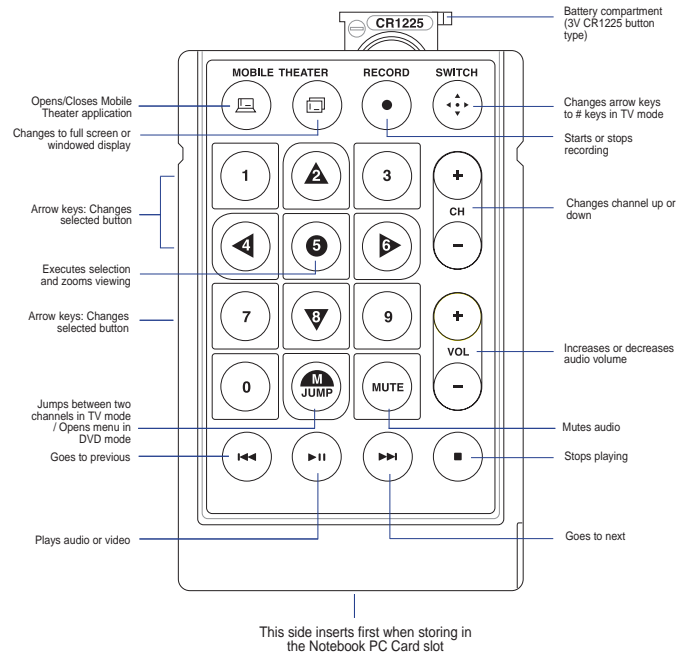

## Large Wireless Remote Controller

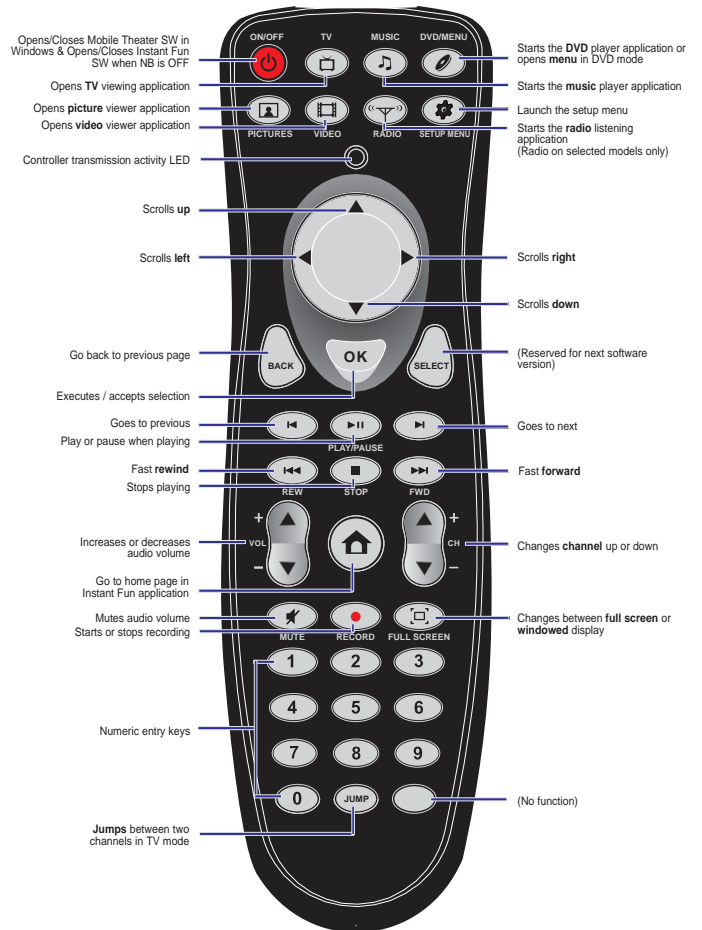

This image shows a blank sheet of white paper with horizontal ruling lines. The lines are evenly spaced and extend across the width of the page. The paper is framed by a thin, dark border. There are no markings, text, or other content on the page.