



***MegaRAID SCSI 320-2
Hardware Guide***

MAN-518
8/16/02

© Copyright 2002 LSI Logic Corporation
All rights reserved.
LSI Logic Corporation
6145-D Northbelt Parkway
Norcross, GA 30071

This publication contains proprietary information which is protected by copyright. No part of this publication can be reproduced, transcribed, stored in a retrieval system, translated into any language or computer language, or transmitted in any form whatsoever without the prior written consent of the publisher, LSI Logic LSI Logic acknowledges the following trademarks:

Intel is a registered trademark of Intel Corporation.

Sytos Plus is a registered trademark of Sytron Corporation.

MS-DOS, and Microsoft are registered trademarks of Microsoft Corporation. Windows 95, Microsoft Windows and Windows NT are trademarks of Microsoft Corporation.

SCO, UnixWare, and Unix are registered trademarks of the Santa Cruz Operation. Inc.

Novell NetWare is a registered trademark of Novell Corporation.

IBM, AT, VGA, PS/2, and OS/2 are registered trademarks and XT and CGA are trademarks of International Business Machines Corporation.

Revision History

08/16/02 Initial release.

Table of Contents

Chapter 1.....	1
Overview.....	1
<i>SCSI Channels.....</i>	<i>1</i>
<i>NVRAM and Flash ROM.....</i>	<i>1</i>
<i>SCSI Connectors.....</i>	<i>1</i>
<i>Single-Ended and Differential SCSI Buses.....</i>	<i>1</i>
<i>Maximum Cable Length for SCSI Standards.....</i>	<i>2</i>
<i>Maximum Cable Length for Ultra320.....</i>	<i>2</i>
<i>SCSI Bus Widths and Maximum Throughput.....</i>	<i>2</i>
<i>Documentation Set.....</i>	<i>3</i>
<i>Using the MegaRAID SCSI 320-2 Manuals.....</i>	<i>3</i>
<i>MegaRAID Configuration Software Guide.....</i>	<i>3</i>
<i>MegaRAID Operating System Driver Installation Guide.....</i>	<i>3</i>
Chapter 2.....	5
Introduction to RAID.....	5
<i>RAID Overview.....</i>	<i>5</i>
<i>RAID Levels.....</i>	<i>5</i>
<i>Consistency Check.....</i>	<i>6</i>
<i>Fault Tolerance.....</i>	<i>6</i>
<i>Disk Mirroring.....</i>	<i>6</i>
<i>Disk Striping.....</i>	<i>7</i>
<i>Disk Spanning.....</i>	<i>8</i>
<i>Spanning for RAID 10 or RAID 50.....</i>	<i>8</i>
<i>Parity.....</i>	<i>9</i>
<i>Hot Spares.....</i>	<i>9</i>
<i>Disk Rebuild.....</i>	<i>10</i>
<i>Rebuild Rate.....</i>	<i>10</i>
<i>Physical Array.....</i>	<i>10</i>
<i>Logical Drive.....</i>	<i>10</i>
<i>Hot Swap.....</i>	<i>10</i>
<i>SCSI Drive States.....</i>	<i>11</i>
Logical Drive States.....	11
<i>Disk Array Types.....</i>	<i>11</i>
<i>Enclosure Management.....</i>	<i>12</i>
Chapter 3.....	13
RAID Levels.....	13
<i>Selecting a RAID Level.....</i>	<i>13</i>
<i>RAID 0.....</i>	<i>14</i>
<i>RAID 1.....</i>	<i>15</i>
<i>RAID 5.....</i>	<i>16</i>
<i>RAID 10.....</i>	<i>17</i>
<i>RAID 50.....</i>	<i>18</i>

Chapter 4.....	19
Features	19
<i>Features.....</i>	19
<i>SMART Technology.....</i>	20
<i>Configuration on Disk.....</i>	20
<i>Hardware Requirements.....</i>	20
<i>Configuration Features.....</i>	21
<i>Array Performance Features.....</i>	22
<i>RAID Management Features.....</i>	22
<i>Fault Tolerance Features.....</i>	22
<i>Software Utilities.....</i>	23
Operating System Software Drivers.....	23
<i>Operating System Drivers.....</i>	23
<i>MegaRAID Specifications.....</i>	23
Components	25
CPU	25
Cache Memory.....	25
MegaRAID BIOS	25
Onboard Speaker	25
Serial Port.....	25
SCSI Bus.....	25
SCSI Connectors.....	26
SCSI Termination.....	26
SCSI Firmware	26
RAID Management.....	26
MegaRAID Configuration Utility.....	27
WebBIOS Configuration Utility.....	27
Power Console Plus.....	27
MegaRAID Manager.....	27
Fault-Tolerance.....	27
Detect Failed Drive	27
Hot Swap.....	27
Compatibility.....	27
Server Management.....	28
SCSI Device Compatibility.....	28
Software.....	28
Clustering Support.....	28
Summary.....	28
Chapter 5.....	29
Configuring MegaRAID	29
Configuring SCSI Physical Drives.....	29
<i>SCSI Channels.....</i>	29
<i>Distributing Drives.....</i>	29
<i>Basic Configuration Rules</i>	29
<i>Logical Drive Configuration.....</i>	31
<i>Physical Device Layout.....</i>	32
<i>Configuring Arrays</i>	34
<i>Arranging Arrays.....</i>	34
<i>Creating Hot Spares.....</i>	35
<i>Creating Logical Drives</i>	35
<i>Configuration Strategies</i>	35
<i>Maximize Capacity.....</i>	35
<i>Maximize Drive Availability</i>	36
<i>Maximizing Drive Performance</i>	36
<i>Assigning RAID Levels.....</i>	36

<i>Configuring Logical Drives</i>	37
<i>Optimizing Data Storage</i>	38
Array Configuration Planner.....	39
<i>Using the Array Configuration Planner</i>	39
Chapter 6	41
Hardware Installation	41
<i>Requirements</i>	41
<i>Optional Equipment</i>	41
<i>Checklist</i>	42
<i>Installation Steps</i>	43
<i>Installation Steps</i>	43
<i>Step 1 Unpack</i>	43
<i>Step 2 Power Down</i>	44
<i>Step 3 Configure Motherboard</i>	44
<i>Step 4 Install Cache Memory</i>	44
<i>Step 5 Set Jumpers</i>	46
<i>MegaRAID SCSI 320-2 Ultra320 Card Layout</i>	47
<i>Step 6 Set Termination</i>	49
<i>Step 7 Set SCSI Terminator Power</i>	54
<i>Step 8 Connect Battery Pack (Optional)</i>	55
<i>Step 9 Install MegaRAID Card</i>	58
<i>Step 10 Connect SCSI Cables</i>	60
<i>Step 11 Set Target IDs</i>	61
<i>Device Identification on MegaRAID Controllers</i>	62
<i>Step 12 Power Up</i>	63
<i>Step 13 Run MegaRAID Configuration Utility</i>	63
<i>Step 14 Install the Operating System Driver</i>	63
<i>Summary</i>	64
Chapter 7	65
Cluster Installation and Configuration	65
<i>Overview</i>	65
<i>The Benefits of Clusters</i>	65
<i>Installation and Configuration</i>	65
<i>Driver Installation Instructions under Microsoft Windows 2000 Advanced Server</i>	66
<i>Network Requirements</i>	68
<i>Shared Disk Requirements</i>	68
Cluster Installation.....	68
<i>Installation Overview</i>	68
<i>Installing the Windows 2000 Operating System</i>	69
<i>Setting Up Networks</i>	69
<i>Configuring the Cluster Node Network Adapter</i>	71
<i>Configuring the Public Network Adapter</i>	72
<i>Verifying Connectivity and Name Resolution</i>	72
<i>Verifying Domain Membership</i>	73
<i>Setting Up a Cluster User Account</i>	73
<i>Setting Up Shared Disks</i>	74
<i>Configuring Shared Disks</i>	75
<i>Assigning Drive Letters</i>	75
<i>Verifying Disk Access and Functionality</i>	76
<i>Cluster Service Software Installation</i>	76
<i>Configuring Cluster Disks</i>	80
<i>Validating the Cluster Installation</i>	86
<i>Configuring the Second Node</i>	86
<i>Verify Installation</i>	87

<i>SCSI Drive Installations</i>	88
<i>Configuring the SCSI Devices</i>	88
<i>Terminating the Shared SCSI Bus</i>	88
Chapter 8	89
Troubleshooting	89
<i>BIOS Boot Error Messages</i>	90
<i>Other BIOS Error Messages</i>	93
<i>Other Potential Problems</i>	94
Appendix A	97
SCSI Cables and Connectors	97
<i>SCSI Connectors</i>	97
<i>68-Pin High Density SCSI Internal Connectors</i>	97
<i>Cable Assembly for Internal Wide SCSI Devices</i>	98
<i>Connecting Internal and External Wide Devices</i>	99
<i>Converting Internal Wide to Internal Non-Wide (Type 2)</i>	100
<i>Converting Internal Wide to Internal Non-Wide (Type 30)</i>	101
<i>Converting from Internal Wide to Internal Non-Wide (Type 3)</i>	102
<i>SCSI Cable Vendors</i>	102
<i>SCSI Connector Vendors</i>	102
<i>68-Pin Connector Pinout for Single-Ended SCSI</i>	103
<i>High-Density Connector</i>	104
<i>68-Pin Connector Pinout for Low-Voltage Differential SCSI</i>	105
Appendix B	107
Audible Warnings	107
Glossary	109
Index	115

Preface

The MegaRAID SCSI 320-2 Ultra320 I2O PCI disk array controller supports two Ultra and Wide SCSI channels with data transfer rates up to 320 MB/s. This manual describes the MegaRAID SCSI 320-2 Ultra320 controller.

Limited Warranty

The buyer agrees if this product proves to be defective, that LSI Logic is obligated only to repair or replace this product at LSI Logic discretion according to the terms and conditions of the warranty registration card that accompanies this product. LSI Logic shall not be liable in tort or contract for any loss or damage, direct, incidental or consequential resulting from the use of this product. Please see the Warranty Registration Card shipped with this product for full warranty details.

Limitations of Liability

LSI Logic shall in no event be held liable for any loss, expenses, or damages of any kind whatsoever, whether direct, indirect, incidental, or consequential (whether arising from the design or use of this product or the support materials provided with the product). No action or proceeding against LSI Logic may be commenced more than two years after the delivery of product to Licensee of Licensed Software.

Licensee agrees to defend and indemnify LSI Logic from any and all claims, suits, and liabilities (including attorney's fees) arising out of or resulting from any actual or alleged act or omission on the part of Licensee, its authorized third parties, employees, or agents, in connection with the distribution of Licensed Software to end-users, including, without limitation, claims, suits, and liability for bodily or other injuries to end-users resulting from use of Licensee's product not caused solely by faults in Licensed Software as provided by LSI Logic to Licensee.

Package Contents

You should have received the following:

- a MegaRAID SCSI 320-2 Ultra320 RAID Controller
- a CD with drivers, utilities, and documentation
- the *MegaRAID SCSI 320-2 Hardware Guide* (on CD)
- the *MegaRAID Configuration Software Guide* (on CD)
- the *MegaRAID Operating System Driver Installation Guide* (on CD)
- software license agreement (on CD)
- warranty registration card

Technical Support

If you need help installing, configuring, or running the MegaRAID Controller, call LSI Logic technical support at 678-728-1250. Before you call, please complete the **MegaRAID Problem Report** form on the next page.

Web Site

We invite you to access the LSI Logic world wide web site at <http://www.lsilogic.com> or the MegaRAID support page at <http://megaraid.lsilogic.com>.

MegaRAID Problem Report Form

Fill out Table 1 to describe a problem with your MegaRAID card.

Table 1. MegaRAID Problem Report Form

Customer Information	MegaRAID Information
Name	Today's Date
Company	Date of Purchase
Address	Invoice Number
City/State	Serial Number
Country	Number of Channels
email address	Cache Memory
Phone	Firmware Version
Fax	BIOS Version
System Information	
Motherboard:	BIOS manufacturer:
Operating System:	BIOS Date:
Op. Sys. Ver.:	Video Adapter:
MegaRAID Driver Ver.:	CPU Type/Speed:
Network Card:	System Memory:
Other disk controllers installed:	Other adapter cards installed:
Description of problem:	
Steps necessary to re-create problem: 1. 2. 3. 4.	

Logical Drive Configuration

Use Table 2 to record the logical drive configuration.

Table 2. Logical Drive Configuration

Logical Drive	RAID Level	Stripe Size	Logical Drive Size	Cache Policy	Read Policy	Write Policy	# of Physical Drives
LD0							
LD1							
LD2							
LD3							
LD4							
LD5							
LD6							
LD7							
LD8							
LD9							
LD10							
LD11							
LD12							
LD13							
LD14							
LD15							
LD16							
LD17							
LD18							
LD19							
LD20							
LD21							
LD22							
LD23							
LD24							
LD25							
LD26							
LD27							
LD28							
LD29							
LD30							
LD31							
LD32							
LD33							
LD34							
LD35							
LD36							
LD37							
LD38							
LD39							

Physical Device Layout

Fill out Table 3 to record the physical device layout.

Table 3. Physical Device Layout

	Channel 0	Channel 1
Target ID		
Device type		
Logical drive number/ Drive number		
Manufacturer/Model number		
Firmware level		
Target ID		
Device type		
Logical drive number/ Drive number		
Manufacturer/Model number		
Firmware level		
Target ID		
Device type		
Logical drive number/ Drive number		
Manufacturer/Model number		
Firmware level		
Target ID		
Device type		
Logical drive number/ Drive number		
Manufacturer/Model number		
Firmware level		
Target ID		
Device type		
Logical drive number/ Drive number		
Manufacturer/Model number		
Firmware level		
Target ID		
Device type		
Logical drive number/ Drive number		
Manufacturer/Model number		
Firmware level		
Target ID		
Device type		
Logical drive number/ Drive number		
Manufacturer/Model number		
Firmware level		
Target ID		
Device type		
Logical drive number/ Drive number		
Manufacturer/Model number		
Firmware level		
Target ID		
Device type		
Logical drive number/ Drive number		
Manufacturer/Model number		
Firmware level		
Target ID		
Device type		
Logical drive number/ Drive number		
Manufacturer/Model number		
Firmware level		

	<i>Channel 0</i>	<i>Channel 1</i>
Firmware level		
Target ID		
Device type		
Logical drive number/ Drive number		
Manufacturer/Model number		
Firmware level		
Target ID		
Device type		
Logical drive number/ Drive number		
Manufacturer/Model number		
Firmware level		
Target ID		
Device type		
Logical drive number/ Drive number		
Manufacturer/Model number		
Firmware level		
Target ID		
Device type		
Logical drive number/ Drive number		
Manufacturer/Model number		
Firmware level		
Target ID		
Device type		
Logical drive number/ Drive number		
Manufacturer/Model number		
Firmware level		
Target ID		
Device type		
Logical drive number/ Drive number		
Manufacturer/Model number		
Firmware level		
Target ID		
Device type		
Logical drive number/ Drive number		
Manufacturer/Model number		
Firmware level		
Target ID		
Device type		

	<i>Channel 0</i>	<i>Channel 1</i>
Logical drive number/ Drive number		
Manufacturer/Model number		
Firmware level		
Target ID		
Device type		
Logical drive number/ Drive number		
Manufacturer/Model number		
Firmware level		
Target ID		
Device type		
Logical drive number/ Drive number		
Manufacturer/Model number		
Firmware level		

Disclaimer

This manual describes the operation of the LSI Logic MegaRAID Controller. Although efforts have been made to assure the accuracy of the information contained here, LSI Logic expressly disclaims liability for any error in this information, and for damages, whether direct, indirect, special, exemplary, consequential or otherwise, that may result from such error, including but not limited to the loss of profits resulting from the use or misuse of the manual or information contained therein (even if LSI Logic has been advised of the possibility of such damages). Any questions or comments regarding this document or its contents should be addressed to LSI Logic at the address shown on the cover.

LSI Logic provides this publication “as is” without warranty of any kind, either expressed or implied, including, but not limited to, the implied warranties of merchantability or fitness for a specific purpose.


Some states do not allow disclaimer of express or implied warranties or the limitation or exclusion of liability for indirect, special, exemplary, incidental or consequential damages in certain transactions; therefore, this statement may not apply to you. Also, you may have other rights which vary from jurisdiction to jurisdiction.

This publication could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. LSI Logic may make improvements and/or revisions in the product(s) and/or the program(s) described in this publication at any time.

Requests for technical information about LSI Logic products should be made to your LSI Logic authorized reseller or marketing representative.

FCC Regulatory Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

 **Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a specific installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, try to correct the interference by one or more of the following measures:

- 1) Reorient or relocate the receiving antenna.
- 2) Increase the separation between the equipment and the receiver.
- 3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- 4) Consult the dealer or an experienced radio/TV technician for help.

Shielded interface cables must be used with this product to ensure compliance with the Class B FCC limits. LSI Logic MegaRAID SCSI 320-2 Ultra320 PCI SCSI Disk Array Controller

Model Number: Series 518

FCC ID Number: IUESER518

Disclaimer

LSI Logic certifies only that this product will work correctly when this product is used with the same jumper settings, the same system configuration, the same memory module parts, and the same peripherals that were tested by LSI Logic with this product. The complete list of tested jumper settings, system configurations, peripheral devices, and memory modules are documented in the LSI Logic Compatibility Report for this product. Call your LSI Logic sales representative for a copy of the Compatibility Report for this product.

Chapter 1

Overview

The MegaRAID® SCSI 320-2 SCSI PCI RAID controller provides two SCSI channels. Throughput on each SCSI channel can be as high as 320 MB/s. MegaRAID supports a low-voltage differential SCSI bus or a single-ended SCSI bus.

MegaRAID SCSI 320-2 is a high-performance intelligent PCI-to-SCSI host adapter with RAID control capabilities. MegaRAID SCSI 320-2 requires no special motherboard PCI expansion slot. The card includes an Intel 80303 processor. MegaRAID provides reliability, high performance, and fault-tolerant disk subsystem management.

SCSI Channels

MegaRAID SCSI 320-2 has two Ultra320 SCSI channels. There is one LSI Logic dual SCSI controller, supporting two channels. Each SCSI channel supports up to fifteen SCSI devices.

NVRAM and Flash ROM

A 32 KB x 8 NVRAM stores RAID system configuration information. The firmware is stored in flash memory for easy upgrade.

SCSI Connectors

MegaRAID has two ultra high-density 68-pin external SCSI connectors and two 68-pin internal SCSI connectors for internal SCSI drives.

Single-Ended and Differential SCSI Buses

The SCSI standard defines two electrical buses:

- a single ended bus
- a differential bus

Maximum Cable Length for SCSI Standards

Table 1-1 lists the maximum cable length for SCSI standards.

Table 1-1. Maximum Cable Length for SCSI Standards

Standard	Single ended	Low-voltage Differential	Maximum Number of Drives
Ultra SCSI	1.5 m	12 m	7
Ultra SCSI	3 m	12 m	3
Wide Ultra SCSI		12 m	15
Wide Ultra SCSI	1.5 m	12 m	7
Wide Ultra SCSI	3 m	12 m	3
Ultra2 SCSI		25 m	1
Ultra2 SCSI		12 m	7
Wide Ultra2 SCSI		25 m	1
Wide Ultra2 SCSI		12 m	15

Maximum Cable Length for Ultra320

Table 1-2 lists the maximum cable length for Ultra320.

Table 1-2. Maximum Cable Length for Ultra320

Standard	Single-ended	LVD	Maximum # of Drives
Ultra320 SCSI	N/A	12M	15

SCSI Bus Widths and Maximum Throughput

Table 1-3 lists the SCSI bus widths and maximum throughput for SCSI standards.

Table 1-3. Maximum SCSI Bus Widths and Maximum Throughput

SCSI Standard	SCSI Bus Width	SCSI Throughput
Fast Wide SCSI	16 bits	20 MB/s
Wide Ultra SCSI	16 bits	40 MB/s
Wide Ultra 2 SCSI	16 bits	80 MB/s
Wide Ultra 160 SCSI	16 bits	160 MB/s
Ultra 320 SCSI	16 bits	320 MB/s

Documentation Set

The MegaRAID SCSI 320-2 technical documentation set includes:

- the *MegaRAID SCSI 320-2 Hardware Guide*
- the *MegaRAID Configuration Software Guide*
- the *MegaRAID Operating System Driver Installation Guide*

Using the MegaRAID SCSI 320-2 Manuals

The *MegaRAID SCSI 320-2 Hardware Guide* includes a RAID overview, RAID planning, and RAID system configuration information. Read it first.

MegaRAID Configuration Software Guide

This manual describes the MegaRAID software utilities that configure and modify RAID systems. The software utilities include:

- MegaRAID BIOS Configuration Utility
- WebBIOS Configuration Utility
- MegaRAID Manager
- Power Console Plus

MegaRAID Operating System Driver Installation Guide

This manual provides detailed information about installing the operating system drivers.

Chapter 2

Introduction to RAID

RAID (Redundant Array of Independent Disks) is an array of multiple independent hard disk drives that provide high performance and fault tolerance. A RAID disk subsystem improves I/O performance. The RAID array appears to the host computer as a single storage unit or as multiple logical units. I/O is faster because drives can be accessed simultaneously. RAID improves data storage reliability and fault tolerance. You can prevent data loss caused by drive failure by reconstructing missing data from the remaining data and parity drives.

RAID Overview

The following topics are discussed in this chapter:

- RAID levels on page 5
- Consistency check on page 6
- Fault tolerance on page 6
- Disk mirroring on page 6
- Disk striping on page 7
- Disk spanning on page 8
- Parity on page 9
- Hot spares on page 9
- Disk rebuilds on page 10
- Logical drives on page 10
- Hot swap on page 10
- SCSI drive states on page 11
- Logical drive states on page 11
- Disk array types on page 11
- Enclosure management on page 12

RAID Levels

RAID is a collection of specifications that describe a system for ensuring the reliability and stability of data stored on large disk subsystems. A RAID system can be implemented in a number of different versions (or RAID Levels). MegaRAID supports RAID levels 0, 1, 5, 10, and 50.

Consistency Check

In RAID, check consistency verifies the correctness of redundant data in an array. For example, in a system with distributed parity, checking consistency means computing the parity of the data drives and comparing the results to the contents of the parity drives.

Fault Tolerance


Fault tolerance is achieved through cooling fans, power supplies, and the ability to hot swap drives. MegaRAID provides hot swapping through the hot spare feature. A hot spare drive is an unused online available drive. MegaRAID can instantly rebuild a logical drive using a hot spare.

After the hot spare is automatically moved into the RAID subsystem, the failed drive can be automatically rebuilt. The RAID disk array continues to handle requests while the rebuild occurs.

Disk Mirroring


With mirroring (used in RAID 1), data written to one disk drive is simultaneously written to another disk drive. If one disk drive fails, the contents of the other disk drive can be used to run the system and reconstruct the failed drive. The primary advantage of disk mirroring is that it provides 100% data redundancy. Since the contents of the disk drive are completely written to a second drive, it does not matter if one of the drives fails. Both drives contain the same data at all times. Either drive can act as the operational drive.

Disk mirroring provides 100% redundancy, but is expensive because each drive in the system must be duplicated.

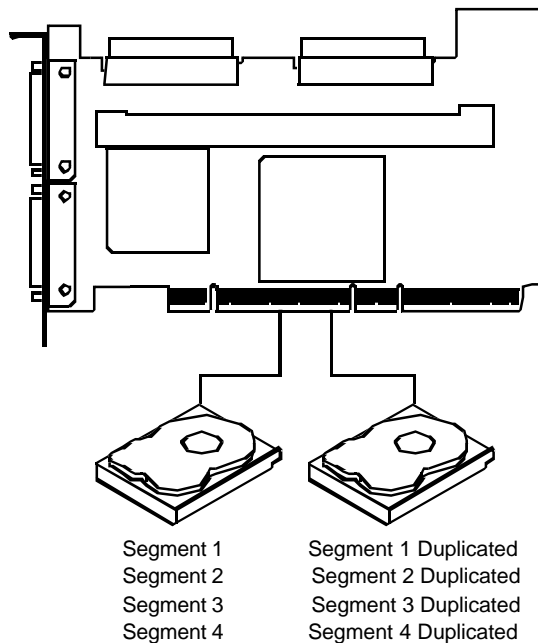

Disk Striping

Disk striping writes data across multiple disk drives instead of just one disk drive. Disk striping involves partitioning each drive storage space into stripes that can vary in size from 2 KB to 128 KB. These stripes are interleaved in a repeated sequential manner. The combined storage space is composed of stripes from each drive. MegaRAID supports stripe sizes of 2 KB, 4 KB, 8 KB, 16 KB, 32 KB, 64 KB, or 128 KB. For example, in a four-disk system using only disk striping (as in RAID level 0), segment 1 is written to disk 1, segment 2 is written to disk 2, and so on. Disk striping enhances performance because multiple drives are accessed simultaneously, but disk striping does not provide data redundancy.

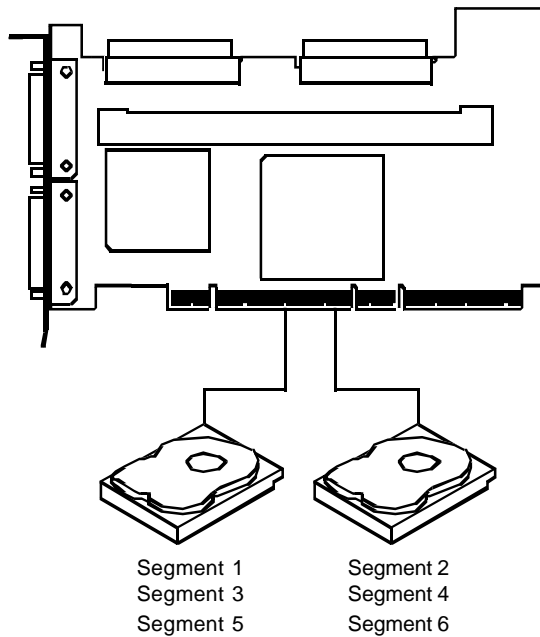

Stripe Width

Stripe width is the number of disks involved in an array where striping is implemented. For example, a four-disk array with disk striping has a stripe width of four.

Stripe Size


The stripe size is the length of the interleaved data segments that MegaRAID writes across multiple drives. MegaRAID supports stripe sizes of 2 KB, 4 KB, 8 KB, 16 KB, 32 KB, 64 KB, or 128 KB.

Disk Spanning

Disk spanning allows multiple disk drives to function like one big drive. Spanning overcomes lack of disk space and simplifies storage management by combining existing resources or adding relatively inexpensive resources. For example, two 60 GB disk drives can be combined to appear to the operating system as one single 120 GB drive.

Spanning alone does not provide reliability or performance enhancements. Spanned logical drives must have the same stripe size and must be contiguous. In the following graphic, RAID 1 array is turned into a RAID 10 array.


This controller supports a span depth of eight. That means that eight RAID 1, 3 or 5 arrays can be spanned to create one logical drive.

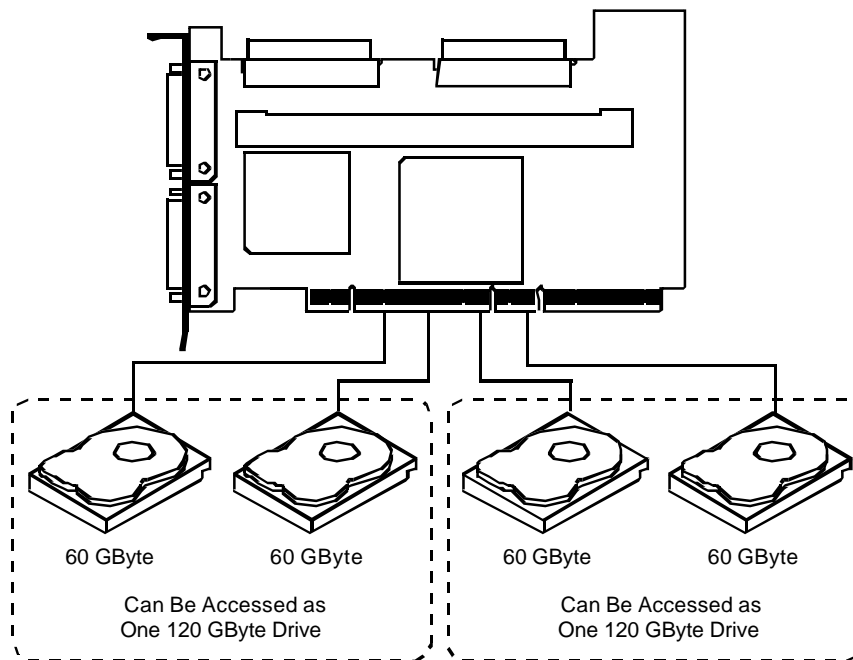

Spanning for RAID 10 or RAID 50

Table 2-1 describes spanning for RAID 10 and RAID 50.

Table 2-1. Spanning for RAID 10 or RAID 50


Level	Description
10	Configure RAID 10 by spanning two contiguous RAID 1 logical drives. The RAID 1 logical drives must have the same stripe size.
50	Configure RAID 50 by spanning two contiguous RAID 5 logical drives. The RAID 5 logical drives must have the same stripe size.
 NOTE: <i>Spanning two contiguous RAID 0 logical drives does not produce a new RAID level or add fault tolerance. It does increase the size of the logical volume and improves performance by doubling the number of spindles.</i>	

Parity

Parity generates a set of redundancy data from two or more parent data sets. The redundancy data can be used to reconstruct one of the parent data sets. Parity data does not fully duplicate the parent data sets. In RAID 5, this method is applied to entire drives or stripes across all disk drives in an array. Table 2-2 describes the distributed parity.

Table 2-2. Types of Parity

Type	Description
Distributed Parity	The parity data is distributed across drives in the array.

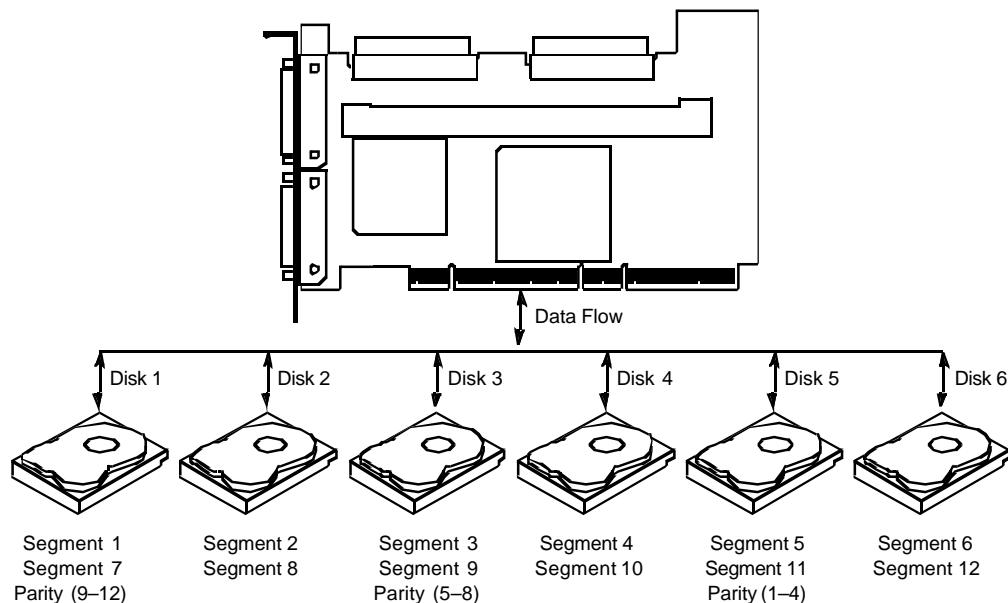

If a single disk drive fails, it can be rebuilt from the parity and the data on the remaining drives.

RAID level 5 combines distributed parity with disk striping. Parity provides redundancy for one drive failure without duplicating the contents of entire disk drives, but parity generation can slow the write process.

Hot Spares

A hot spare is an extra, unused disk drive that is part of the disk subsystem. It is usually in standby mode, ready for service if a drive fails. Hot spares permit you to replace failed drives without system shutdown or user intervention.

MegaRAID implements automatic and transparent rebuilds using hot spare drives, providing a high degree of fault tolerance and zero downtime. MegaRAID RAID Management software allows you to specify physical drives as hot spares. When a hot spare is needed, the MegaRAID controller assigns the hot spare that has a capacity closest to and at least as great as that of the failed drive to take the place of the failed drive.

Important

Hot spares are employed only in arrays with redundancy, for example, RAID levels 1, 5, 10, and 50.

A hot spare connected to a specific MegaRAID controller can only be used to rebuild a drive that is connected to the same controller.

Disk Rebuild

You rebuild a hard drive by recreating the data that had been stored on the drive before the drive failed.

Rebuilding can be done only in arrays with data redundancy such as RAID level 1, 5, 10, and 50.

Standby (warm spare) rebuild is employed in a mirrored (RAID 1) system. If a disk drive fails, an identical drive is immediately available. The primary data source disk drive is the original disk drive.

A hot spare can be used to rebuild disk drives in RAID 1, 5, 10, or 50 systems. If a hot spare is not available, the failed disk drive must be replaced with a new disk drive so that the data on the failed drive can be rebuilt.

Using hot spares, MegaRAID can automatically and transparently rebuild failed drives with user-defined rebuild rates. If a hot spare is available, the rebuild can start automatically when a drive fails. MegaRAID automatically restarts the system and the rebuild if the system goes down during a rebuild.

Rebuild Rate

The rebuild rate is the fraction of the compute cycles dedicated to rebuilding failed drives. A rebuild rate of 100 percent means the system is totally dedicated to rebuilding the failed drive.

The rebuild rate can be configured between 0% and 100%. At 0%, the rebuild is only done if the system is not doing anything else. At 100%, the rebuild has a higher priority than any other system activity.

Physical Array

A RAID array is a collection of physical disk drives governed by the RAID management software. A RAID array appears to the host computer as one or more logical drives.

Logical Drive

A logical drive is a partition in a physical array of disks that is made up of contiguous data segments on the physical disks. A logical drive can consist of any of the following:

- An entire physical array
- More than one entire physical array
- A part of an array
- Parts of more than one array
- A combination of any two of the above conditions

Hot Swap

A hot swap is the manual replacement of a defective physical disk unit while the computer is still running. When a new drive has been installed, you must issue a command to rebuild the drive. MegaRAID can be configured to detect the new disks and to rebuild the contents of the disk drive automatically.

SCSI Drive States

A SCSI disk drive can be in one of these states described in Table 2-3.

Table 2-3. SCSI Drive States

State	Description
Online (ONLIN)	The drive is functioning normally and is a part of a configured logical drive.
Ready (READY)	The drive is functioning normally but is not part of a configured logical drive and is not designated as a hot spare.
Hot Spare (HOTSP)	The drive is powered up and ready for use as a spare in case an online drive fails.
Fail (FAIL)	A fault has occurred in the drive placing it out of service.
Rebuild (REB)	The drive is being rebuilt with data from a failed drive.

Logical Drive States

Table 2-4 describes the logical drive states.

Table 2-4. Logical Drive States

State	Description
Optimal	The drive operating condition is good. All configured drives are online
Degraded	The drive operating condition is not optimal. One of the configured drives has failed or is offline.
Failed	The drive has failed.
Offline	The drive is not available to MegaRAID.

Disk Array Types

Table 2-5 describes the disk array types.

Table 2-5. Disk Array Types

Type	Description
Software-Based	The array is managed by software running in a host computer using the host CPU bandwidth. The disadvantages associated with this method are the load on the host CPU and the need for different software for each operating system.
SCSI to SCSI	The array controller resides outside of the host computer and communicates with the host through a SCSI adapter in the host. The array management software runs in the controller. It is transparent to the host and independent of the host operating system. The disadvantage is the limited data transfer rate of the SCSI channel between the SCSI adapter and the array controller.

Type	Description
Bus-Based	The array controller resides on the bus (for example, a PCI or EISA bus) in the host computer and has its own CPU to generate the parity and handle other RAID functions. A bus-based controller can transfer data at the speed of the host bus (PCI, ISA, EISA, VL-Bus) but is limited to the bus it is designed for. MegaRAID resides on a PCI bus, which can handle data transfer at up to 528 MB/s. With MegaRAID, each channel can handle data transfer rates up to 320 MB/s per SCSI channel.

Enclosure Management

Enclosure management is the intelligent monitoring of the disk subsystem by software and/or hardware.

The disk subsystem can be part of the host computer or separate from it. Enclosure management helps you stay informed of events in the disk subsystem, such as a drive or power supply failure. Enclosure management increases the fault tolerance of the disk subsystem.

Chapter 3

RAID Levels

MegaRAID supports RAID levels 0, 1, and 5, and two additional RAID levels, 10 and 50, that provide additional benefits. The RAID levels that MegaRAID supports are listed in Table 3-1.

Table 3-1. RAID Levels

RAID Level	Type
0	Standard
1	Standard
5	Standard
10	MegaRAID only
50	MegaRAID only

Selecting a RAID Level


To ensure the best performance, you should select the optimal RAID level when you create a system drive. The optimal RAID level for your disk array depends on a number of factors:

- The number of drives in the disk array
- The capacity of the drives in the array
- The need for data redundancy
- The disk performance requirements

RAID 0

RAID 0 provides disk striping across all drives in the RAID subsystem. RAID 0 does not provide any data redundancy, but does offer the best performance of any RAID level. RAID 0 breaks up data into smaller blocks and then writes a block to each drive in the array. The size of each block is determined by the stripe size parameter, set during the creation of the RAID set. RAID 0 offers high bandwidth. By breaking up a large file into smaller blocks, MegaRAID can use multiple SCSI channels and drives to read or write the file faster. RAID 0 involves no parity calculations to complicate the write operation. This makes RAID 0 ideal for applications that require high bandwidth but do not require fault tolerance.

Uses	RAID 0 provides high data throughput, especially for large files. Any environment that does not require fault tolerance.
Strong Points	Provides increased data throughput for large files. No capacity loss penalty for parity.
Weak Points	Does not provide fault tolerance. All data lost if any drive fails.
Drives	One to 30

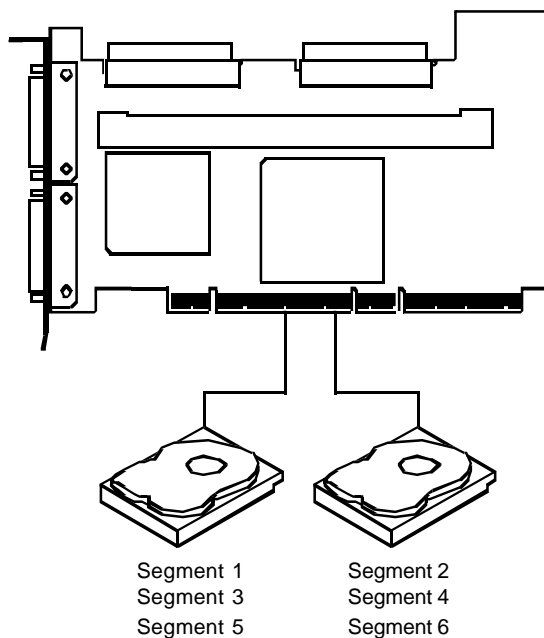

RAID 1


In RAID 1, MegaRAID duplicates all data from one drive to a second drive. RAID 1 provides complete data redundancy, but at the cost of doubling the required data storage capacity.

Uses Use RAID 1 for small databases or any other environment that requires fault tolerance but small capacity.

Strong Points RAID 1 provides complete data redundancy. RAID 1 is ideal for any application that requires fault tolerance and minimal capacity.

Weak Points RAID 1 requires twice as many disk drives. Performance is impaired during drive rebuilds.

Drives Two

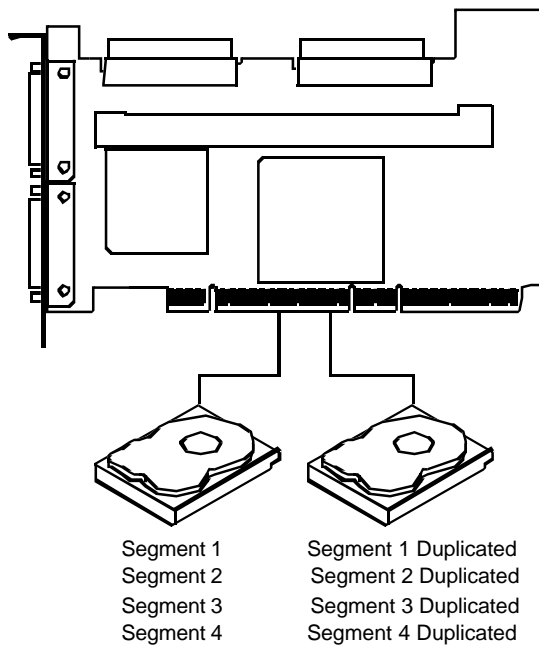

RAID 5

RAID 5 includes disk striping at the byte level and parity. In RAID 5, the parity information is written to several drives. RAID 5 is best suited for networks that perform a lot of small I/O transactions simultaneously.


RAID 5 addresses the bottleneck issue for random I/O operations. Since each drive contains both data and parity numerous writes can take place concurrently. In addition, robust caching algorithms and hardware based exclusive-or assist make RAID 5 performance exceptional in many different environments.

Uses RAID 5 provides high data throughput, especially for large files. Use RAID 5 for transaction processing applications because each drive can read and write independently. If a drive fails, MegaRAID uses distributed parity to recreate all missing information. Use also for office automation and online customer service that requires fault tolerance. Use for any application that has high read request rates but low write request rates.

Strong Points Provides data redundancy and good performance in most environments

Weak Points Disk drive performance will be reduced if a drive is being rebuilt. Environments with few processes do not perform as well because the RAID overhead is not offset by the performance gains in handling simultaneous processes.


Drives Three to 30

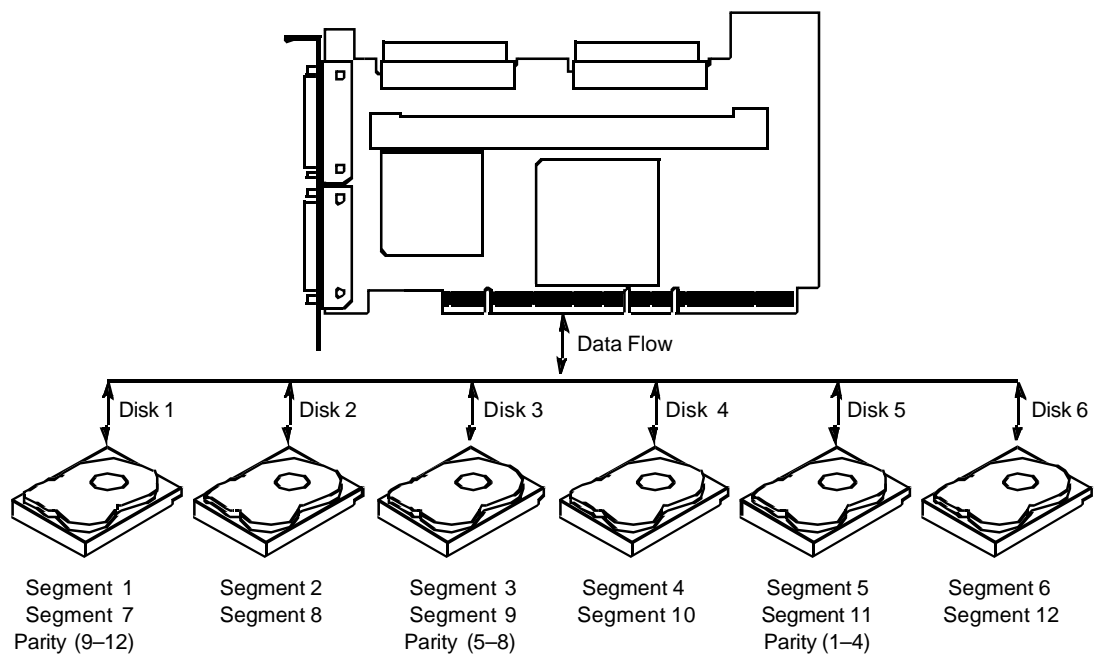

RAID 10

RAID 10 is a combination of RAID 0 and RAID 1. RAID 10 has mirrored drives. RAID 10 breaks up data into smaller blocks, and then stripes the blocks of data to each RAID 1 raid set. Each RAID 1 raid set then duplicates its data to its other drive. The size of each block is determined by the stripe size parameter, which is set during the creation of the RAID set. RAID 10 can sustain one to four drive failures while maintaining data integrity if each failed disk is in a different RAID 1 array.

Uses	RAID 10 works best for data storage that must have 100% redundancy of mirrored arrays and that also needs the enhanced I/O performance of RAID 0 (striped arrays). RAID 10 works well for medium-sized databases or any environment that requires a higher degree of fault tolerance and moderate to medium capacity.
Strong Points	RAID 10 provides both high data transfer rates and complete data redundancy.
Weak Points	RAID 10 requires twice as many drives as all other RAID levels except RAID 1.
Drives	Four to 30 (must be a multiple of two)

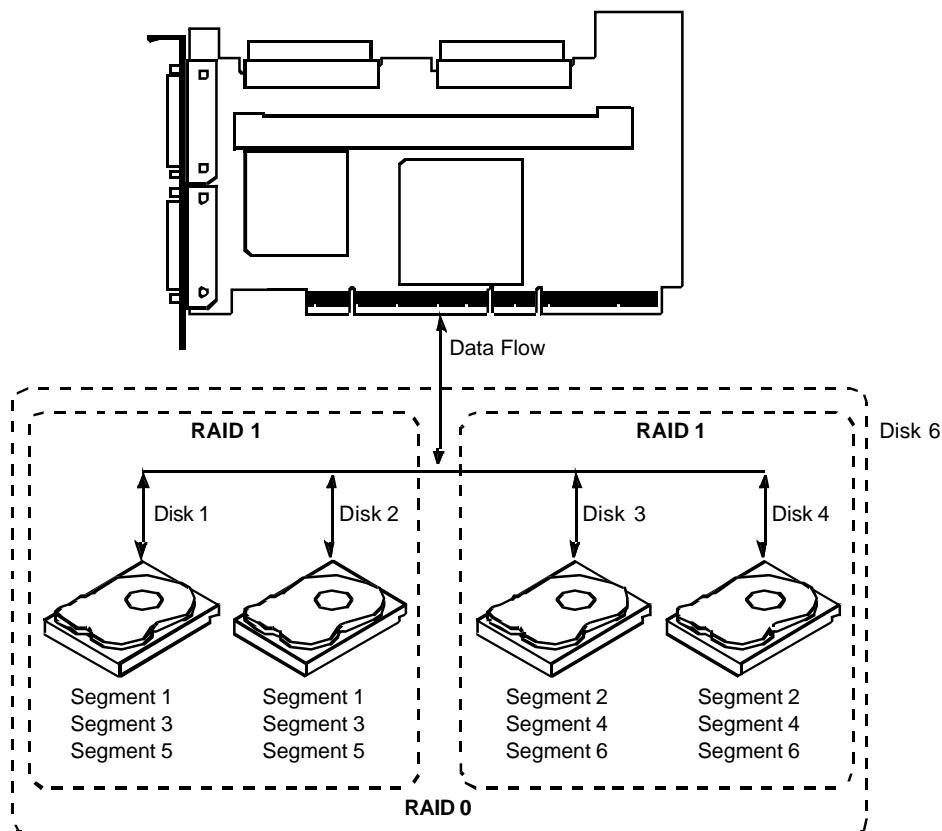

RAID 50

RAID 50 provides the features of both RAID 0 and RAID 5. RAID 50 includes both parity and disk striping across multiple drives. RAID 50 is best implemented on two RAID 5 disk arrays with data striped across both disk arrays. RAID 50 breaks up data into smaller blocks, and then stripes the blocks of data to each RAID 5 raid set. RAID 5 breaks up data into smaller blocks, calculates parity by performing an exclusive-or on the blocks, and then writes the blocks of data and parity to each drive in the array. The size of each block is determined by the stripe size parameter, which is set during the creation of the RAID set.


RAID 50 can sustain one drive failure per RAID 5 array and still maintain data integrity. For example, the RAID 50 configuration in the graphic below has two RAID 5 arrays. It can survive two drive failures, as long as the failed drives are in different RAID 5 arrays.

Uses RAID 50 works best when used with data that requires high reliability, high request rates, and high data transfer and medium to large capacity.

Strong Points RAID 50 provides high data throughput, data redundancy, and very good performance.

Weak Points Requires 2 to 4 times as many parity drives as RAID 5.

Drives Six to 30

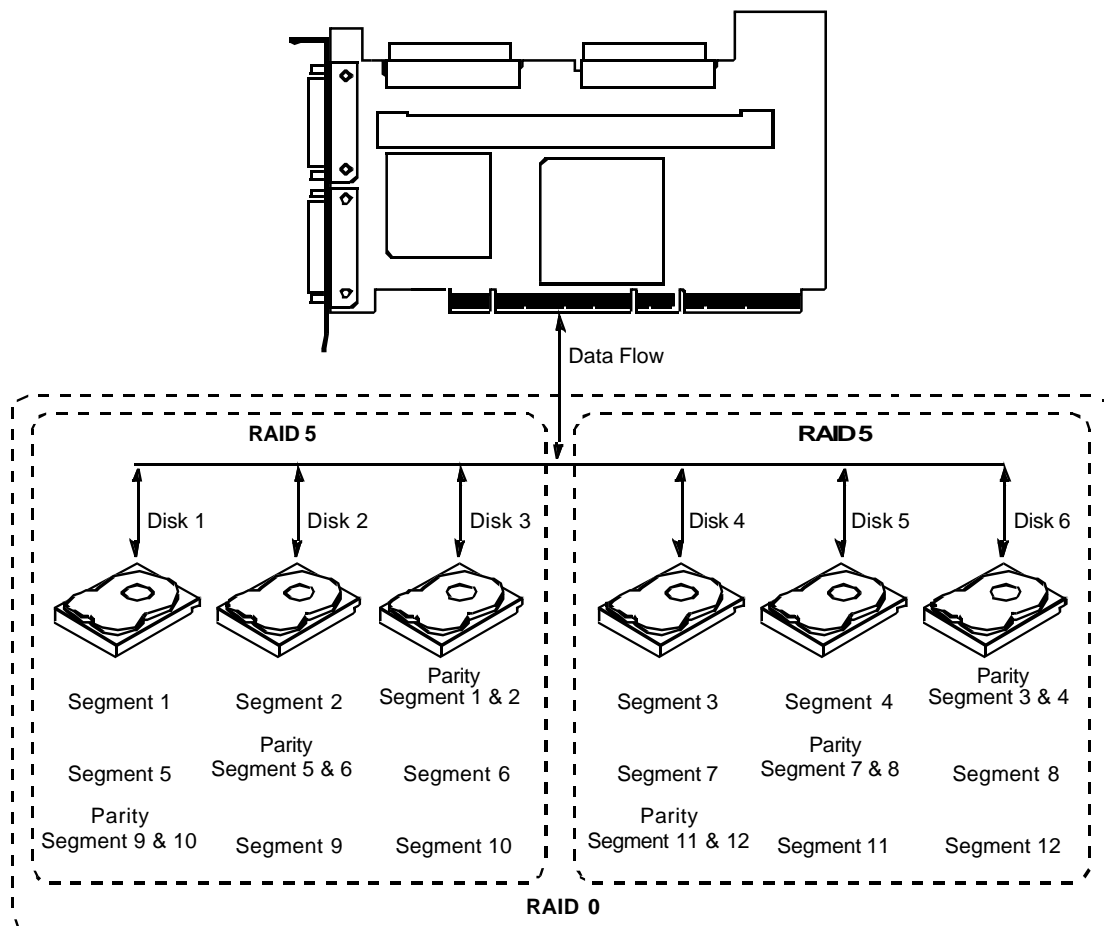

Chapter 4

Features

The MegaRAID SCSI 320-2 has two SCSI channels that support Ultra320 and Wide SCSI, with data transfer rates of up to 320 MB/s per SCSI channel. Each SCSI channel supports up to 15 Wide devices and up to seven non-Wide devices.



NOTE: The MegaRAID 320-2 card has a battery option.

Features

MegaRAID features include:

- Remote configuration and array management through MegaRAID WebBIOS
- High-performance I/O migration path while preserving existing PCI-SCSI software
- SCSI data transfers up to 320 MB/s
- Synchronous operation on a wide LVD SCSI bus
- Up to 15 LVD SCSI devices on the wide bus
- Up to 256 MB of 3.3V PC100 (or faster) SDRAM cache memory in one single-sided or double-sided DIMM socket (Cache memory is used for read and write-back caching and for RAID 5 parity generation.)
- Non-volatile random access memory (NVRAM) storage for RAID configuration data
- Audible alarm
- Direct memory access (DMA) chaining support
- Separate DRAM bus
- Support for differential or single-ended SCSI with active termination
- Up to 12 MegaRAID 320-2 cards per system
- Support for up to 15 SCSI devices per channel
- Support for RAID levels 0, 1, 5, 10, and 50
- Support for scatter/gather and tagged command queuing
- Ability to multithread up to 256 commands simultaneously
- Support for multiple rebuilds and consistency checks with transparent user-definable priority setting
- Support for variable stripe sizes for all logical drives
- Automatically detection of failed drives
- Automatic and transparent rebuild of hot spare drives
- Hot swap of new drives without taking the system down
- Optional battery backup for up to 72 hours of data retention
- Server clustering support
- Optional firmware provides multi-initiator support

- Server failover
- Software drivers for major operating systems

SMART Technology

The MegaRAID self-monitoring analysis and reporting technology (SMART) detects predictable drive failures. SMART monitors the internal performance of all motors, heads, and drive electronics. You can recover from drive failures through online physical drive migration.

Configuration on Disk

Configuration on Disk (drive roaming) saves configuration information both in NVRAM on MegaRAID and on the disk drives connected to MegaRAID. If MegaRAID is replaced, the new MegaRAID controller can detect the actual RAID configuration, maintaining the integrity of the data on each drive, even if the drives have changed channel and/or target ID.

Hardware Requirements

MegaRAID can be installed in a computer with a motherboard that has PCI expansion slots. The computer must support PCI version 2.2 or later. The computer should have an Intel Pentium or more powerful CPU, a floppy drive, a color monitor and VGA adapter card, a keyboard, and mouse.

Configuration Features

Table 4-1 lists the configuration features for the MegaRAID 320-2 controller.

Table 4-1. Configuration Features

Specification	Feature
RAID levels	0, 1, 5, 10, and 50.
SCSI channels	2
Maximum number of drives per channel	15
Array interface to host	PCI 2.2
PCI bus master	Supports write invalidate
Drive interface	Wide Ultra320
Upgradable cache memory sizes	32 MB, 64 MB, 128 MB, or 256 MB
Cache function	Write-back, Write-through, Adaptive Read Ahead, Non Read Ahead, Read Ahead
Multiple logical drives/arrays per controller	Up to 40 logical drives per controller
Maximum number of MegaRAID controllers per system	12
Online capacity expansion	Yes
Hot spare support	Yes
Flashable firmware	Yes
Hot swap devices supported	Yes
Non-disk devices supported	Yes
Mixed capacity hard drives	Yes
Number of internal SCSI connectors	2
Number of external SCSI connectors	2
Support for hard drives with capacities of more than 8 GB.	Yes
Clustering support (Failover control)	Yes
Online RAID level migration	Yes
No reboot necessary after expansion	Yes
More than 200 Qtags per physical drive	Yes
Hardware clustering support on the board	Yes
User-specified rebuild rate	Yes

Array Performance Features

Table 4-2 lists the array performance features.

Table 4-2. Array Performance Features

Specification	Feature
Host data transfer rate	532 MB/s
Drive data transfer rate	320 MB/s
Stripe sizes	2 KB, 4 KB, 8 KB, 16 KB, 32 KB, 64 KB, or 128 KB

RAID Management Features

Table 4-3 lists the MegaRAID RAID management features.

Table 4-3. RAID Management Features

Specification	Feature
Support for SNMP	Yes
Performance Monitor provided	Yes
Remote control and monitoring	Yes
Drive roaming	Yes
Support for concurrent multiple stripe sizes	Yes
Windows NT, 2000, XP, and .NET server support using a GUI client utility	Yes

Fault Tolerance Features

Table 4-4 lists the MegaRAID fault tolerance features.

Table 4-4. Fault Tolerance Features

Specification	Feature
Support for SMART	Yes
Optional battery backup for cache memory	Standard. Provided on the MegaRAID Controller. Up to 72 hours data retention
Enclosure management	SAF-TE compliant
Drive failure detection	Automatic
Drive rebuild using hot spares	Automatic and transparent
Parity generation and checking	Software and hardware

Software Utilities

Table 4-5 lists the MegaRAID software utility features.

Table 4-5. Software Utilities

Specification	Feature
FlexRAID reconfiguration on the fly	Yes
FlexRAID RAID level migration on the fly	Yes
FlexRAID online capacity expansion	Yes
Remote configuration and management over the Internet	Yes
Graphical user interface	Yes
Diagnostic utility	Yes
Management utility	Yes
Bootup configuration using MegaRAID Manager	Yes
Online read, write, and cache policy switching	Yes

Operating System Software Drivers

Operating System Drivers

MegaRAID SCSI 320-1 includes a DOS software configuration utility, and drivers for:

- Windows NT 4.0
- Windows 2000
- Windows .NET
- Windows XP
- Novell NetWare 5.1, 6.0
- Red Hat Linux 7.2, 7.3
- DOS

The DOS drivers for MegaRAID are contained in the firmware on MegaRAID except the DOS ASPI® and CD drivers. Call LSI Logic Technical Support at 678-728-1250 or access the web site at www.lsilogic.com for information about drivers for other operating systems.

MegaRAID Specifications

Table 4-6 lists the specifications for this MegaRAID controller.

Table 4-6. MegaRAID Specifications

Parameter	Specification
Card size	6.875" x 4.2" (half length PCI)
Processor	Intel 80303 @ 100 MHz
SCSI processor	One LSI Logic 53C1030 SCSI controller
Bus type	PCI 2.2
Bus data transfer rate	Up to 266 MB/s
Cache configuration	64 or 128MB DIMM
Firmware	1 MB × 8 flash ROM
Nonvolatile RAM	32 KB × 8 for storing RAID configuration

Parameter	Specification
Memory type	One 72-bit 168-pin SDRAM DIMM socket provides write-through or write-back caching on a logical drive basis. It also provides adaptive readahead.
Operating voltage	5.00 V \pm 0.25 V and 3.30V \pm 0.3V
SCSI controller	2 SCSI controllers for Ultra320 and Wide support.
SCSI data transfer rate	Up to 320 MB/s.
SCSI bus	low voltage differential or SE
SCSI termination	Active, low-voltage differential, or single-ended
Termination disable	Automatic through cable detection
Devices per SCSI channel	Up to 15 wide or seven non-wide SCSI devices. Up to 6 non-disk SCSI drives per MegaRAID controller.
SCSI device types supported	Synchronous or Asynchronous. Disk and non-disk.
RAID levels supported	0, 1, 5, 10, and 50
SCSI connectors	Two 68-pin internal high-density connectors for 16-bit SCSI devices. Two ultra-high density 68-pin external connectors
SCSI cables	Up to 25 meters if using low voltage differential
Serial port	9-pin RS232C-compatible connector

Components

CPU

The MegaRAID controller uses the 64-bit Intel 80303 Intelligent I/O processor with an embedded 32-bit 80960 Jx RISC processor that runs at 100 MHz. This processor directs all functions of the controller including command processing, PCI and SCSI bus transfers, RAID processing, drive rebuilding, cache management, and error recovery.

Cache Memory

Cache memory resides in a single 72-bit DIMM socket that requires one unbuffered 3.3V SDRAM single-sided or double-sided DIMM. Possible configurations are 32, 64, 128, or 256 MB.

MegaRAID supports write-through or write-back caching, which can be selected for each logical drive. To improve performance in sequential disk accesses, MegaRAID does not use read-ahead caching for the current logical drive. The default setting for the read policy is *Normal*, meaning no read-ahead caching. You can disable read-ahead caching.



Warning!

Write caching is not recommended for the physical drives. When write cache is enabled, loss of data can occur when power is interrupted.

MegaRAID BIOS

The BIOS resides on a 1 MB or 2 MB × 8 flash ROM for easy upgrade. The MegaRAID BIOS supports INT 13h calls to boot DOS without special software or device drivers. The MegaRAID BIOS provides an extensive setup utility that can be accessed by pressing <Ctrl> <M> at BIOS initialization. MegaRAID Configuration Utility is described in the *MegaRAID Configuration Software Guide*.

Onboard Speaker

MegaRAID has an onboard tone generator for audible warnings when system errors occur. Audible warnings can be generated through this speaker. The audible warnings are listed in Appendix B.

Serial Port

MegaRAID includes a 9-pin RS232C-compatible serial port connector, which can connect to communications devices and external storage devices.

SCSI Bus

The MegaRAID SCSI 320-2 controller has two Ultra320 Wide SCSI channels that support low voltage differential SCSI devices with active termination. Both synchronous and asynchronous devices are supported. MegaRAID provides automatic termination disable via cable detection. Each channel supports up to 15 wide or seven non-wide SCSI devices at speeds up to 320 MB/s per SCSI channel. MegaRAID supports up to six non-disk devices per controller. The SCSI bus mode defaults to LVD for each SCSI channel. If a single ended device is attached to a SCSI channel, MegaRAID automatically switches to SE mode for that SCSI channel.

SCSI Connectors

MegaRAID has two types of SCSI connectors:

- two 68-pin high density internal SCSI connectors
- two 68-pin external ultra-high-density external SCSI connectors

SCSI Termination

MegaRAID uses active termination on the SCSI bus conforming to Alternative 2 of the SCSI-2 specifications. Termination enable/disable is automatic through cable detection.

SCSI Firmware

The firmware handles all RAID and SCSI command processing and also supports the features listed in Table 4-7.

Table 4-7. SCSI Firmware

Feature	Description
Disconnect/reconnect	Optimizes SCSI Bus seek.
Tagged command queuing	Multiple tags to improve random access
Scatter/gather	Multiple address/count pairs
Multi-threading	Up to 255 simultaneous commands with elevator sorting and concatenation of requests per SCSI channel
Stripe size	Variable for all logical drives: 2 KB, 4 KB, 8 KB, 16 KB, 32 KB, 64 KB, or 128 KB.
Rebuild	Multiple rebuilds and consistency checks with user-definable priority.

RAID Management

The RAID utilities manage and configure the RAID system and MegaRAID, create and manage multiple disk arrays, control and monitor multiple RAID servers, provide error statistics logging and online maintenance:

- MegaRAID Configuration Utility
- WebBIOS Configuration Utility
- Power Console Plus
- MegaRAID Manager

MegaRAID Configuration Utility

It configures and maintains RAID arrays, formats disk drives, and manages the RAID system. It is independent of any operating system. See the *MegaRAID Configuration Software Guide* for additional information.

WebBIOS Configuration Utility

It allows you to configure and manage a RAID system using an HTML interface. It is independent of any operating system. See the *MegaRAID Configuration Software Guide* for additional information.

Power Console Plus

Power Console Plus runs in Windows NT, 2000, XP, and .NET. It configures, monitors, and maintains multiple RAID servers from any network node or a remote location. See the *MegaRAID Configuration Software Guide* for additional information.

MegaRAID Manager

A character-based, non-GUI utility for Linux and Novell NetWare that changes policies and parameters, and monitors RAID systems. See the *MegaRAID Configuration Software Guide* for additional information.

Fault-Tolerance

The MegaRAID fault-tolerance features are:

- Built-in 9-pin connector that provides an RS-232C serial communication interface
- Automatic failed drive detection
- Automatic failed drive rebuild with no user intervention required
- Hot swap manual replacement without bringing the system down
- SCSI-accessible fault-tolerant enclosure (SAF-TE) compliant enclosure management
- Cache memory

Detect Failed Drive

The MegaRAID firmware automatically detects and rebuilds failed drives. This can be done transparently with hot spares.

Hot Swap

MegaRAID supports the manual replacement of a disk unit in the RAID subsystem without system shutdown.

Compatibility

MegaRAID compatibility issues include:

- Server management
- SCSI device compatibility
- Software compatibility

Server Management

As a simple network management protocol (SNMP) agent, MegaRAID supports all SNMP managers.

SCSI Device Compatibility

MegaRAID supports SCSI hard drives, CD-ROMs, and tape drives.

Software

All SCSI backup and utility software should work with MegaRAID. This software is not provided with MegaRAID.

Clustering Support

LSI Logic provides OEM-optional firmware with multi-initiator support. This software provides high system availability by permitting server failover.

Summary

MegaRAID features were discussed in this chapter. In the next chapter, MegaRAID configuration is described.

Chapter 5

Configuring MegaRAID

Configuring SCSI Physical Drives

SCSI Channels

Physical SCSI drives must be organized into logical drives. The arrays and logical drives that you construct must be able to support the RAID level that you select.

This controller has two SCSI channels.

Distributing Drives

Distribute the disk drives across all channels for optimal performance. It is best to stripe across channels instead of down channels. Performance is most affected for sequential reads and writes. MegaRAID supports SCSI CD-ROM drives, SCSI tape drives, and other SCSI devices as well as SCSI hard disk drives. For optimal performance, all non-disk SCSI devices should be attached to one SCSI channel.

Basic Configuration Rules

You should observe the following guidelines when connecting and configuring SCSI devices in a RAID array:

- Attach non-disk SCSI devices to a single SCSI channel that does not have any disk drives.
- Distribute the SCSI hard disk drives equally among all available SCSI channels except any SCSI channel that is being reserved for non-disk drives.
- You can place up to 30 physical disk drives in a logical array, depending on the RAID level.
- An array can contain SCSI devices that reside on an array on any channel.
- Include all drives that have the same capacity to the same array.
- Make sure any hot spare has a capacity that is at least as large as the largest drive that may be replaced by the hot spare.
- When replacing a failed drive, make sure that the replacement drive has a capacity that is at least as large as the drive being replaced.



NOTE: Be sure to back up your data regularly, even when using RAID.

Current Configuration

Use Table 5-1 to record the current configuration.

Table 5-1. Current Configuration

SCSI ID	Device Description	Termination?
SCSI Channel 0		
0		
1		
2		
3		
4		
5		
6		
8		
9		
10		
11		
12		
13		
14		
15		
SCSI Channel 1		
0		
1		
2		
3		
4		
5		
6		
8		
9		
10		
11		
12		
13		
14		
15		

Logical Drive Configuration

Use Table 5-2 to record the logical drive configuration.

Table 5-2. Logical Drive Configuration

Logical Drive	RAID Level	Stripe Size	Logical Drive Size	Cache Policy	Read Policy	Write Policy	# of Physical Drives
LD0							
LD1							
LD2							
LD3							
LD4							
LD5							
LD6							
LD7							
LD8							
LD9							
LD10							
LD11							
LD12							
LD13							
LD14							
LD15							
LD16							
LD17							
LD18							
LD19							
LD20							
LD21							
LD22							
LD23							
LD24							
LD25							
LD26							
LD27							
LD28							
LD29							
LD30							
LD31							
LD32							
LD33							
LD34							
LD35							
LD36							
LD37							

Logical Drive	RAID Level	Stripe Size	Logical Drive Size	Cache Policy	Read Policy	Write Policy	# of Physical Drives
LD38							
LD39							

Physical Device Layout

Use Table 5-3 to list the physical drive layout.

Table 5-3. Software Utilities

	Channel 0	Channel 1
Target ID		
Device type		
Logical drive number/ Drive number		
Manufacturer/Model number		
Firmware level		
Target ID		
Device type		
Logical drive number/ Drive number		
Manufacturer/Model number		
Firmware level		
Target ID		
Device type		
Logical drive number/ Drive number		
Manufacturer/Model number		
Firmware level		
Target ID		
Device type		
Logical drive number/ Drive number		
Manufacturer/Model number		
Firmware level		
Target ID		
Device type		
Logical drive number/ Drive number		
Manufacturer/Model number		
Firmware level		
Target ID		

	Channel 0	Channel 1
Device type		
Logical drive number/ Drive number		
Manufacturer/Model number		
Firmware level		
Target ID		
Device type		
Logical drive number/ Drive number		
Manufacturer/Model number		
Firmware level		
Target ID		
Device type		
Logical drive number/ Drive number		
Manufacturer/Model number		
Firmware level		
Target ID		
Device type		
Logical drive number/ Drive number		
Manufacturer/Model number		
Firmware level		
Target ID		
Device type		
Logical drive number/ Drive number		
Manufacturer/Model number		
Firmware level		
Target ID		
Device type		
Logical drive number/ Drive number		
Manufacturer/Model number		
Firmware level		

	Channel 0	Channel 1
Firmware level		
Target ID		
Device type		
Logical drive number/ Drive number		
Manufacturer/Model number		
Firmware level		
Target ID		
Device type		
Logical drive number/ Drive number		
Manufacturer/Model number		
Firmware level		
Target ID		
Device type		
Logical drive number/ Drive number		
Manufacturer/Model number		
Firmware level		
Target ID		
Device type		
Logical drive number/ Drive number		
Manufacturer/Model number		

Configuring Arrays

Connect the physical drives to MegaRAID, configure the drives, then initialize them. The number of physical disk drives that an array can support depends on the firmware version.

For MegaRAID SCSI 320-2, an array can consist of up to 30 physical disk drives, depending on the RAID level (see Chapter 3 for more information.) This controller supports up to 40 logical drives per controller. The number of drives in an array determines the RAID levels that can be supported.

Arranging Arrays

You must arrange the arrays to provide additional organization for the drive array. You must arrange arrays so that you can create system drives that can function as boot devices.

You can sequentially arrange arrays with an identical number of drives so that the drives in the group are spanned. Spanned drives can be treated as one large drive. Data can be striped across multiple arrays as one logical drive.

You can create spanned drives by using the MegaRAID Configuration Utility or the MegaRAID Manager. See the *MegaRAID Configuration Software Guide* for additional information.

Creating Hot Spares

Any drive that is present, formatted, and initialized but not included in a array or logical drive is automatically designated as a hot spare.

You can also designate drives as hot spares by using the MegaRAID Configuration Utility, MegaRAID Manager, or Power Console Plus. See the *MegaRAID Configuration Software Guide* for additional information.

Creating Logical Drives

Logical drives are arrays or spanned arrays that are presented to the operating system. You must create one or more logical drives.

The logical drive capacity can include all or any portion of an array. The logical drive capacity can also be larger than an array by using spanning. MegaRAID supports up to 40 logical drives.

Configuration Strategies

The most important factors in RAID array configuration are: drive capacity, drive availability (fault tolerance), and drive performance. You cannot configure a logical drive that optimizes all three factors, but it is easy to choose a logical drive configuration that maximizes one factor at the expense of the other two factors, although needs are seldom that simple.

Maximize Capacity

RAID 0 achieves maximum drive capacity, but does not provide data redundancy. Maximum drive capacity for each RAID level is shown below. OEM-level firmware that can span up to 4 logical drives is assumed.

Table 5-4 describes the RAID levels and the capacity that each RAID level can hold.

Table 5-4. Capacity for the RAID Levels

RAID Level	Description	Drives Required	Capacity
0	Striping without parity	1 – 30	(Number of disks) X capacity of smallest disk
1	Mirroring	2	(Capacity of smallest disk) X (1)
5	Striping with floating parity drive	3 – 30	(Number of disks) X (capacity of smallest disk) - (capacity of 1 disk)
10	Mirroring and striping	4 – 30 (Must be a multiple of 2.)	(Number of disks) X (capacity of smallest disk) / (2)
50	RAID 5 and striping	6 – 30 (Must be a multiple of arrays.)	(Number of disks) X (capacity of smallest disk) – (capacity of 1 disk X number of Arrays)

Maximize Drive Availability

You can maximize the availability of data on the physical disk drive in the logical array by maximizing the level of fault tolerance. Table 5-5 describes the levels of fault tolerance provided by the RAID levels.

Table 5-5. Software Utilities

RAID Level	Fault Tolerance Protection
0	No fault tolerance.
1	Disk mirroring, which provides 100% data redundancy.
5	100% protection through striping and parity. The data is striped and parity data is written across a number of physical disk drives.
10	100% protection through data mirroring.
50	100% protection through data striping and parity. All data is striped and parity data is written across all drives in two or more arrays.

Maximizing Drive Performance

You can configure an array for optimal performance. But optimal drive configuration for one type of application will probably not be optimal for any other application. Table 5-5 contains a basic guideline of the performance characteristics for RAID drive arrays at each RAID level.

Table 5-5. Performance Characteristics for the RAID Levels

RAID Level	Performance Characteristics
0	Excellent for all types of I/O activity, but provides no data security.
1	Provides data redundancy and good performance.
5	Provides data redundancy and good performance in most environments.
10	Provides data redundancy and excellent performance.
50	Provides data redundancy and very good performance.

Assigning RAID Levels

Only one RAID level can be assigned to each logical drive. Table 5-6 lists the drives required per RAID level.

Table 5-6. Drives Required per RAID Levels

RAID Level	Minimum Number of Physical Drives	Maximum Number of Physical Drives
0	One	30
1	Two	Two
5	Three	30
10	Four	30
50	Six	30

Configuring Logical Drives

After you have installed the MegaRAID controller in the server and have attached all physical drives, perform the following actions to prepare a RAID disk array. Perform the following steps in Table 5-7 to configure logical drives.

Table 5-7. Procedure to Configure Logical Drives

Step	Action
1	Optimize the MegaRAID controller options for your system. See Chapter 3 for additional information.
2	Press <Ctrl><M> to run the MegaRAID Manager.
3	Perform a low-level format of the SCSI drives that will be included in the array and the drives to be used for hot spares.
4	Define and configure one or more logical drives. Select Easy Configuration in MegaRAID Manager or select New Configuration to customize the RAID array.
5	Create and configure one or more system drives (logical drives). Select the RAID level, cache policy, read policy, and write policy.
6	Save the configuration.
7	Initialize the system drives. After initialization, you can install the operating system.

Optimizing Data Storage

Data Access Requirements

Each type of data stored in the disk subsystem has a different frequency of read and write activity. If you know the data access requirements, you can more successfully determine a strategy for optimizing the disk subsystem capacity, availability, and performance.

Servers that support Video on Demand typically read the data often, but write data infrequently. Both the read and write operations tend to be long. Data stored on a general-purpose file server involves relatively short read and write operations with relatively small files.

Array Functions

You must first define the major purpose of the disk array. Will this disk array increase the system storage capacity for general-purpose file and print servers? Does this disk array support any software system that must be available 24 hours per day? Will the information stored in this disk array contain large audio or video files that must be available on demand? Will this disk array contain data from an imaging system?

You must identify the purpose of the data to be stored in the disk subsystem before you can confidently choose a RAID level and a RAID configuration.

Planning the Array Configuration

Fill out Table 5-8 to help plan the array configuration.

Table 5-8. Factors in Configuring the Array Configuration

Item	Answer
Number of MegaRAID SCSI channels	
Number of physical disk drives in the array	
Purpose of this array. Rank the following factors:	
Maximize drive capacity	
Maximize the safety of the data (fault tolerance)	
Maximize hard drive performance and throughput	
Number of many hot spares	
Amount of cache memory installed on the MegaRAID	
Are all of the disk drives and the server that MegaRAID is installed in protected by a UPS?	

Array Configuration Planner

Using the Array Configuration Planner

Table 5-9 lists the possible RAID levels, fault tolerance, and effective capacity for all possible drive configurations for an array consisting of one to eight drives. It does not take into account any hot spare (standby) drives. You should always have a hot spare drive in case of drive failure.

RAID 1 requires two drives, RAID 10 requires at least four drives, and RAID 50 at least 6 drives.

Table 5-9. RAID Overview

Number of Drives	Possible RAID Levels	Relative Performance	Fault Tolerance	Effective Capacity
1	None	Excellent	No	100%
1	RAID 0	Excellent	No	100%
2	None	Excellent	No	100%
2	RAID 0	Excellent	No	100%
2	RAID 1	Good	Yes	50%
3	None	Excellent	No	100%
3	RAID 0	Excellent	No	100%
3	RAID 5	Good	Yes	67%
4	None	Excellent	No	100%
4	RAID 0	Excellent	No	100%
4	RAID 5	Good	Yes	75%
4	RAID 10	Excellent	Yes	50%
5	None	Excellent	No	100%
5	RAID 0	Excellent	No	100%
5	RAID 5	Good	Yes	80%
6	None	Excellent	No	100%
6	RAID 0	Excellent	No	100%
6	RAID 5	Good	Yes	83%
6	RAID 10	Excellent	Yes	50%
6	RAID 50	Good	Yes	67%
7	None	Excellent	No	100%
7	RAID 0	Excellent	No	100%
7	RAID 5	Good	Yes	86%
8	RAID 0	Excellent	No	100%
8	RAID 5	Good	Yes	87%
8	RAID 10	Excellent	Yes	50%
8	RAID 50	Good	Yes	75%

Chapter 6

Hardware Installation

Requirements

You must have the following items before you install the MegaRAID controller in a server:

- a MegaRAID SCSI 320-2 Ultra320 RAID controller
- a host computer with an available PCI expansion slot
- the MegaRAID Installation CD
- the necessary SCSI cables and terminators (depends on the number and type of SCSI devices to be attached)
- an uninterruptible power supply (UPS) for the entire system
- Ultra320 SCSI hard drives and other SCSI devices, as desired

Important

The MegaRAID SCSI 320-2 controller must be installed in a PCI expansion slot.

Optional Equipment

You may also want to install SCSI cables that interconnect the MegaRAID SCSI 320-2 to external SCSI devices.

Checklist

Use the checklist in Table 6-1 to make sure you perform the installation steps.

Table 6-1. Installation Checklist

Check	Step	Action
	1	Turn all power off to the server and all hard disk drives, enclosures, and system components.
	2	Prepare the host system. See the host system technical documentation.
	3	Determine the SCSI ID and SCSI termination requirements.
	4	Make sure the jumper settings on the MegaRAID controller are correct. Install the cache memory.
	5	Connect the battery pack harness to J10 (optional).
	6	Install the MegaRAID card in the server and attach the SCSI cables and terminators as needed. Make sure Pin 1 on the cable matches Pin 1 on the connector. Make sure that the SCSI cables you use conform to all SCSI specifications.
	7	Perform a safety check. Make sure all cables are properly attached. Make sure the MegaRAID card is properly installed. Turn power on after completing the safety check. Connect the battery pack.
	8	Install and configure the MegaRAID software utilities and drivers.
	9	Format the hard disk drives as needed.
	10	Configure system drives (logical drives).
	11	Initialize the logical drives.
	12	Install the appropriate MegaRAID drivers for your operating system.

Installation Steps

MegaRAID provides extensive customization options. If you need only basic MegaRAID features and your computer does not use other adapter cards with resource settings that may conflict with MegaRAID settings, even custom installation can be quick and easy. Table 6-2 lists the steps for installing the controller. Each step is described in detail in the following pages.

Table 6-2. Installation Steps

Step	Action	Additional Information
1	Unpack the MegaRAID controller and inspect for damage. Make sure all items are in the package.	If damaged, call LSI Logic technical support at 678-728-1250.
2	Turn the computer off and remove the cover.	
3	Make sure the motherboard jumper settings are correct.	
4	Install cache memory on the MegaRAID card.	32 MB minimum cache memory is required.
5	Check the jumper settings on the MegaRAID controller.	See page 46 for the MegaRAID jumper settings.
6	Set SCSI termination.	
7	Set SCSI terminator power (TermPWR).	
8	Connect the battery harness.	Optional
9	Install the MegaRAID card.	
10	Connect the SCSI cables to SCSI devices.	
11	Set the target IDs for the SCSI devices.	
12	Replace the computer cover and turn the power on.	Be sure the SCSI devices are powered up before or at the same time as the host computer.
13	Run MegaRAID Configuration Utility.	Optional
14	Install software drivers for the desired operating systems.	

Step 1 Unpack

Unpack and install the hardware in a static-free environment. The MegaRAID controller card is packed inside an anti-static bag between two sponge sheets. Remove the controller card and inspect it for damage. If the card appears damaged, or if any of items listed below are missing, contact LSI Logic Technical Support at 678-728-1250. The MegaRAID Controller is also shipped with the following items:

- The *MegaRAID Configuration Software Guide* (on CD)
- The *MegaRAID Operating System Driver Installation Guide* (on CD)
- The *MegaRAID SCSI 320-2 Hardware Guide* (on CD)
- The software license agreement (on CD)
- The MegaRAID configuration utilities for DOS (on CD)
- The warranty registration card

Step 2 Power Down

Turn off the computer and remove the cover. Make sure the computer is turned off and disconnected from any networks before installing the controller card.

Step 3 Configure Motherboard

Make sure the motherboard is configured correctly for MegaRAID. MegaRAID is essentially a SCSI Controller. Each MegaRAID card you install requires an available PCI IRQ; make sure an IRQ is available for each controller you install.


Step 4 Install Cache Memory

Important

A minimum of 32 MB of cache memory is required. The cache memory must be installed before MegaRAID is operational.

DIMM Specifications

Install cache memory DIMMs on the MegaRAID controller card in the cache memory socket. Use a 72-bit 3.3V single-sided or double-sided 168-pin unbuffered DIMM. Lay the controller card component-side up on a clean static-free surface. The memory socket is mounted flush with the MegaRAID card, so the DIMM is parallel to the MegaRAID card when properly installed. The DIMM clicks into place, indicating proper seating in the socket. The MegaRAID card is shown lying on a flat surface below.

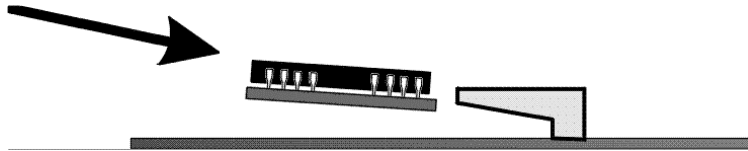

Installing or Changing Memory

Important

The battery pack harness or cable must be disconnected from J10 on the MegaRAID SCSI 320-2 Ultra320 card before you add or remove memory.

Perform the following steps in Table 6-2 to install or change memory.

Table 6-2. Memory Installation Steps

Step	Action
1	Bring down the operating system properly. Make sure that cache memory has been flushed. You must perform a system reset if operating under DOS. When the computer reboots, the MegaRAID controller will flush cache memory.
2	Turn the computer power off. Disconnect the power cables from the computer.
3	Remove the computer cover.
4	Disconnect the battery pack cable from the MegaRAID controller.
5	Remove the MegaRAID controller.
6	You can now add or remove DRAM modules from the MegaRAID controller. Follow the instructions on page 44.
7	Reattach the battery pack harness to J10 on the MegaRAID controller.
8	Reinstall the MegaRAID controller in the computer. Follow the instructions in this chapter.
9	Replace the computer cover and turn the computer power on.

Recommended Memory Vendors

Call LSI Logic Technical Support at 678-728-1250 for a current list of recommended memory vendors.

Step 5 Set Jumpers


Make sure the jumper settings on the MegaRAID card are correct. Table 6-3 describes the jumpers.

Table 6-3. Jumper Information

Connector	Description	Type
J1	I2C header	4-pin header
J2	SCSI activity LED connector	4-pin header
J3	Write pending indicator	2-pin header
J4	SCSI Termination Enable Channel 0	3-pin header
J5	SCSI Termination Enable Channel 1	3-pin header
J6	DIMM socket	DIMM socket
J10	Battery connector	3-pin header
J11	NVRAM clear	2-pin header
J12	NMI jumper	2-pin header
J13	32-/64-bit Secondary PCI selection	3-pin header
J14	Mode Select jumper	2-pin header
J15	Serial Port	3-pin header
J16	BIOS Enable	2-pin header
J17	Termination Power Channel 0	2-pin header
J18	Termination Power Channel 1	2-pin header
J20	JTAG jumper	3-pin header
J21	RUBI jumper	3-pin header
J22	Load balancing enable	2-pin header
J23	Serial EEPROM	2-pin header
J24	RUBI jumper	3-pin header

MegaRAID SCSI 320-2 Ultra320 Card Layout

The following figure shows the jumpers and connectors for the MegaRAID SCSI 320-2 Ultra320 card.

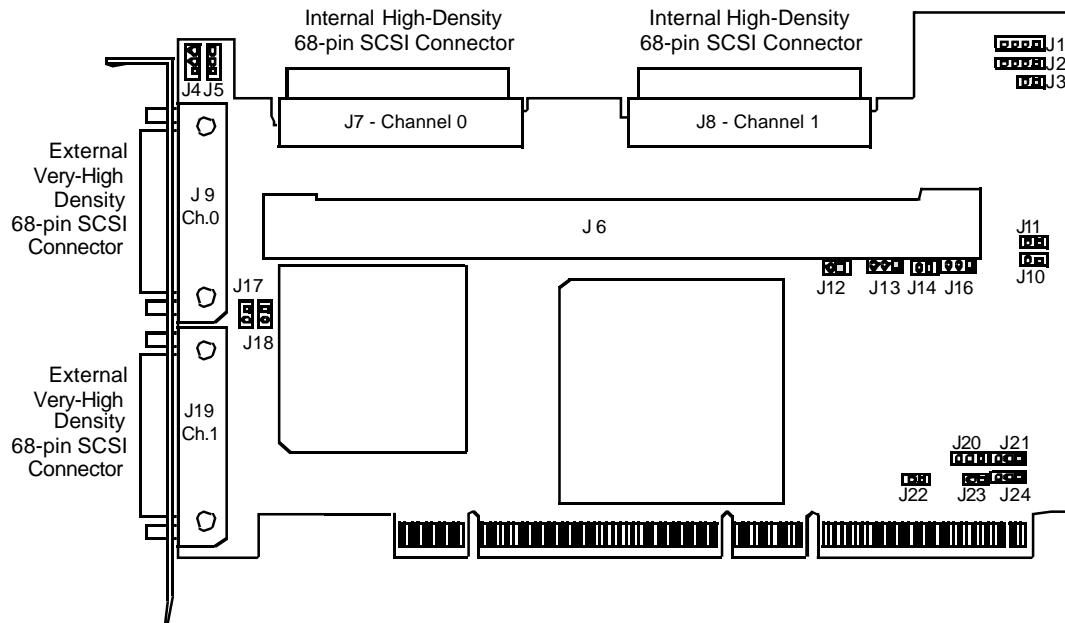

J3 Dirty Cache LED

J3 is a two-pin connector for an LED mounted on the computer enclosure. The LED indicates when the data in the cache has yet to be written to the storage devices. Table 6-4 displays the J3 pinout.

Table 6-4. J3 Dirty Cache LED Pinout

Pin	Description
1	High
2	Dirty Cache Signal

J4 and J5 Termination Enable

J4 and J5 are 3-pin headers that set the SCSI termination for each SCSI channel. Table 6-5 displays the J4 and J5 pinout.

Table 6-5. J4 and J5 Termination Enable Pinout

Jumper	SCSI Channel	SCSI Termination Controlled by Software	SCSI Termination Always Disabled	SCSI Termination Always Enabled
J5	0	Short Pins 1-2	Short Pins 2-3	OPEN
J4	1	Short Pins 1-2	Short Pins 2-3	OPEN

J10 External Battery

J10 is a 3-pin connector that attaches to the optional battery pack. Table 6-6 displays the J10 pinout.

Table 6-6. J10 External Battery Pinout

Pin	Signal Description
3	+BATT Terminal (red wire)
2	Thermistor (white wire)
1	-BATT Terminal (black wire)

J15 Serial Port

J15 attaches to a serial cable. Table 6-7 displays the J15 pinout.

Table 6-7. J15 Serial Port Pinout

Pin	Signal Description
1	Receive Data
2	Transmit Data
3	Ground

J16 Onboard BIOS Enable

J16 is a 2-pin header that enables or disables MegaRAID onboard BIOS. The onboard BIOS should be enabled (J16 unjumpered) for normal board position. Table 6-8 displays the J16 pinout.

Table 6-8. J16 Onboard BIOS Enable Pinout

J16 Setting	Onboard BIOS Status
Unjumpered	Enabled
Jumpered	Disabled

J17 and J18 TERMPWR Enable

J17 and J18 are 2-pin headers that enable TERMPWR to the SCSI bus for each SCSI channel. Table 6-9 displays the J17 and J18 pinout.

Table 6-9. J17 and J18 TERMPWR Enable Pinout

Jumper	Term. Power Channel	Settings
J17	0	Short pins 1-2 to have the PCI bus on the host computer provide TermPWR. This is the factory setting. Leave Open to let the SCSI bus provide TermPWR.
J18	1	Short pins 1-2 to have the PCI bus on the host computer provide TermPWR. This is the factory setting. Leave Open to let the SCSI bus provide TermPWR.

Step 6 Set Termination

Each MegaRAID SCSI channel can be individually configured for termination enable mode by setting the J4 and J5 jumpers. You must terminate the SCSI bus properly. The SCSI bus is an electrical transmission line and must be terminated properly to minimize reflections and losses.

For a disk array, set SCSI bus termination so that removing or adding a SCSI device does not disturb termination. An easy way to do this is to connect the card to one end of the SCSI cable for each channel and to connect a terminator module at the other end of each cable. The connectors between the two ends can connect SCSI devices. Disable termination on the SCSI devices. See the manual for each SCSI device to disable termination.

SCSI Termination


The SCSI bus on a SCSI channel is an electrical transmission line. It must be terminated properly to minimize reflections and losses. You complete the SCSI bus by setting termination at both ends. MegaRAID automatically provides SCSI termination at one end of the SCSI bus for each channel. Terminate the other end of the bus by attaching an external SCSI terminator module to the end of the cable for each channel or by attaching a SCSI device that internally terminates the SCSI bus at the end of each SCSI channel.

MegaRAID should always terminate each of the two SCSI buses if devices are attached to either the internal or external SCSI connectors, but not to both.

Use standard external SCSI terminators on SCSI channels operating at 10 MB/s or higher synchronous data transfer.

Terminating Internal SCSI Disk Arrays


Set the termination so that SCSI termination and termination power are intact when any disk drive is removed from a SCSI channel, as shown below. MegaRAID termination should always be enabled or controlled by software. Make sure J4 and J5 are either always open (termination always enabled), or Pins 1-2 are shorted (termination controlled by software).

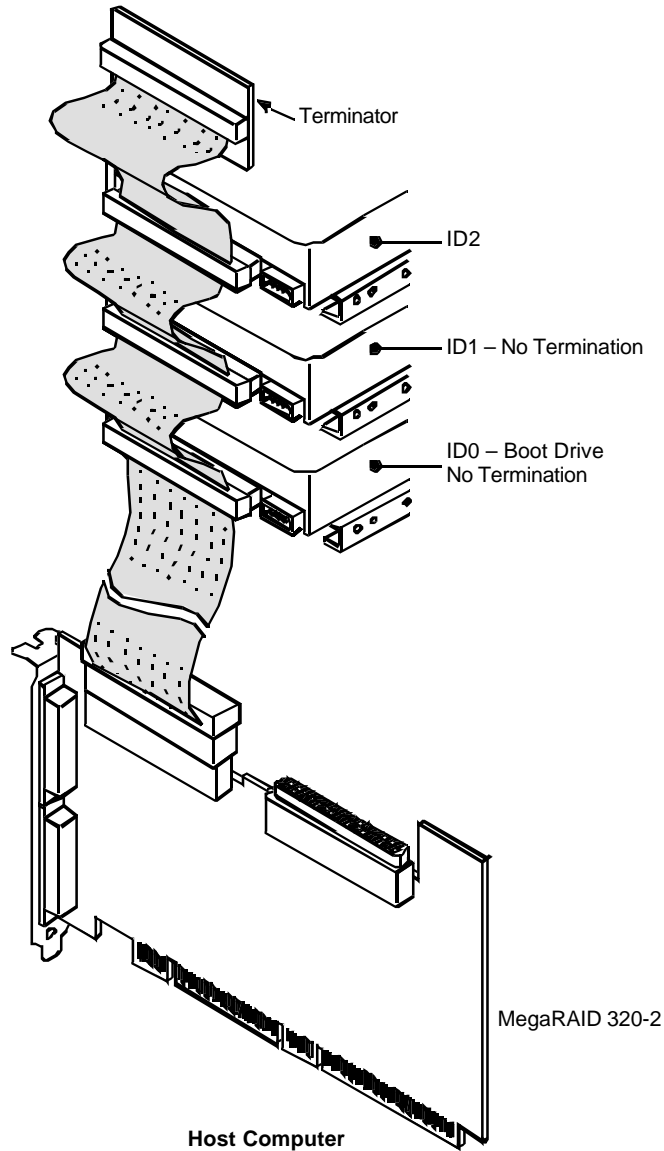

Terminating External Disk Arrays


In most array enclosures, the end of the SCSI cable has an independent SCSI terminator module that is not part of a SCSI drive. In this way, SCSI termination is not disturbed when a drive is removed. MegaRAID termination should always be enabled or controlled by software.

Make sure J4 and J5 are either always open (termination always enabled), or Pins 1-2 are shorted (termination controlled by software).

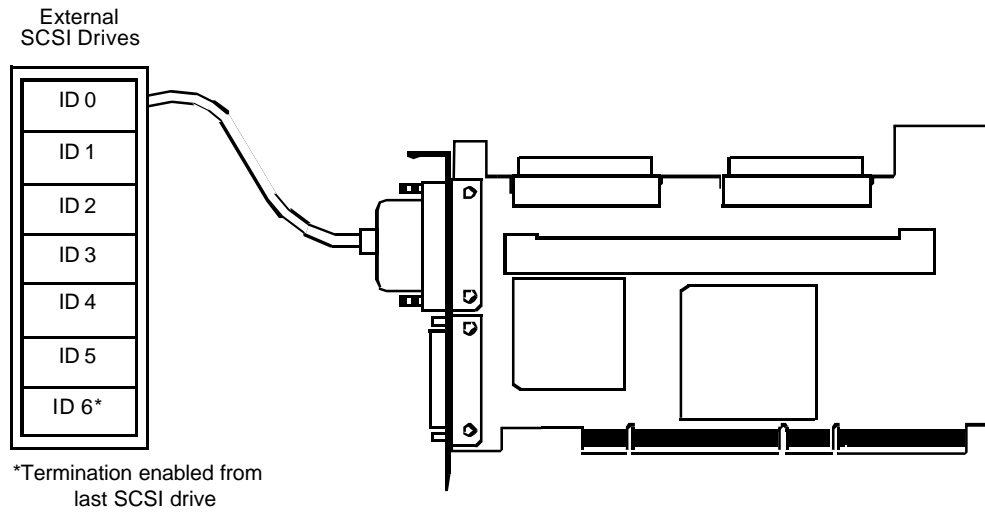

Terminating Internal and External Disk Arrays

You can use both internal and external drives with MegaRAID. You still must make sure that the proper SCSI termination and termination power is preserved. MegaRAID termination should always be disabled or controlled by software. Make sure J4 and J5 have pins 2-3 shorted, or pins 1-2 are shorted (termination controlled by software).

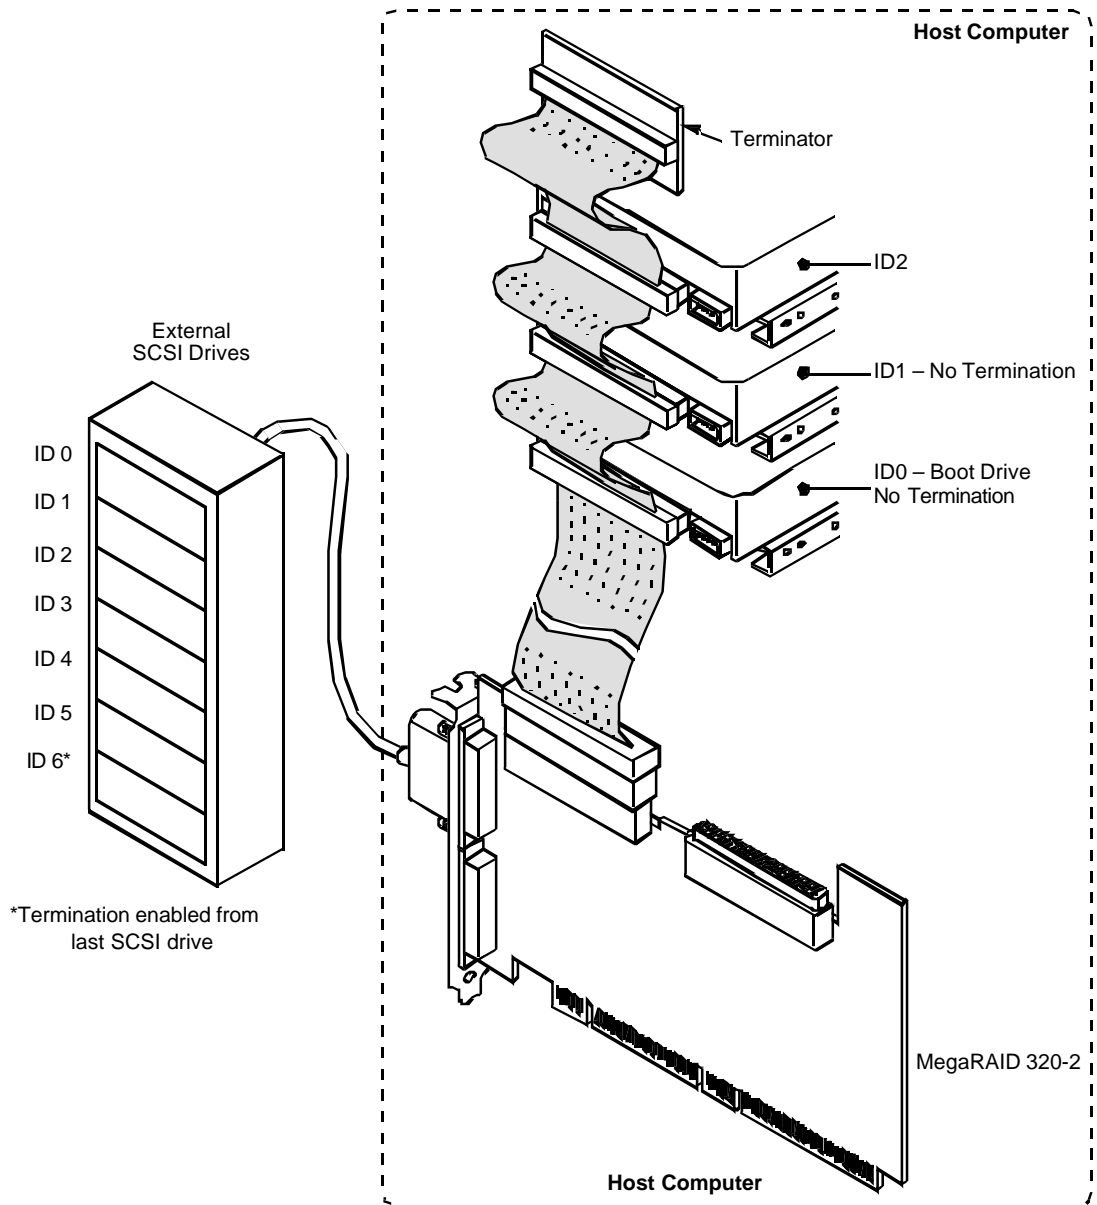


Connecting Non-Disk SCSI Devices

SCSI tape drives, and CD-ROM drives must each have a unique SCSI ID regardless of the SCSI channel they are attached to. The general rule for Unix systems is:

- tape drive set to SCSI ID 2
- CD-ROM drive set to SCSI ID 5

Make sure that no hard drives are attached to the same SCSI Channel as the non-disk SCSI devices. Drive performance will be significantly degraded if SCSI hard disk drives are attached to this channel.

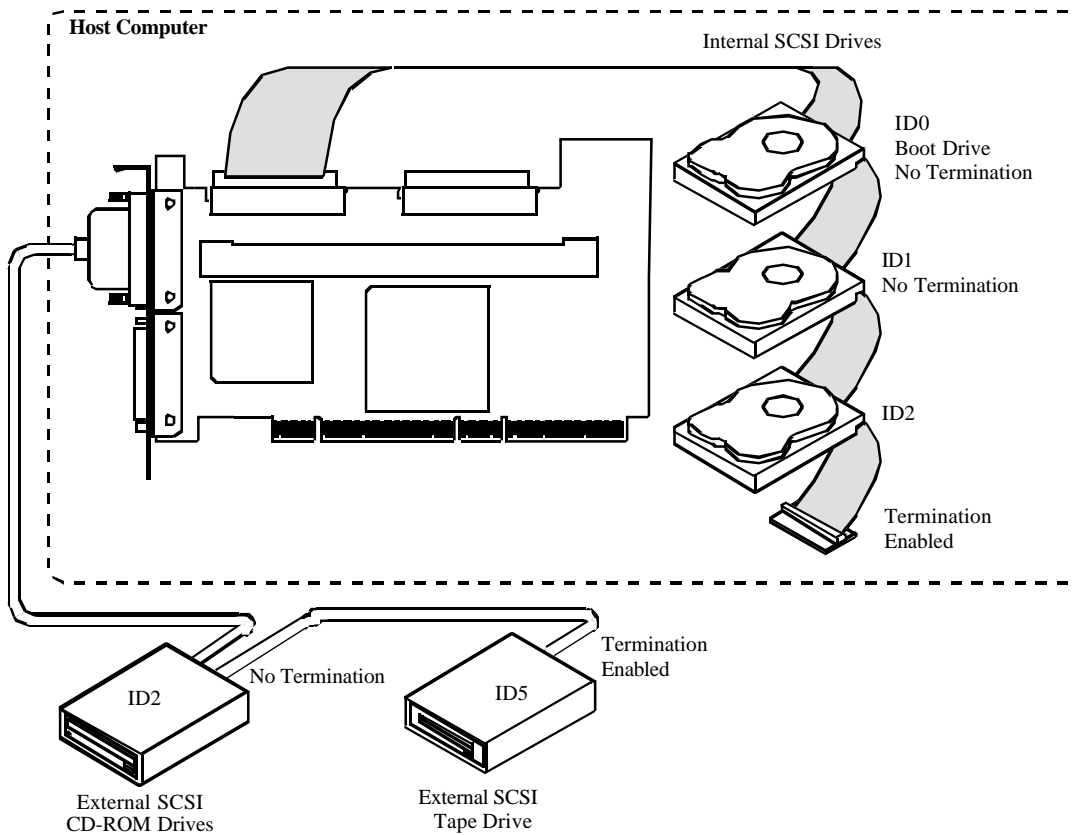

Step 7 Set SCSI Terminator Power

J18 and J19

These jumpers control TermPWR for the MegaRAID SCSI channels. See the documentation for each SCSI device for information about enabling TermPWR. The factory settings supply TermPWR from the PCI bus.

Important

The SCSI channels need Termination power to operate. If a channel is not being used and no auxiliary power source is connected, change the jumper setting for that channel to supply TermPWR from the PCI bus.

J18 SCSI Channel 0 – Short Pins 1-2 for PCI power.


J19 SCSI Channel 1 – Short Pins 1-2 for PCI power.

Step 8 Connect Battery Pack (Optional)

You can install a battery pack on the RAID controller using the J10 connector.

Board with battery

You can install a battery pack on the card itself. You can screw the battery to the board through the backside of the board, using the three holes in the board. Connect the three wires from the battery pack to J10, the external battery connector. A drawing of part of a RAID controller with battery backup is shown below.

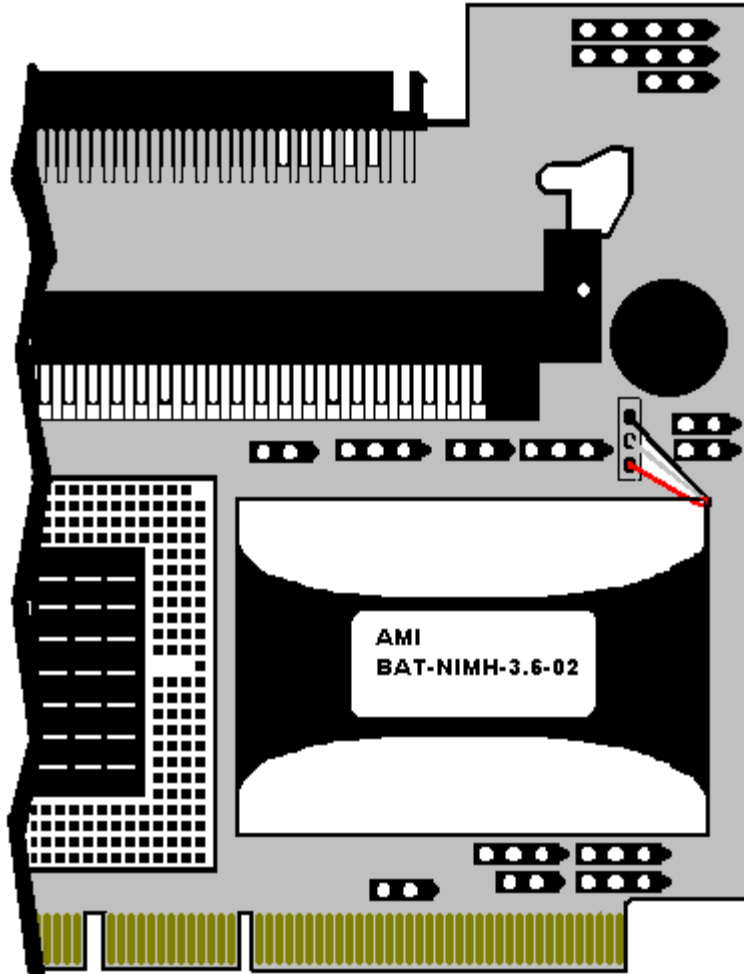

J10 Battery Connector Pinout

Table 6-10 displays the J10 pinout.

Table 6-10. J10 Battery Connector Pinout

Pin	Description
3	VBAT1+ (red wire)
2	TSENSE (white wire)
1	VBAT- (black wire)

Configure Battery Backup

After installing the MegaRAID controller and booting, press <Ctrl><M> to access the BIOS Configuration Utility. Select the Objects menu, then select Battery Backup. The battery backup menu displays.

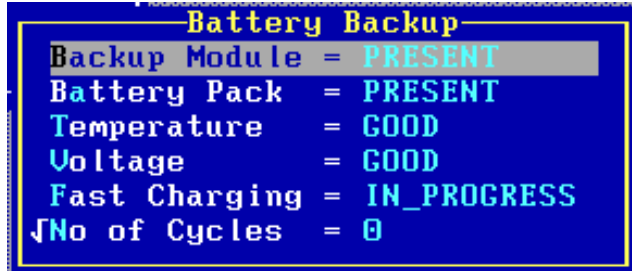


Table 6-11 describes the battery backup menu options.

Table 6-11. Battery Backup Menu Options

Menu Item	Explanation
Battery Pack	PRESENT will appear if the battery pack is properly installed; ABSENT if it is not.
Temperature	GOOD appears if the temperature is within the normal range. HIGH appears if the module is too hot.
Voltage	GOOD appears if the voltage is within the normal range. BAD appears if the voltage is out of range.
Fast Charging	COMPLETED appears if the fast charge cycle is done. CHARGING appears if the battery pack is charging.
No. of Cycles	<p>This must be configured. When first installing a battery pack, set the Charge Cycle to 0. The screen below appears when you select No. of Cycles. Choose YES to reset the number of cycles to zero.</p> <p>After 1100 charge cycles, the life of the battery pack is assumed to be over and you must replace the battery pack.</p>

Charging the Battery Pack

The battery pack is shipped uncharged. You must charge the battery pack before you can use it. Table 6-12 displays the minimum time that the battery must be charged.

Table 6-12. Battery Pack Information

LSI Logic Part Number	Description	Time to Charge
BAT-NIMH-3.6-02	Battery, NIMH, 3.6V, 600mA onboard battery pack with mounting brackets	6 hours

The full data retention time is not available until the battery pack is fully charged. It is a good idea to set the MegaRAID controller cache write policy option to *Write-Through* during the battery pack charging period. After the battery pack is fully charged, you can change the cache write policy to *Write-Back*.

Changing the Battery Pack

The MegaRAID configuration software warns when the battery pack must be replaced. A new battery pack should be installed every 1 to 5 years. Table 6-13 contains the procedure for changing the battery pack.

Table 6-13. Procedure for Changing the Battery Pack

Step	Action
1	Bring down the operating system properly. Make sure that cache memory has been flushed. You must perform a system reset if operating under DOS. When the computer reboots, the MegaRAID SCSI 320-2 Ultra320 controller flushes cache memory. Turn the computer power off. Remove the computer cover. Remove the MegaRAID controller.
2	Disconnect the battery pack cable or harness from J10 on the MegaRAID SCSI 320-2 Ultra320 card.
3	Install a new battery pack and connect the new battery pack to J10.
4	Disable write-back caching using MegaRAID Manager or Power Console Plus.

Disposing of a Battery Pack

Warning

Do not dispose of the MegaRAID battery pack by fire. Do not mutilate the battery pack. Do not damage it in any way. Toxic chemicals can be released if it is damaged. Do not short-circuit the battery pack.

The material in the battery pack contains heavy metals that can contaminate the environment. Federal, state, and local laws prohibit disposal of some rechargeable batteries in public landfills. These batteries must be sent to a specific location for proper disposal. Call the Rechargeable Battery Recycling Corporation at 352-376-6693 (FAX: 352-376-6658) for an authorized battery disposal site near you. For a list of battery disposal sites, write to:

Rechargeable Battery Recycling Corporation
2293 NW 41st Street
Gainesville FL 32606
Voice: 352-376-6693
FAX: 352-376-6658

Battery Disposal Laws

Important


Most used Nickel-Metal Hydride batteries are not classified as hazardous waste under the federal RCRA (Resource Conservation and Recovery Act). Although Minnesota law requires that Nickel-Metal Hydride batteries be labeled “easily removable” from consumer products, and that Nickel-Metal Hydride batteries must be collected by manufacturers, the Minnesota Pollution Control Agency (MPCA) has granted a temporary exemption from these requirements.

Other Laws in Other Areas


LSI Logic reminds you that you must comply with all applicable battery disposal and hazardous material handling laws and regulations in the country or other jurisdiction where you are using an optional battery pack on the MegaRAID SCSI 320-2 Ultra320 controller.

Step 9 Install MegaRAID Card

The MegaRAID card can plug into a 32-bit or 64-bit PCI slot that receives 5 V, and, optionally, 3.3 V through the motherboard. Choose a PCI slot and align the MegaRAID controller card bus connector to the slot. Press down gently but firmly to make sure that the card is properly seated in the slot. The bottom edge of the controller card should be flush with the slot.

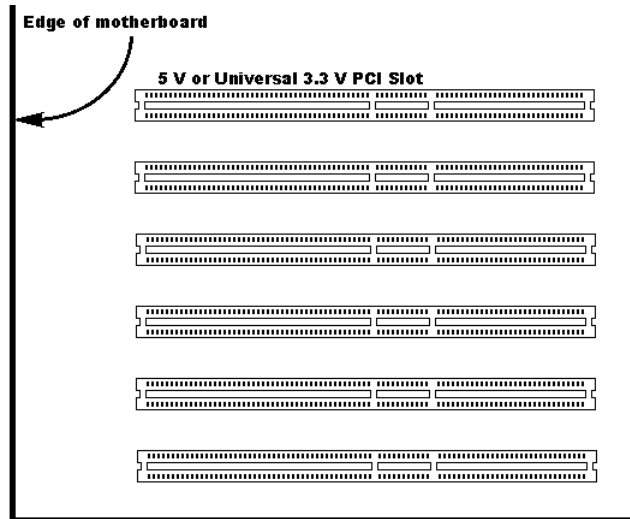

Insert the MegaRAID card in a PCI slot as shown below. Screw the bracket to the computer frame.

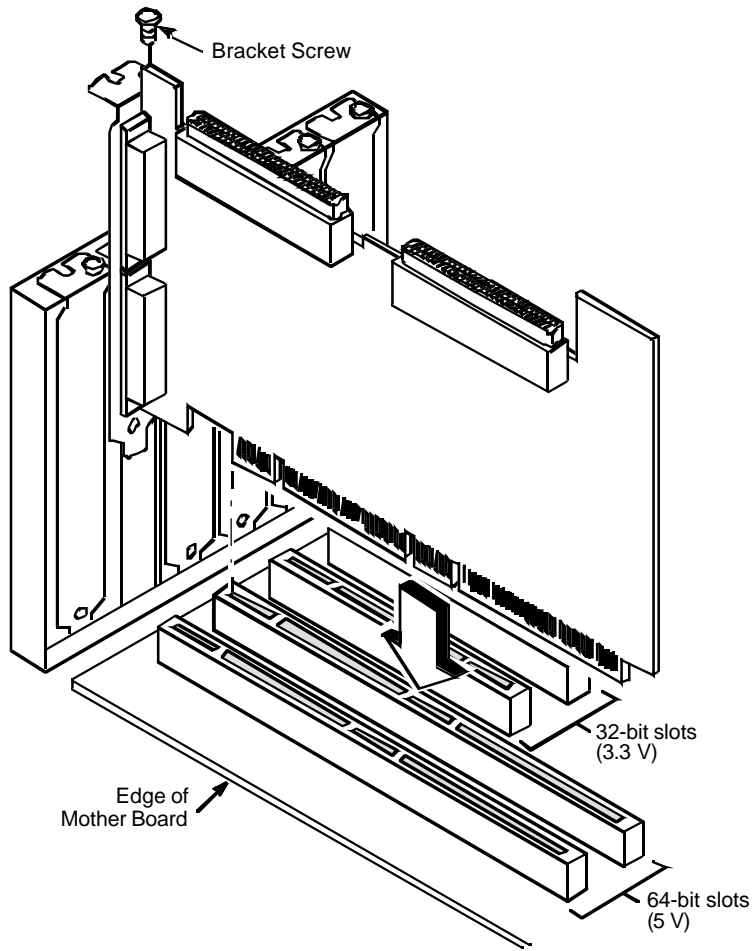

Step 10 Connect SCSI Cables

SCSI Connectors

 
Connect the SCSI cables to the SCSI devices. MegaRAID provides two types of SCSI connectors:

- external
- internal

External Connectors

J9 provides one ultra high-density external connector for SCSI channels 0.

J17 provides one ultra high-density connector for SCSI channel 1.



Internal Connectors

Internal connectors are provided for channels A and B only. J7 is the internal connector for Channel 0. J8 is the internal connector for channel 1.

See the board layout for the location of J7 and J8.

Connect SCSI Devices

Follow the steps in Table 6-13 when connecting SCSI devices.

Table 6-14. Procedure for Connecting SCSI Devices

Action	Description
1	Disable termination on any SCSI device that does <i>not</i> sit at the end of the SCSI bus.
2	Configure all SCSI devices to supply TermPWR.
3	Set proper target IDs (TIDs) for all SCSI devices.
4	Distribute SCSI devices evenly across the SCSI channels for optimum performance.
5	Do not exceed 12 meters for the cable length.
6	Try to connect all non-disk SCSI devices to a SCSI channel that has no SCSI disk drives connected to it.

Cable Suggestions

System throughput problems can occur if SCSI cable use is not maximized. You should:

- Use the shortest SCSI cables.
- LVD mode cable lengths should be no more than 25 meters with two devices and no more than 12 meters with eight devices.
- Use active termination.
- Avoid clustering the stubs.
- Cable stub length should be no more than 0.1 meter (4 inches).
- Route SCSI cables carefully.
- Use high-impedance cables.
- Do not mix cable types (choose flat cable for inside the enclosure, and round shielded cables for outside the enclosure.)
- Ribbon cables have fairly good cross-talk rejection characteristics.

Step 11 Set Target IDs

Set target identifiers (TIDs) on the SCSI devices. Each device in a specific SCSI channel must have a unique TID in that channel. Non-disk devices (CD-ROM or tapes) should have unique SCSI IDs *regardless of the channel where they are connected*. See the documentation for each SCSI device to set the TIDs. The MegaRAID controller automatically occupies TID 7 in each SCSI channel. Eight-bit SCSI devices can only use the TIDs from 0 to 6. 16-bit devices can use the TIDs from 0 to 15. The arbitration priority for a SCSI device depends on its TID.

Table 6-15 displays the Target IDs.

Table 6-15. Target IDs

Priority	Highest						Lowest					
TID	7	6	5	...	2	1	0	15	14	...	9	8

Important

Non-disk devices (CD-ROM or tapes) should have unique SCSI IDs regardless of the channel they are connected to. ID 0 cannot be used for non-disk devices because they are limited to IDs 1 through 6. There is a limit of six IDs for non-disk devices per controller.

Device Identification on MegaRAID Controllers

Example of MegaRAID ID Mapping

Table 6-16 displays an example of ID mapping for a MegaRAID board.

Table 6-16. Example of MegaRAID ID Mapping

ID	Channel 0	Channel 1
0	A1-1	A1-2
1	A2-1	CD
2	CD	A2-3
3	A2-5	A2-6
4	CD	A3-1
5	A4-1	Tape
6	Optical	A5-1
7	Reserved	Reserved
8	A5-2	A5-3
9	A5-6	A5-7
10	A6-1	A6-2
11	A6-4	A6-5
12	A6-7	A6-8
13	A7-2	A7-3
14	A7-5	A7-6
15	A7-8	A8-1

As Presented to the Operating System

Table 6-17 displays the IDs as they are presented to the operating system.

Table 6-17. IDs as Presented to the Operating System

ID	LUN	Device	ID	LUN	Device
0	0	Disk (A1-X)	1	0	
0	1	Disk (A2-X)	2	0	CD
0	2	Disk (A3-X)	3	0	Tape
0	3	Disk (A4-X)	4	0	CD
0	4	Disk (A5-X)	5	0	Tape
0	5	Disk (A6-X)	6	0	
0	6	Disk (A7-X)			
0	7	Disk (A8-X)			

Step 12 Power Up

Replace the computer cover and reconnect the AC power cords. Turn power on to the host computer. Set up the power supplies so that the SCSI devices are powered up at the same time as or before the host computer. If the computer is powered up before a SCSI device, the device might not be recognized.

During boot, the MegaRAID BIOS message appears:

```
MegaRAID SCSI 320-2 Disk Array Adapter BIOS Version x.xx date
Copyright (c) LSI Logic
Firmware Initializing... [ Scanning SCSI Device ...(etc.)... ]
```

The firmware takes several seconds to initialize. During this time the adapter will scan each SCSI channel. When it is ready, the following lines appear:

```
Host Adapter-1 Firmware Version x.xx DRAM Size 32 MB
0 Logical Drives found on the Host Adapter
0 Logical Drives handled by BIOS
Press <Ctrl><M> to run MegaRAID BIOS Configuration Utility
```

The <Ctrl> <M> prompt times out after several seconds.

The MegaRAID SCSI 320-2 host adapter (controller) number, firmware version, and cache DRAM size are displayed in the second portion of the BIOS message. The numbering of the controllers follows the PCI slot scanning order used by the host motherboard.

Step 13 Run MegaRAID Configuration Utility

Press <Ctrl> <M> to run the MegaRAID Configuration Utility. See the *MegaRAID Configuration Software Guide* for information about running the MegaRAID Configuration Utility.

Step 14 Install the Operating System Driver

MegaRAID can operate under MS-DOS® or any DOS-compatible operating system using the standard AT BIOS INT 13h Hard Disk Drive interface. To operate with other operating systems, you must install software drivers. MegaRAID provides software drivers on the Driver and Documentation CD for the following operating systems:

- MS-DOS® version 6.xx or later
- Microsoft Windows NT® 4.0, Windows® 2000, Windows XP, Windows .NET
- Novell® NetWare® 5.1, 6.0
- Red Hat Linux



NOTE: Refer to the *MegaRAID Driver Installation Guide* for the procedures used to install operating system drivers.

Important

When booting the system from a drive connected to a MegaRAID controller and using EMM386.EXE, MEGASPI.SYS must be loaded in CONFIG.SYS before EMM386.EXE is loaded. If you do not do this, you cannot access the boot drive after EMM386 is loaded.

Summary

This chapter discussed hardware installation. See the *MegaRAID Configuration Software Guide* for information about the MegaRAID software utilities. You configure the RAID system using the software configuration utilities, which are listed in Table 6-19.

Table 6-19. Configuration Utilities

Configuration Utility	Operating System
MegaRAID BIOS Configuration Utility	Independent of the operating system
WebBIOS Configuration Utility	Independent of the operating system
MegaRAID Manager	Novell NetWare 5.1, 6.0 Red Hat Linux 7.2, 7.3
Power Console Plus	Microsoft Windows NT, 2000, XP, .NET

Chapter 7

Cluster Installation and Configuration

Overview

Physically, a cluster is a grouping of two independent servers that can access the same shared data storage and provide services to a common set of clients. With current technology, this usually means servers connected to common I/O buses and a common network for client access.

Logically, a cluster is a single management unit. Any server can provide any available service to any authorized client. The servers must have access to the same shared data and must share a common security model. Again, with current technology, this generally means that the servers in a cluster will have the same architecture and run the same version of the same operating system.

The Benefits of Clusters

Clusters provide three basic benefits:


- improved application and data availability
- scalability of hardware resources
- simplified management of large or rapidly growing systems

Installation and Configuration

Use the procedure in Table 7-1 to install and configure your system as part of a cluster.

Table 7-1. Procedure to Install and Configure Your System as Part of a Cluster


Step	Action
1	Unpack the controller following the instructions on page 43.
2	Set the hardware termination for the controller as “always on”. Refer to the J4 and J5 Termination Enable jumper settings for more information.
3	Configure the IDs for the drives in the enclosure.
4	Install one controller at a time. Press <Ctrl> <M> at BIOS initialization to configure the options in the steps 5 – 11. Do not attach the disks yet.
5	Set the controller to Cluster Mode in the Objects > Adapter > Cluster Mode menu.
6	Disable the BIOS in the Objects > Adapter > Enable/Disable BIOS menu.
7	Change the initiator ID in the Objects > Adapter > Initiator ID menu.
8	Power down the first system.
9	Attach the controller to the shared array.



Step	Action
10	Configure the first controller to the desired arrays using the Configure > New Configuration menu.  <i>NOTE: Use the whole array size of any created array. Do not create partitions of different sizes on the RAID arrays from the BIOS Configuration Utility (<Ctrl><M>) because they cannot be failed over individually when assigned driver letters in Windows 2000.</i>
11	Follow the on-screen instructions to create arrays and save the configuration.
12	Repeat steps 4 – 7 for the second controller.
13	Power down the second server.
14	Attach the cables for the second controller to the shared enclosure and power up the second system.
15	If a configuration mismatch occurs, enter the <Ctrl> <M> utility, then go to the Configure-> View/Add Configuration > View Disk menu to view the disk configuration.
16	Save the configuration.
17	Proceed to the driver installation for a Microsoft cluster environment.

Driver Installation Instructions under Microsoft Windows 2000 Advanced Server

After the hardware is set up for the MS cluster configuration, perform the procedure in Table 7-2 to configure the driver.

Table 7-2. Procedure for Driver Installation under Microsoft Windows 2000 Advanced Server

Step	Action
1	When the controller is added after a Windows 2000 Advanced Server installation, the operating system detects the controller.
2	The following screen displays the detected hardware device. Click on Next. 

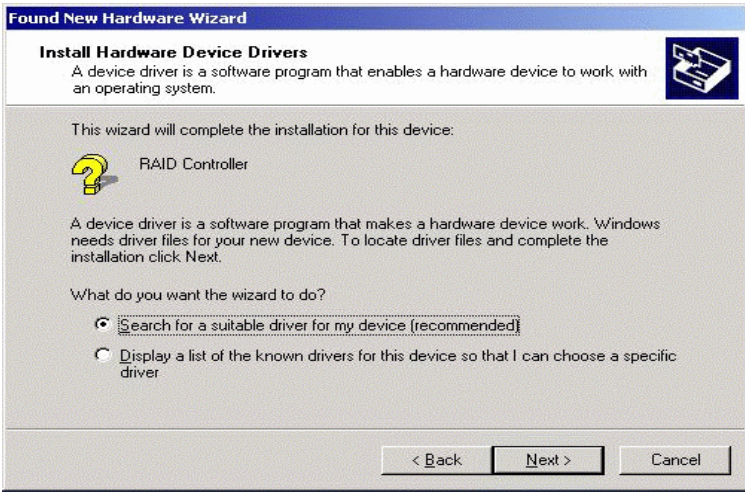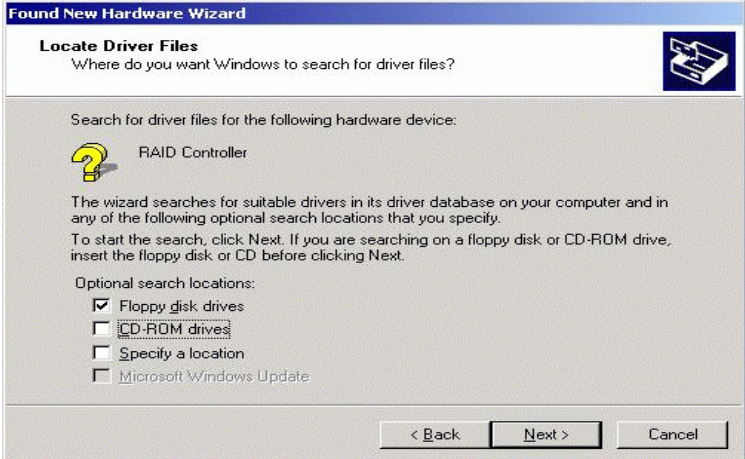Step	Action
3	<p>The following screen appears. This screen is used to locate the device driver for the hardware device. Select Search for a suitable driver... and click on Next.</p> 
4	<p>The following screen displays. Insert the floppy diskette with the appropriate driver disk for Windows 2000, then select Floppy disk drives in the screen below and click on Next.</p> 
5	<p>The Wizard detects the device driver on the diskette and the "Completing the upgrade device driver" wizard displays the name of the controller. Click on Finish to complete the installation.</p>
6	<p>Repeat steps 1 – 5 to install the device driver on the second system.</p>
7	<p>After the cluster is installed, and both nodes are in the Microsoft Windows 2000 Advanced Server, installation will detect a SCSI processor device.</p> <p>On the Found New Hardware Wizard prompt, choose to display a list of the known drivers, so that you can choose a specific driver.</p>
8	<p>Click on Next.</p>
9	<p>Select the driver that you want to install for the device. If you have a disk with the driver you want to install, click on Have Disk.</p>

Step	Action
10	Select Other devices from the list of hardware types, then click on Next.
11	Insert the disk containing the driver into the selected drive and click on OK.
12	Select the processor device and click on Next.
13	On the final screen, click on Finish to complete the installation.
14	Repeat the process on the peer system.

Network Requirements

The network requirements for clustering are:

- A unique NetBIOS cluster name
- Five unique, static IP addresses:
 - two are for the network adapters on the internal network
 - two are for the network adapters on the external network
 - one is for the cluster itself
- A domain user account for Cluster Service (all nodes must be part of the same domain.)
- Two network adapters for each node—one for connection to the external network and the other for the node-to-node internal cluster network. If you do not use two network adapters for each node, your configuration is unsupported. HCL certification requires a separate private network adapter.

Shared Disk Requirements

Disks can be shared by the nodes. The requirements for sharing disks are as follows:

- Physically attach all shared disks, including the quorum disk, to the shared bus.
- Make sure that all disks attached to the shared bus are seen from all nodes. You can check this at the setup level in <Ctrl> <M> (the BIOS configuration utility.)
- Assign unique SCSI identification numbers to the SCSI devices and terminate the devices properly. Refer to the storage enclosure manual about installing and terminating SCSI devices.
- Configure all shared disks as basic (not dynamic.)
- Format all partitions on the disks as NTFS.

It is best to use fault-tolerant RAID configurations for all disks. This includes RAID levels 1, 5, 10, or 50.

Cluster Installation

Installation Overview

During installation, some nodes are shut down, and other nodes are rebooted. This is necessary to ensure uncorrupted data on disks attached to the shared storage bus. Data corruption can occur when multiple nodes try to write simultaneously to the same disk, if that disk is not yet protected by the cluster software.

Table 7-3 shows which nodes and storage devices should be powered on during each step.

Table 7-3. Nodes and Storage Devices

Step	Node 1	Node 2	Storage	Comments
Set Up Networks	On	On	Off	Make sure that power to all storage devices on the shared bus is turned off. Power on all nodes.
Set up Shared Disks	On	Off	On	Power down all nodes. Next, power on the shared

				storage, then power on the first node.
Verify Disk Configuration	Off	On	On	Shutdown the first node. Power on the second node.
Configure the First Node	On	Off	On	Shutdown all nodes. Power on the first node.
Configure the Second Node	On	On	On	Power on the second node after the first node was successfully configured.
Post-installation	On	On	On	All nodes should be active.

Before installing the Cluster Service software you must follow the steps below:

- Install Windows 2000 Advanced Server or Windows 2000 Datacenter Server on each node
- Setup networks
- Setup disks



NOTE: These steps must be completed on every cluster node before proceeding with the installation of Cluster Service on the first node.

To configure the Cluster Service on a Windows 2000-based server, you must be able to log on as administrator or have administrative permissions on each node. Each node must be a member server, or be domain controllers inside the same domain. A mix of domain controllers and member servers in a cluster is not acceptable.

Installing the Windows 2000 Operating System

Install Microsoft Windows 2000 to each node. See your Windows 2000 manual on how to install the Operating System.

Log on as administrator before you install the Cluster Services.

Setting Up Networks



NOTE: Do not allow both nodes to access the shared storage device before the Cluster Service is installed. In order to prevent this, power down any shared storage devices and then power up nodes one at a time. Install the Clustering Service on at least one node and make sure it is online before you power up the second node.


Install at least two network card adapters per each cluster node. One network card adapter card is used to access the public network. The second network card adapter is used to access the cluster nodes.


The network card adapter that is used to access the cluster nodes establishes the following:

- Node to node communications
- Cluster status signals
- Cluster Management

Check to make sure that all the network connections are correct. Network cards that access the public network must be connected to the public network. Network cards that access the cluster nodes must connect to each other.

Verify that all network connections are correct, with private network adapters connected to other private network adapters only, and public network adapters connected to the public network. View the Network and Dial-up Connections screen to check the connections.

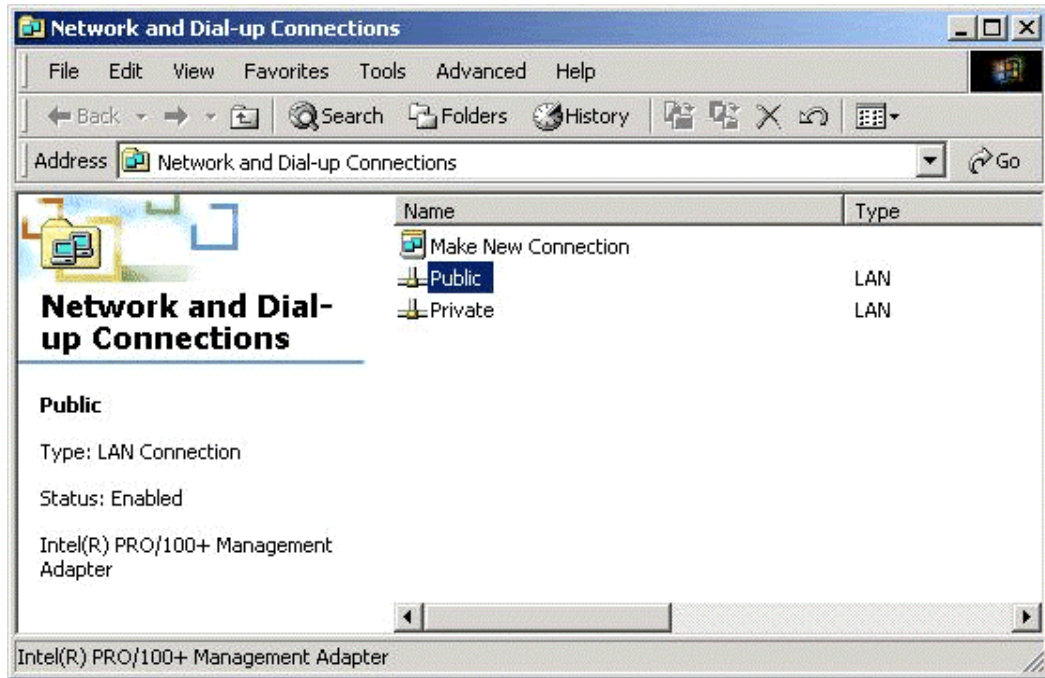

 **NOTE:** Use crossover cables for the network card adapters that access the cluster nodes. If you do not use the crossover cables properly, the system will not detect the network card adapter that accesses the cluster nodes. If the network card adapter is not detected, then you cannot configure the network adapters during the Cluster Service installation.

However, if you install Cluster Service on both nodes, and both nodes are powered on, you can add the adapter as a cluster resource and configure it properly for the cluster node network in Cluster Administrator.

Configuring the Cluster Node Network Adapter



NOTE: Which network adapter is private and which is public depends upon your wiring. For the purposes of this chapter, the first network adapter (Local Area Connection) is connected to the public network, and the second network adapter (Local Area Connection 2) is connected to the private cluster network. This may not be the case in your network.

Renaming the Local Area Connections

In order to make the network connection more clear, you can change the name of the Local Area Connection (2). Renaming it will help you identify the connection and correctly assign it. Follow the steps in Table 7-4 to change the name.

Table 7-4. Procedure for Renaming the Local Area Connections

Step	Description
1	Right-click on the Local Area Connection 2 icon.
2	Click on Rename.
3	Type Private Cluster Connection into the textbox, then press Enter.
4	Repeat steps 1-3 to change the name of the public LAN network adapter to Public Cluster Connection.
5	The renamed icons should look like those in the picture above. Close the Networking and Dial-up Connections window. The new connection names automatically replicate to other cluster servers as the servers are brought online.

Setting up the First Node in your Cluster

Follow the steps in Table 7-5 to set up the first node in your cluster.

Table 7-5. Procedure for Setting up the First Node in your Cluster

Step	Description
1	Right-click on My Network Places, then click on Properties.
2	Right-click the Private Connection icon.
3	Click on Status. The Private Connection Status window shows the connection status, as well as the speed of connection. If the window shows that the network is disconnected, examine cables and connections to resolve the problem before proceeding.
4	Click on Close
4	Right-click Private Connection again
5	Click on Properties.
6	Click on Configure.
7	Click on Advanced. The network card adapter properties window displays.
8	You should set network adapters on the private network to the actual speed of the network, rather than the default automated speed selection. Select the network speed from the drop-down list. Do not use "Auto-select" as the setting for speed. Some adapters can drop packets while determining the speed. Set the network adapter speed by clicking the appropriate option, such as Media Type or Speed.
9	Configure identically all network adapters in the cluster that are attached to the same

1	Public Cluster Connection	192.168.0.171
1	Private Cluster Connection	10.1.1.1
2	Public Cluster Connection	192.168.0.172
2	Private Cluster Connection	10.1.1.2

In this example, you would type:

```
Ping 192.168.0.172
```

and

```
Ping 10.1.1.1
```

from Node 1.

Then you would type:

```
Ping 192.168.0.172
```

and

```
10.1.1.1
```

from Node 2.

To confirm name resolution, ping each node from a client using the node's machine name instead of its IP number.

Verifying Domain Membership


All nodes in the cluster have to be members of the same domain and capable of accessing a domain controller and a DNS Server. You can configure them as either member servers or domain controllers. If you plan to configure one node as a domain controller, you should configure all other nodes as domain controllers in the same domain as well.

Setting Up a Cluster User Account


The Cluster Service requires a domain user account that the Cluster Service can run under. You must create the user account before installing the Cluster Service. The reason for this is that setup requires a user name and password. This user account should not belong to a user on the domain. Table 7-7 contains the procedure for setting up a cluster user account.

Table 7-7. Procedure for Setting Up a Cluster User Account

Step	Description
1	Click on Start.
2	Point to Programs, then point to Administrative Tools.
3	Click on Active Directory Users and Computers.
4	Click the plus sign (+) to expand the domain name (if it is not already expanded.)
5	Click on Users.
6	Right-click on Users.
7	Point to New and click on User.

8	Type in the cluster name and click on Next.
9	Set the password settings to User Cannot Change Password and Password Never Expires.
10	Click on Next, then click on Finish to create this user.  NOTE: <i>If your company's security policy does not allow the use of passwords that never expire, you must renew the password on each node before password expiration. You must also update the Cluster Service configuration</i>
11	Right-click on Cluster in the left pane of the Active Directory Users and Computers snap-in.
12	Select Properties from the context menu.
13	Click on Add Members to a Group.
14	Click on Administrators and click on OK. This gives the new user account administrative privileges on this computer.
15	Close the Active Directory Users and Computers snap-in.

Setting Up Shared Disks

 **Warning:** Make sure that Windows 2000 Advanced Server or Windows 2000 Datacenter Server and the Cluster Service are installed and running on one node before you start an operating system on another node. If the operating system is started on other nodes before you install and configure Cluster Service and run it on at least one node, the cluster disks will have a high chance of becoming corrupted.


To continue, power off all nodes. Power up the shared storage devices. Once the shared storage device is powered up, power up node one.

Quorum Disk

The quorum disk stores cluster configuration database checkpoints and log files that help manage the cluster. Windows 2000 makes the following quorum disk recommendations:

- Create a small partition [Use a minimum of 50 megabytes (MB) as a quorum disk. Windows 2000 generally recommends a quorum disk to be 500 MB.]
- Dedicate a separate disk for a quorum resource. The failure of the quorum disk would cause the entire cluster to fail; therefore, Windows 2000 strongly recommends that you use a volume on a RAID disk array.

During the Cluster Service installation, you have to provide the drive letter for the quorum disk.

 **NOTE:** *For our example, we use the letter E for the quorum disk drive letter.*

Configuring Shared Disks

Perform the procedure in Table 7-8 to configure the shared disks.

Table 7-8. Procedure for Configuring the Shared Disks

Step	Description
1	Right-click on My Computer.
2	Click on Manage, then click on Storage.
3	Double-click on Disk Management.
4	Make sure that all shared disks are formatted as NTFS and are designated as Basic. If you connect a new drive, the Write Signature and Upgrade Disk Wizard starts automatically. If this occurs, click on Next to go through the wizard. The wizard sets the disk to dynamic, but you can uncheck it at this point to set it to basic. To reset the disk to Basic, right-click on Disk # (where # identifies the disk that you are working with) and click on Revert to Basic Disk.
5	Right-click on unallocated disk space.
6	Click on Create Partition...
7	The Create Partition Wizard begins. Click on Next twice.
8	Enter the desired partition size in MB and click on Next.
9	Accept the default drive letter assignment by clicking on Next.
10	Click on Next to format and create a partition.

Assigning Drive Letters

After you have configured the bus, disks, and partitions, you must assign drive letters to each partition on each clustered disk. Follow the steps in Table 7-9 to assign drive letters.



NOTE: Mountpoints is a feature of the file system that lets you mount a file system using an existing directory without assigning a drive letter. Mountpoints is not supported on clusters. Any external disk that is used as a cluster resource must be partitioned using NTFS partitions and have a drive letter assigned to it. Use the procedure below to assign driver letters.

Table 7-9. Procedure for Assigning Driver Letters

Step	Description
1	Right-click on the desired partition and select Change Drive Letter and Path.
2	Select a new drive letter.
3	Repeat steps 1 and 2 for each shared disk.
4	Close the Computer Management window.

Verifying Disk Access and Functionality

Perform the steps in Table 7-10 to verify disk access and functionality.

Table 7-10. Procedure for Setting Up a Cluster User Account

Step	Description
1	Click on Start.
2	Click on Programs. Click on Accessories, then click on Notepad.
3	Type some words into Notepad and use the File/Save As command to save it as a test file called test.txt. Close Notepad.
4	Double-click on the My Documents icon.
5	Right-click on test.txt and click on Copy.
6	Close the window.
7	Double-click on My Computer.
8	Double-click on a shared drive partition.
9	Click on Edit and click on Paste.
10	A copy of the file should now exist on the shared disk.
11	Double-click on test.txt to open it on the shared disk.
12	Close the file.
13	Highlight the file and press the Del key to delete it from the clustered disk.
14	Repeat the process for all clustered disks to make sure they can be accessed from the first node.

After you complete the procedure, shut down the first node, power on the second node and repeat the procedure above. Repeat again for any additional nodes. After you have verified that all nodes can read and write from the disks, turn off all nodes except the first, and continue with this guide.

Cluster Service Software Installation



Before you begin the Cluster Service Software installation on the first node, make sure that all other nodes are either powered down or stopped and that all shared storage devices are powered on.



Cluster Configuration Wizard


To create the cluster, you must provide the cluster information. The Cluster Configuration Wizard allows you to input this information. Follow the steps in Table 7-11 to use the Wizard.

Table 7-11. Procedure for Using the Cluster Configuration Wizard

Step	Description
1	Click on Start.
2	Click on Settings, then click on Control Panel.
3	Double-click on Add/Remove Programs.
4	Double-click on Add/Remove Windows Components. The following window displays.

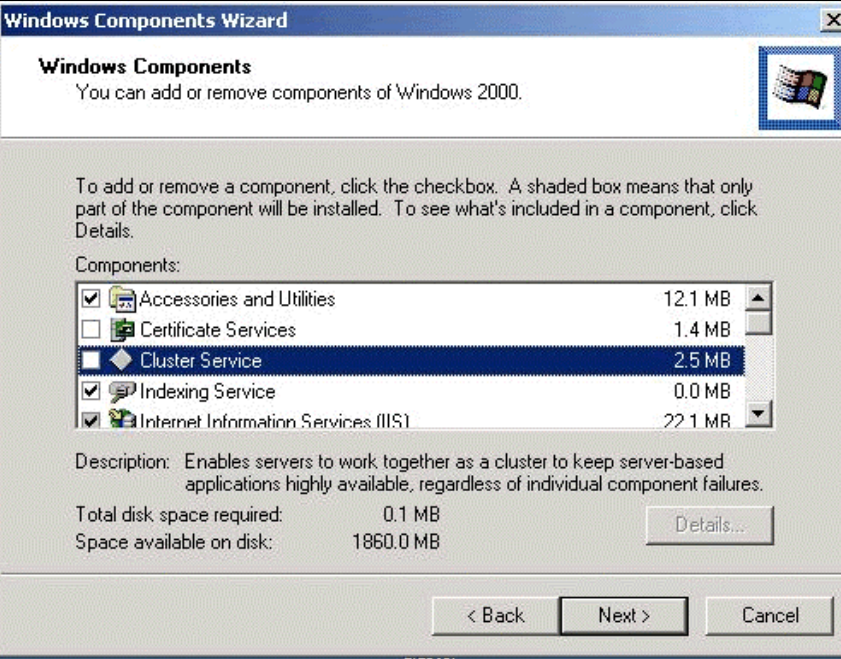
	
5	Select Cluster Service, then click on Next.
6	<p>Cluster Service files are located on the Windows 2000 Advanced Server or Windows 2000 Datacenter Server CD-ROM.</p> <p>Enter x:\i386 (where x is the drive letter of your CD-ROM). If you installed Windows 2000 from a network, enter the appropriate network path instead. (If the Windows 2000 Setup flashscreen displays, close it.)</p>
7	<p>Click on OK. The following screen displays.</p> 
8	Click on Next.
9	<p>The Hardware Configuration Certification window appears.</p> <p>Click on I Understand to accept the condition that Cluster Service is supported only on</p>

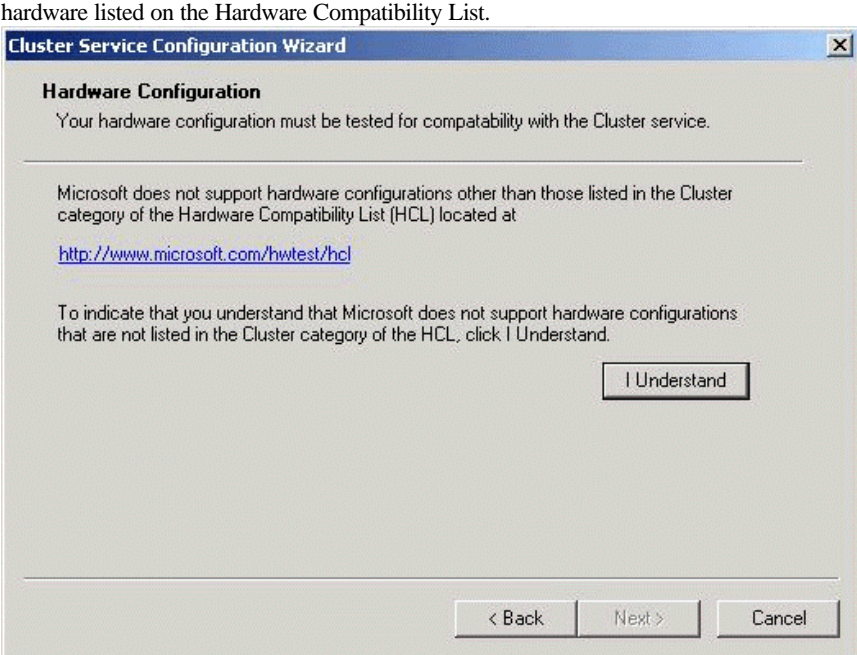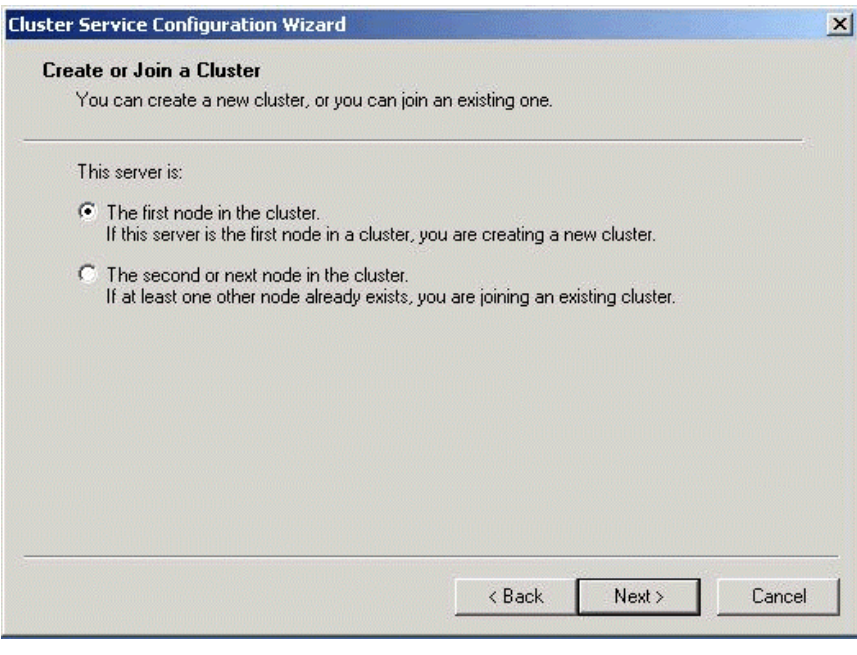	<p>hardware listed on the Hardware Compatibility List.</p> 
10	<p>This is the first node in the cluster; therefore, you must create the cluster itself. Select The first node in the cluster, as shown below and then click on Next.</p> 
11	<p>Enter a name for the cluster (up to 15 characters), and click on Next. (In our example, the cluster is named ClusterOne.)</p>
12	<p>Type the user name of the Cluster Service account that you created during the pre-installation. (In our example, the user name is cluster.) Do not enter a password.</p> <p>Type the domain name, then click on Next.</p> <p>At this point the Cluster Service Configuration Wizard validates the user account and</p>

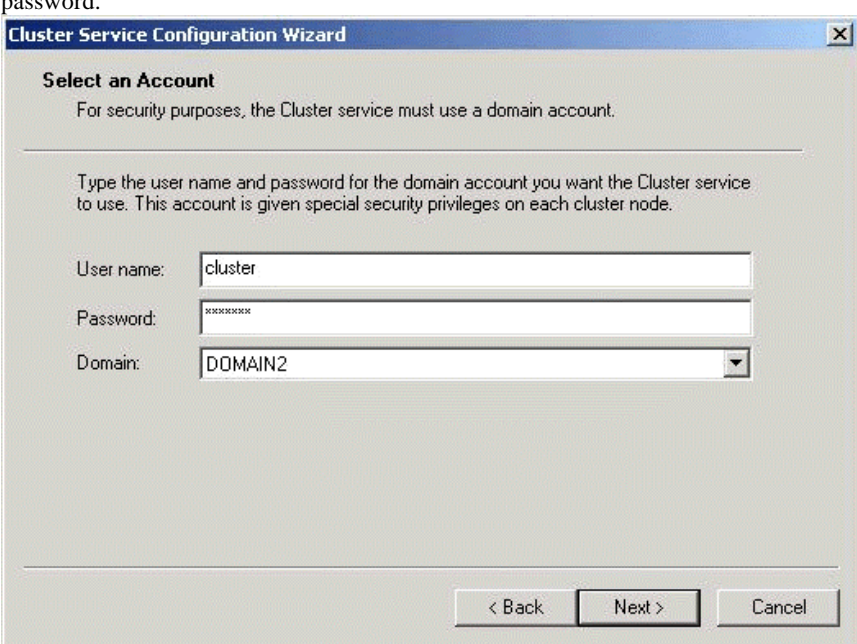	<p>password.</p>  <p>13</p> <p>Click on Next.</p> <p>The Add or Remove Managed Disks screen displays next. This screen is in the following section about configuring cluster disks.</p>
--	---

Configuring Cluster Disks

Windows 2000 Managed Disks displays all SCSI disks, as shown on the screen below. It displays SCSI disks that do not reside on the same bus as the system disk. Because of this, a node that has multiple SCSI buses will list SCSI disks that are not to be used as shared storage. You must remove any SCSI disks that are internal to the node and not to be shared storage.

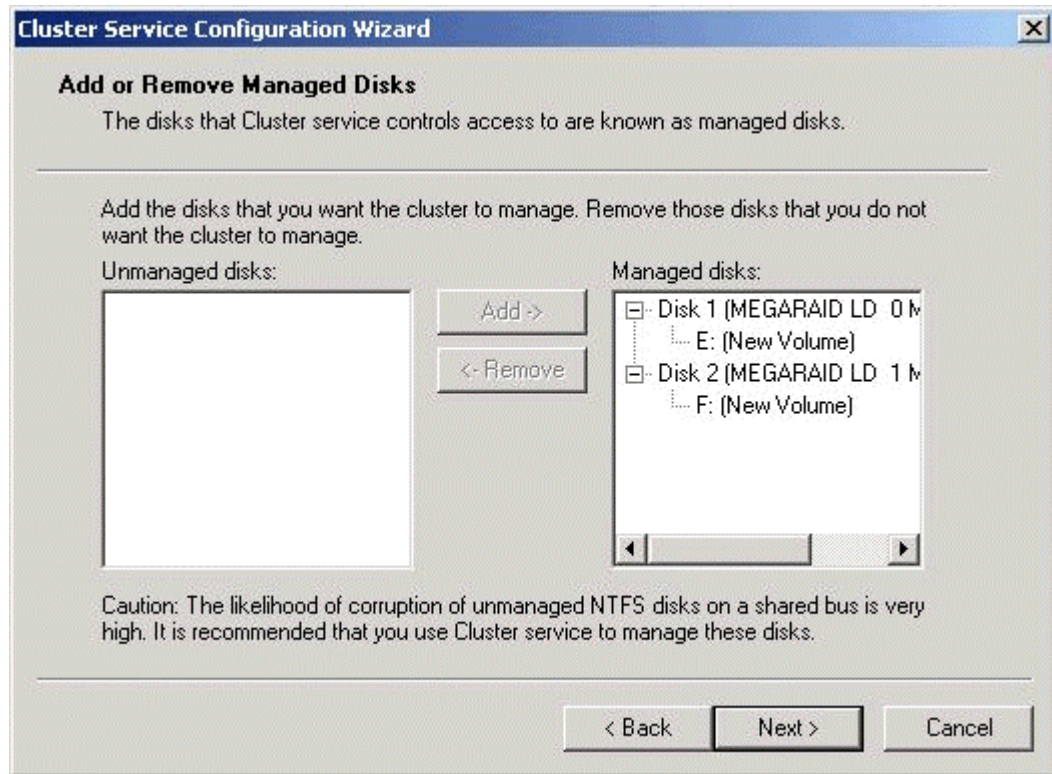

In production clustering scenarios, you need to use more than one private network for cluster communication to avoid having a single point of failure. Cluster Service can use private networks for cluster status signals and cluster management. This provides more security than using a public network for these roles. In addition, you can use a public network for cluster management, or you can use a mixed network for both private and public communications.



In any case, verify that at least two networks are used for cluster communication; using a single network for node-to-node communication creates a potential single point of failure. We recommend that you use multiple networks, with at least one network configured as a private link between nodes and other connections through a public network. If you use more than one private network, make sure that each uses a different subnet, as Cluster Service recognizes only one network interface per subnet.



This document assumes that only two networks are in use. It describes how you can configure these networks as one mixed and one private network.

The order in which the Cluster Service Configuration Wizard presents these networks can vary. In this example, the public network is presented first.

Follow the steps in Table 7-12 to configure the clustered disks.

Table 7-12. Procedure for Configuring the Clustered Disks

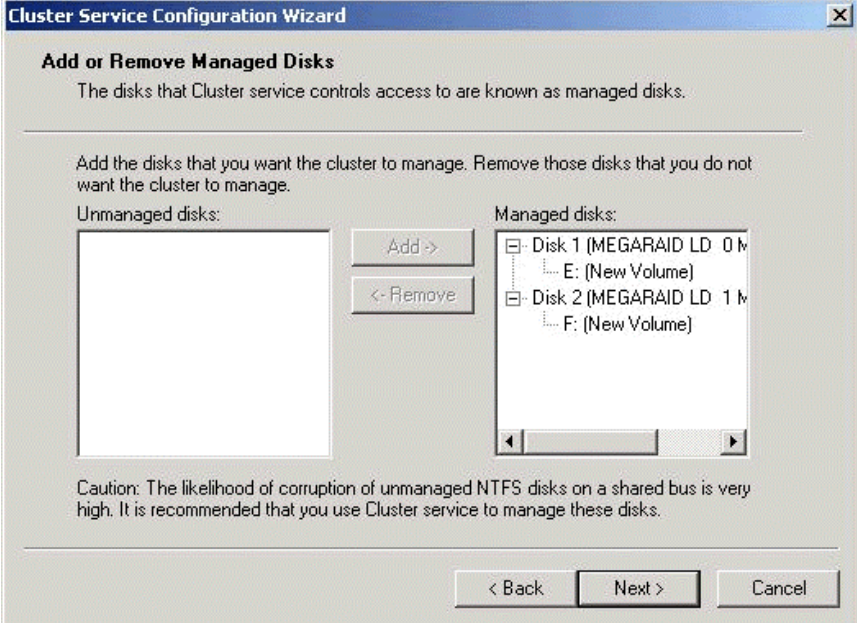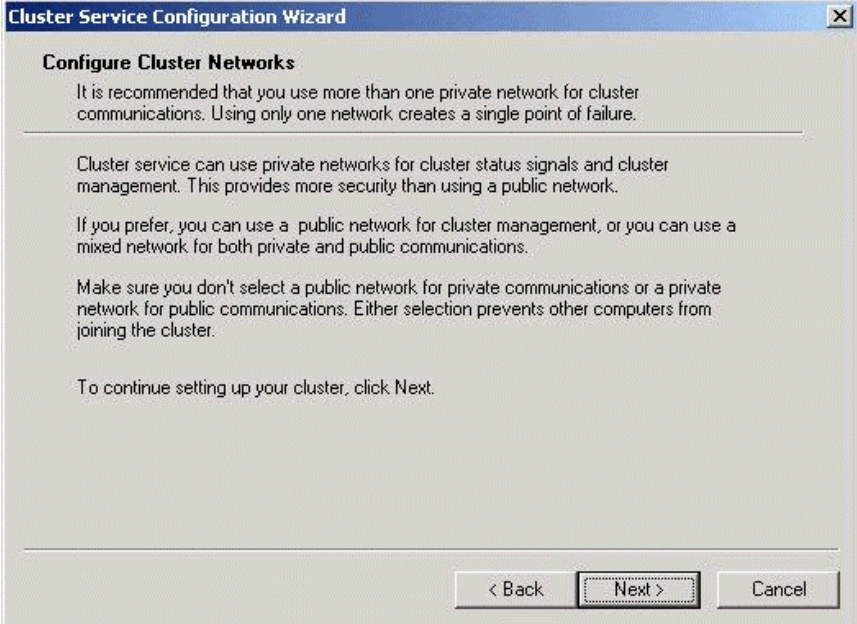
Step	Description
1	<p>The Add or Remove Managed Disks dialog box specifies disks on the shared SCSI bus that will be used by Cluster Service. Add or remove disks as necessary, then click on Next.</p> 
2	<p>The following screen displays. Click on Next in the Configure Cluster Networks dialog box.</p> 
3	<p>Verify that the network name and IP address correspond to the network interface for the <i>public</i> network.</p>
4	<p>Check the box Enable this network for cluster use.</p>
5	<p>Select the option All communications (mixed network), as shown below, and click on</p>

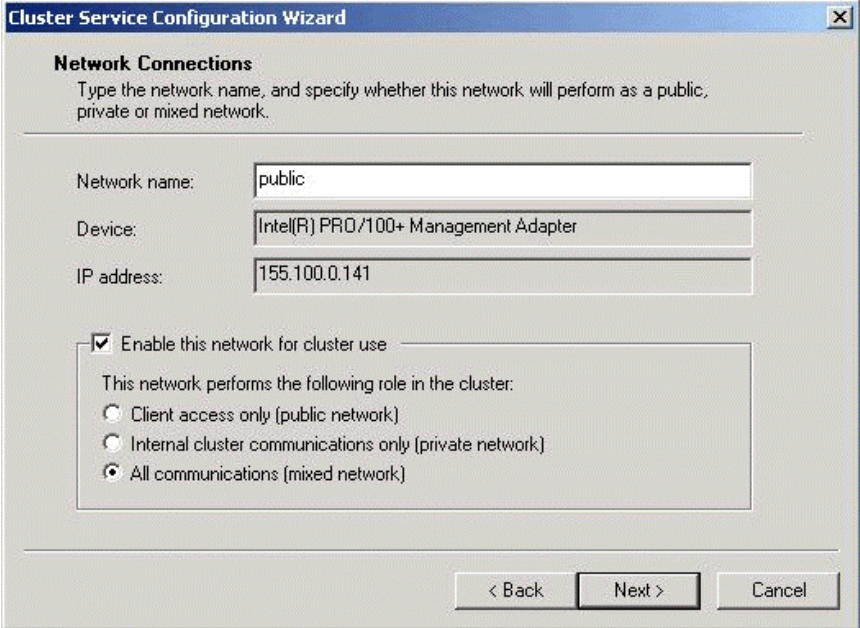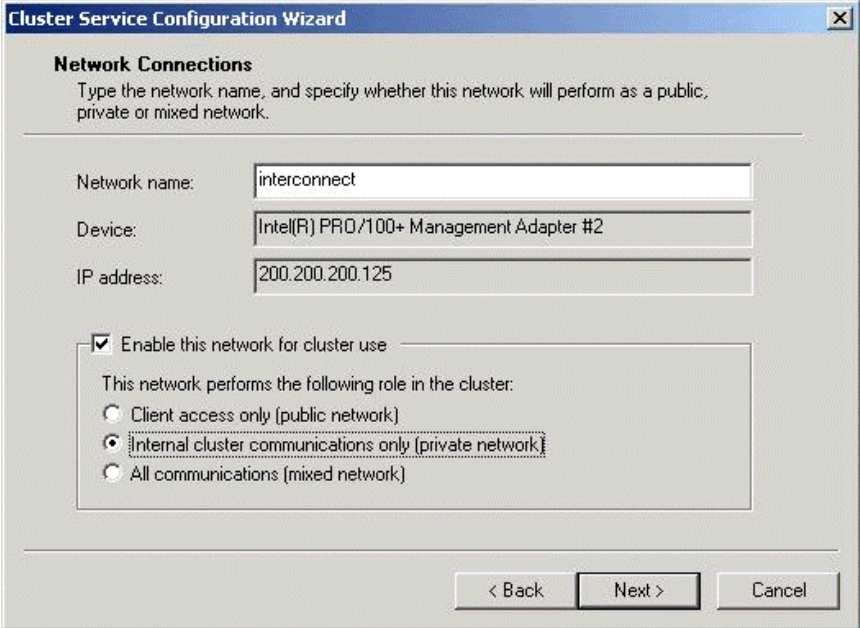	<p>Next.</p> 
6	<p>The next dialog box configures the private network. Make sure that the network name and IP address correspond to the network interface used for the <i>private</i> network.</p> <p>Check the box Enable this network for cluster use.</p> <p>Select the option Internal cluster communications only, then click on Next.</p> 
7	<p>In this example, both networks are configured so that both can be used for internal cluster communication. The next dialog window offers an option to modify the order in which the networks are used. Because Private Cluster Connection represents a direct connection between nodes, it remains at the top of the list.</p>

In normal operation, this connection is used for cluster communication. In case of the Private Cluster Connection failure, Cluster Service automatically switches to the next network on the list—in this case Public Cluster Connection. Verify that the first connection in the list is the Private Cluster Connection, then click on Next.




NOTE: Always set the order of the connections so that the Private Cluster Connection is first in the list.

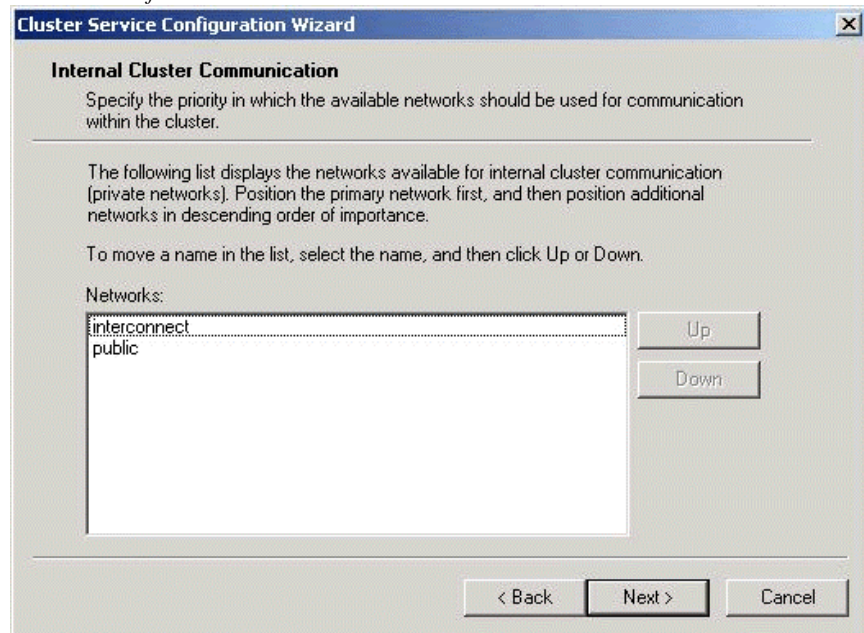

8

Enter the unique cluster IP address and Subnet mask for your network, then click on Next.

The Cluster Service Configuration Wizard shown below automatically associates the cluster IP address with one of the public or mixed networks. It uses the subnet mask to select the correct network.

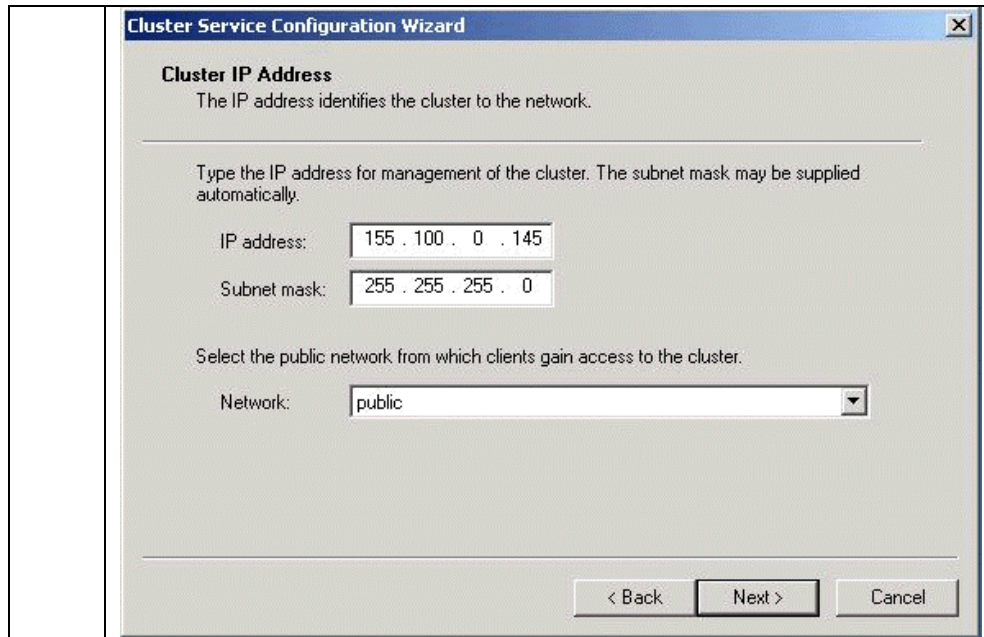


9


Click Finish to complete the cluster configuration on the first node.



The Cluster Service Setup Wizard completes the setup process for the first node by copying the files needed to complete the installation of Cluster Service.

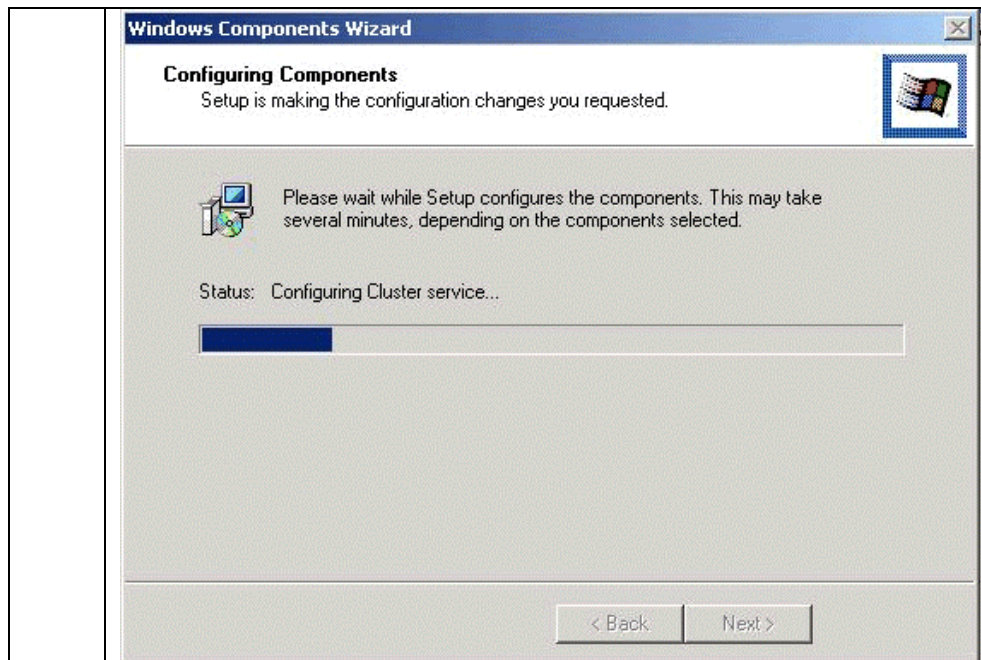

10 After the files are copied, the Cluster Service registry entries are created, the log files on the quorum resource are created, and the Cluster Service is started on the first node. A dialog box appears telling you that Cluster Service has started successfully. Click on OK.

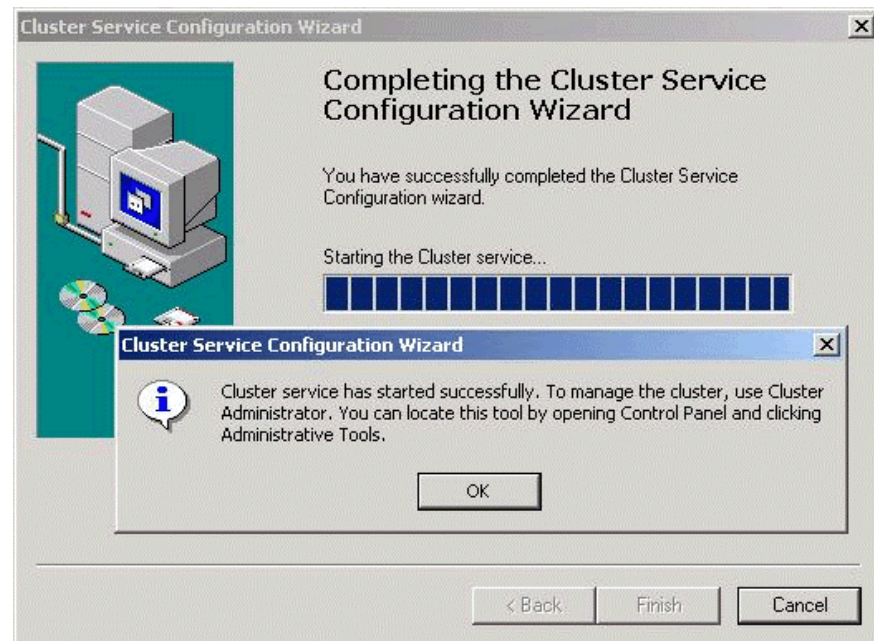

11 Close the Add/Remove Programs window.

Validating the Cluster Installation

Use the Cluster Administrator snap-in to validate the Cluster Service installation on the first node. Follow the steps in Table 7-13 to validate the cluster installation.

Table 7-13. Procedure for Validating the Cluster Installation

Step	Description
1	Click on Start.
2	Click on Programs.
3	Click on Administrative Tools.
4	Click on Cluster Administrator.
5	The following screen displays. If your snap-in window is similar to that shown above below, your Cluster Service was successfully installed on the first node. You are now ready to install Cluster Service on the second node.

Configuring the Second Node



NOTE: For this procedure, have node one and all shared disks powered on, then power up the second node.

Installation of Cluster Service on the second node takes less time than on the first node. Setup configures the Cluster Service network settings on the second node based on the configuration of the first node.

Installation of Cluster Service on the second node begins the same way as installation on the first node. The first node must be running during installation of the second node.

Follow the same procedures used to install Cluster Service on the first node, with the following differences:

1. In the Create or Join a Cluster dialog box, select The second or next node in the cluster, then click Next.
2. Enter the cluster name that was previously created (it is MyCluster in this example), and click Next.
3. Leave Connect to cluster as unchecked. The Cluster Service Configuration Wizard automatically supplies the name of the user account selected when you installed the first node. Always use the same account you used when you set up the first cluster node.
4. Enter the password for the account (if there is one), then click Next.
5. At the next dialog box, click Finish to complete configuration.
6. The Cluster Service will start. Click OK.
7. Close Add/Remove Programs.


If you install additional nodes, repeat these steps to install Cluster Service on all other nodes.

Verify Installation

There are several ways to verify that Cluster Service was successfully installed. Here is a simple one:

1. Click Start, click Programs, click Administrative Tools, then click Cluster Administrator.

The presence of two nodes (pictured below) shows that a cluster exists and is in operation.

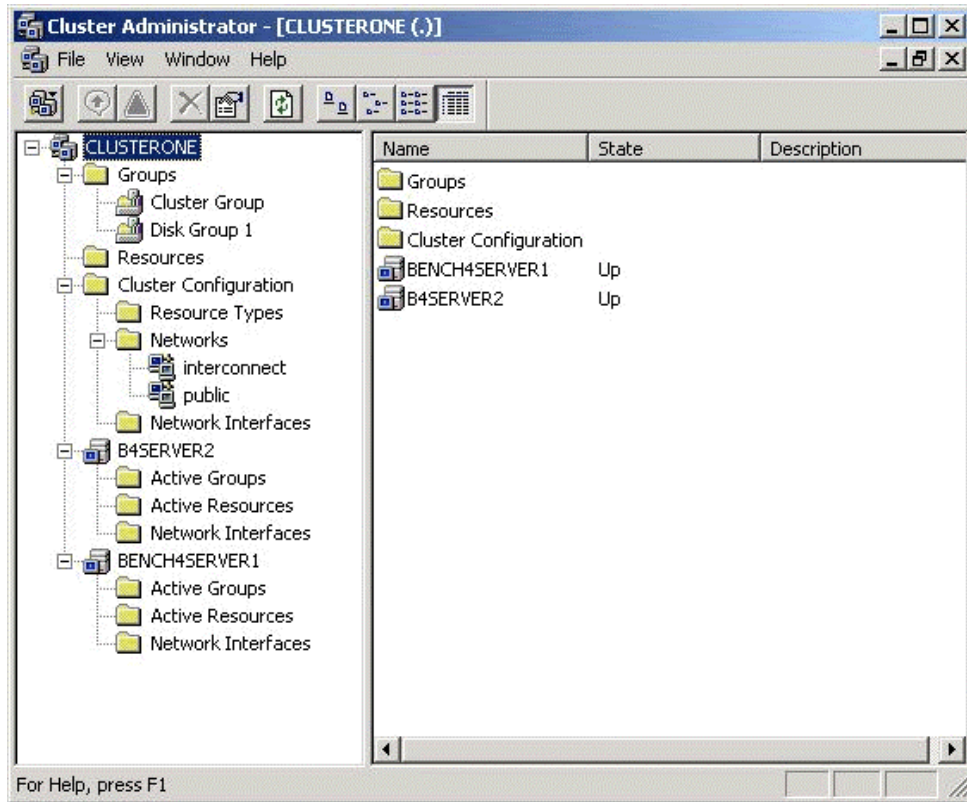

2. Right-click the group Disk Group 1 and select the option Move. This option moves the group and all its resources to another node. After a short period of time, the Disk F: G: will be brought online on the second node. If you watch the screen, you will see this shift. Close the Cluster Administrator snap-in.

Congratulations! You have completed installing Cluster Service on all nodes. The server cluster is fully operational. Now, you are ready to install cluster resources, such as file shares, printer spoolers, cluster aware services like IIS, Message Queuing, Distributed Transaction Coordinator, DHCP, WINS, or cluster aware applications like Exchange or SQL Server.

SCSI Drive Installations

This information is provided as a generic instruction set for SCSI drive installations. If the SCSI hard disk vendor's instructions conflict with the instructions in this section, always use the instructions supplied by the vendor.

The SCSI bus listed in the hardware requirements must be configured prior to installation of Cluster Services. This includes:

- ? Configuring the SCSI devices.
- ? Configuring the SCSI controllers and hard disks to work properly on a shared SCSI bus.
- ? Properly terminating the bus. The shared SCSI bus must have a terminator at each end of the bus. It is possible to have multiple shared SCSI buses between the nodes of a cluster.

In addition to the information on the next page, refer to the documentation from the SCSI device manufacturer or the SCSI specifications, which can be ordered from the American National Standards Institute (ANSI). The ANSI web site contains a catalog that you can search for the SCSI specifications.

Configuring the SCSI Devices

Each device on the shared SCSI bus must have a unique SCSI ID. Since most SCSI controllers default to SCSI ID 7, part of configuring the shared SCSI bus will be to change the SCSI ID on one controller to a different SCSI ID, such as SCSI ID 6. If there is more than one disk that will be on the shared SCSI bus, each disk must also have a unique SCSI ID.

Some SCSI controllers reset the SCSI bus when they initialize at boot time. If this occurs, the bus reset can interrupt any data transfers between the other node and disks on the shared SCSI bus. Therefore, SCSI bus resets should be disabled if possible.

Terminating the Shared SCSI Bus

You can connect *Y* cables to devices if the device is at the end of the SCSI bus. You can then attach a terminator to one branch of the *Y* cable to terminate the SCSI bus. This method of termination requires either disabling or removing any internal terminators the device has.



NOTE: Any devices that are not at the end of the shared bus must have their internal termination disabled.

Chapter 8

Troubleshooting

Table 8-1 describes general problems, and suggested solutions.

Table 8-1. General Problems and Suggested Solutions

Problem	Suggested Solution
Some operating systems do not load in a computer with a MegaRAID adapter.	<p>Check the system BIOS configuration for PCI interrupt assignments. Make sure some Interrupts are assigned for PCI.</p> <p>Initialize the logical drive before installing the operating system.</p>
One of the hard drive in the array fails often	<p>Check the drive error counts using Power Console.</p> <p>Format the drive.</p> <p>Rebuild the drive</p> <p>If the drive continues to fail, replace the drive with another drive with the same capacity.</p>
Pressed <Ctrl> <M>. Ran Megaconf.exe and tried to make a new configuration. The system hangs when scanning devices.	<p>Check the drives IDs on each channel to make sure each device has a different ID.</p> <p>Check the termination. The device at the end of the channel must be terminated.</p> <p>Replace the drive cable.</p>
Multiple drives connected to MegaRAID using the same power supply. There is a problem spinning the drives all at once.	Set the drives to spin on command. This will allow MegaRAID to spin two devices simultaneously.
Pressing <Ctrl> <M> or running megaconf.exe does not display the Management Menu.	These utilities require a color monitor.
At system power-up with the MegaRAID installed, the screen display is garbled.	At least 32 MB of memory must be installed before power-up.
Cannot flash or update the EEPROM.	You may need a new EEPROM.

Problem	Suggested Solution
Firmware Initializing... appears and remains on the screen.	<p>Make sure that TERMPWR is being properly provided to each peripheral device populated channel.</p> <p>Make sure that each end of the channel chain is properly terminated using the recommended terminator type for the peripheral device. The channel is automatically terminated at the MegaRAID card if only one cable is connected to a channel.</p> <p>Make sure that memory modules are PC100 or faster.</p> <p>Make sure that the MegaRAID controller is properly seated in the PCI slot.</p>
What is the maximum number of MegaRAID adapters per computer?	Currently, all the utilities and drivers support up to 12 MegaRAID adapters per system.
What SCSI IDs can a non-hard disk device have and what is maximum number allowed per adapter?	<p>Non-hard disk devices can accommodate only SCSI IDs 1, 2, 3, 4, 5 or 6, regardless of the channel used.</p> <p>A maximum of six non-hard disk devices is supported per MegaRAID adapter.</p>
Why does a failed logical array still get a drive assignment?	To maintain the DOS Path statement integrity.

BIOS Boot Error Messages

Table 8-2 describes error messages that can display when you boot the system, and suggested solutions.

Table 8-2. BIOS Boot Error Messages

Message	Problem	Suggested Solution
Adapter BIOS Disabled. No Logical Drives Handled by BIOS	The MegaRAID BIOS is disabled. Sometimes the BIOS is disabled to prevent booting from the BIOS.	Enable the BIOS via the MegaRAID Configuration Utility utility.
Host Adapter at Baseport xxxx Not Responding	The BIOS cannot communicate with the adapter firmware.	<p>Make sure MegaRAID is properly installed.</p> <p>Try moving the MegaRAID card to another PCI slot.</p> <p>Run the MegaRAID Manager Diagnostics to verify that MegaRAID is functioning properly.</p>

Message	Problem	Suggested Solution
No MegaRAID Adapter	The BIOS cannot communicate with the adapter firmware.	<p>Make sure MegaRAID is properly installed.</p> <p>Move the MegaRAID card to another PCI slot.</p> <p>Run the MegaRAID Manager Diagnostics to verify that MegaRAID is functioning properly.</p>
Configuration of NVRAM and drives mismatch. Run View/Add Configuration option of Configuration Utility. Press any key to run the Configuration Utility.	The configuration stored in the MegaRAID adapter does not match the configuration stored in the drives.	<p>Press a key to run MegaRAID Manager.</p> <p>Choose View/Add Configuration from the Configure menu.</p> <p>Use View/Add Configuration to examine both the configuration in NVRAM and the configuration stored on the disk drives. Resolve the problem by selecting one of the configurations.</p>
Configuration of NVRAM and drives mismatch for Host Adapter. Run View/Add Configuration option of Configuration Utility. Press any key to run the Configuration Utility.	The configuration stored in the MegaRAID adapter does not match the configuration stored in the drives.	<p>Press a key to run MegaRAID Manager.</p> <p>Choose View/Add Configuration from the Configure menu.</p> <p>Use View/Add Configuration to examine both the configuration in NVRAM and the configuration stored on the disk drives. Resolve the problem by selecting one of the configurations.</p>
1 Logical Drive Failed	A logical drive failed to sign on.	<p>Make sure all physical drives are properly connected and are powered on.</p> <p>Run MegaRAID Manager to find out if any physical drives are not responding. Reconnect, replace, or rebuild any drive that is not responding.</p>

Message	Problem	Suggested Solution
X Logical Drives Degraded	x number of logical drives signed on in a degraded state.	<p>Make sure all physical drives are properly connected and are powered on.</p> <p>Run MegaRAID Manager to find out if any physical drives are not responding. Reconnect, replace, or rebuild any drive that is not responding.</p>
1 Logical Drive Degraded	A logical drive signed on in a degraded state.	<p>Make sure all physical drives are properly connected and are powered on.</p> <p>Run MegaRAID Manager to find out if any physical drives are not responding. Reconnect, replace, or rebuild any drive that is not responding.</p>
Insufficient memory to run BIOS. Press any key to continue...	Not enough MegaRAID memory to run MegaRAID BIOS.	Make sure MegaRAID memory has been properly installed.
Insufficient Memory	Not enough memory on the MegaRAID adapter to support the current configuration.	Make sure MegaRAID memory has been properly installed.
The following SCSI IDs are not responding: Channel x:a.b.c	The physical drives with SCSI IDs a, b, and c are not responding on SCSI channel x.	Make sure the physical drives are properly connected and are powered on.

Other BIOS Error Messages

Table 8-3 describes other BIOS error messages, their meaning, and suggested solutions.

Table 8-3. Other BIOS Error Messages

Message	Problem	Suggested Solution
Following SCSI disk not found and no empty slot available for mapping it	The physical disk roaming feature did not find the physical disk with the displayed SCSI ID. No slot is available to map the physical drive. MegaRAID cannot resolve the physical drives into the current configuration.	Reconfigure the array.
Following SCSI IDs have the same data y, z Channel x: a, b, c	The physical drive roaming feature found the same data on two or more physical drive on channel x with SCSI IDs a, b, and c. MegaRAID cannot determine the drive that has the duplicate information.	Remove the drive or drives that should not be used.
Unresolved configuration mismatch between disks and NVRAM on the adapter	The configuration stored in the MegaRAID NVRAM does not match the configuration stored on the drives.	<p>Press a key to run MegaRAID Manager.</p> <p>Choose View/Add Configuration from the Configure menu.</p> <p>Use View/Add Configuration to examine both the configuration in NVRAM and the configuration stored on the disk drives. Resolve the problem by selecting one of the configurations.</p>

Other Potential Problems

Table 8-4 describes other potential problems.

Table 8-4. Other Potential Problems

Topic	Information
DOS ASPI	MEGASPI.SYS, the MegaRAID DOS ASPI manager, uses 6 KB of system memory once it is loaded.
CD-ROM drives under DOS	At this time, copied CDs are not accessible from DOS even after loading MEGASPI.SYS and MEGACDR.SYS.
Physical Drive Errors	To display the MegaRAID Manager Media Error and Other Error options, press <F2> after selecting a physical drive under the Physical Drive menu, selected from the Objects menu. A Media Error is an error that occurred while actually transferring data. An Other Error is an error that occurs at the hardware level because of a device failure, poor cabling, bad termination, signal loss, etc.
Virtual Sizing	The FlexRAID virtual sizing option enables RAID expansion. FlexRAID virtual sizing must be enabled to increase the size of a logical drive or add a physical drive to an existing logical drive. Run MegaRAID Manager by pressing <Ctrl> <M> to enable FlexRAID virtual sizing. Select the Objects menu, then select the Logical Drive menu. Select View/Update Parameters. Set FlexRAID Virtual Sizing to Enabled.
BSD Unix	We do not provide a driver for BSDI Unix. MegaRAID does not support BSDI Unix.
Multiple LUNs	MegaRAID supports one LUN per each target ID. No multiple LUN devices are supported.
MegaRAID Power Requirements	The maximum MegaRAID power requirements are 15 watts at 5V and 3 Amps.

Topic	Information
SCSI Bus Requirements	<p data-bbox="646 241 1084 268">The ANSI specification dictates the following:</p> <p data-bbox="646 310 1188 405">The maximum signal path length between terminators is 3 meters when using up to 4 maximum capacitance (25 pF) devices and 1.5 meters when using more than 4 devices.</p> <p data-bbox="646 447 1143 541">SCSI devices should be uniformly spaced between terminators, with the end devices located as close as possible to the terminators.</p> <p data-bbox="646 583 1214 678">The characteristic impedance of the cable should be 90 +/- 6 ohms for the /REQ and /ACK signals and 90 +/- 10 ohms for all other signals.</p> <p data-bbox="646 720 1203 814">The stub length (the distance from the controller's external connector to the mainline SCSI bus) shall not exceed .1m (approximately 4 inches).</p> <p data-bbox="646 856 1214 919">The spacing of devices on the mainline SCSI bus should be at least three times the stub length.</p> <p data-bbox="646 961 1203 1024">All signal lines shall be terminated once at both ends of the bus powered by the TERMPWR line.</p>

Topic	Information
Windows NT Installation	<p data-bbox="646 241 1224 373">When Windows NT is installed via a bootable CD, the devices on the MegaRAID will not be recognized until after the initial reboot. The Microsoft documented workaround is in SETUP.TXT, which is on the CD.</p> <p data-bbox="646 415 1224 510">To install drivers when Setup recognizes one of the supported SCSI host adapters without making the devices attached to it available for use:</p> <ol style="list-style-type: none"> <li data-bbox="646 552 1013 579">1 Restart Windows NT Setup. <li data-bbox="646 583 1224 911">2 When Windows NT Setup displays the following: <pre data-bbox="740 646 1078 726">Setup is inspecting your computer's hardware configuration...</pre> <p data-bbox="740 747 1208 911">press <F6> to prevent Windows NT Setup from performing disk controller detection. This allows you to install the driver from the Drivers disk you created. All SCSI adapters must be installed manually.</p> <p data-bbox="740 953 1208 980">When Windows NT Setup displays the following: <pre data-bbox="740 1016 1192 1146">Setup could not determine the type of one or more mass storage devices installed in your system, or you have chosen to manually specify an adapter,</pre> <p data-bbox="740 1167 1175 1230">press <S> to display a list of supported SCSI host adapters.</p> </p> <li data-bbox="646 1272 1127 1299">4 Select Other from the bottom of the list. <li data-bbox="646 1341 1208 1404">5 Insert the Drivers Disk you made when prompted to do so and select MegaRAID from this list. <p data-bbox="740 1446 1208 1604">In some cases, Windows NT Setup repeatedly prompts to swap disks. Windows NT will now recognize any devices attached to this adapter. Repeat this step for each host adapter not already recognized by Windows NT Setup.</p>

Appendix A

SCSI Cables and Connectors

SCSI Connectors

MegaRAID provides several different types of SCSI connectors for each channel. The connectors are:

- 68-pin high density internal connectors
- 68-pin ultra high density external connectors

68-Pin High Density SCSI Internal Connectors

Each of the SCSI channels on the MegaRAID has a 68-pin high density 0.050 inch pitch unshielded connector.


These connectors provide all signals needed to connect MegaRAID to wide SCSI devices. The connector pinouts are for a single-ended primary bus (P-CABLE) as specified in SCSI-3 Parallel Interface X3T9.2, Project 885-D, revision 12b, date July 2, 1993.

The cable assemblies that interface with this 68-pin connector are:

- flat ribbon or twisted pair cable for connecting internal wide SCSI devices
- round shielded cable for connecting external wide SCSI devices


Cable Assembly for Internal Wide SCSI Devices

The cable assembly for connecting internal wide SCSI devices is shown below.

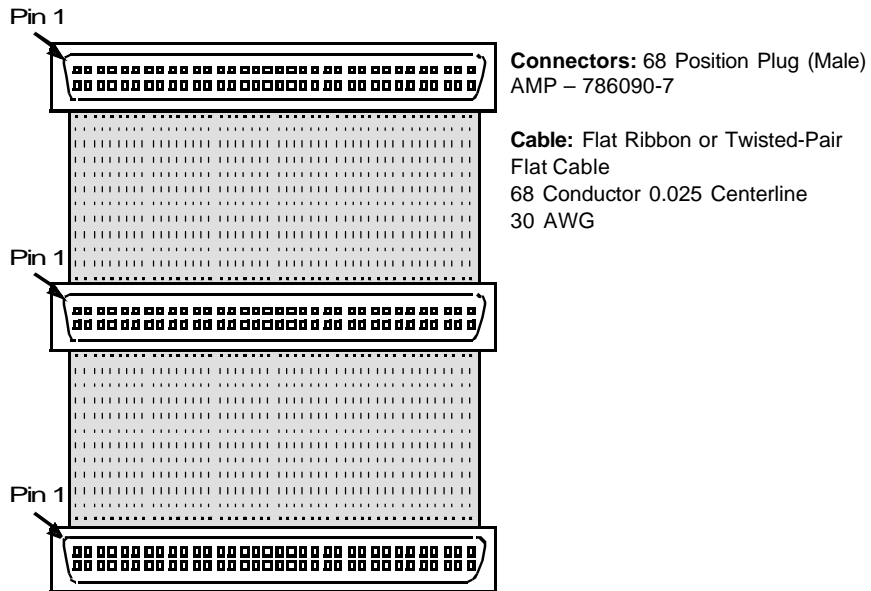

Connecting Internal and External Wide Devices

The cable assembly for connecting internal wide and external wide SCSI devices is shown below:

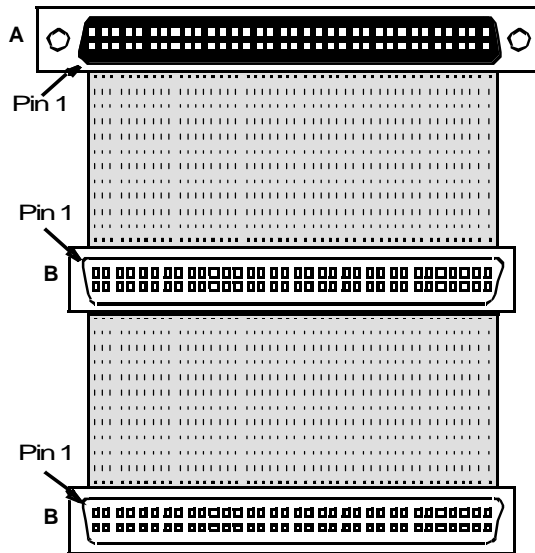

Connector A: 68 Position Panel Mount Receptacle with 4-40 Holes (Female)
AMP – 786096-7
To convert to 2-56 holes, use screwlock kit 749087-1, 749087-2, or
750644-1 from AMP

Connectors B: 68 Position Plug (Male)
AMP – 786090-7


Cable: Flat Ribbon or Twisted-Pair Flat Cable
68 Conductor 0.025 Centerline
30 AWG

Converting Internal Wide to Internal Non-Wide (Type 2)

The cable assembly for converting internal wide SCSI connectors to internal non-wide SCSI connectors is shown below.


68 Position Connector Contact Number	50 Position Connector Contact Number
6	1
40	2
7	3
41	4
	⋮
49	20
16	21
50	22
17	Open
51	Open
18	Open
52	26
19	27
	⋮
29	47
63	48
30	49
64	50

Table 1: Connector Contact Connection for wide to Non-Wide Conversion

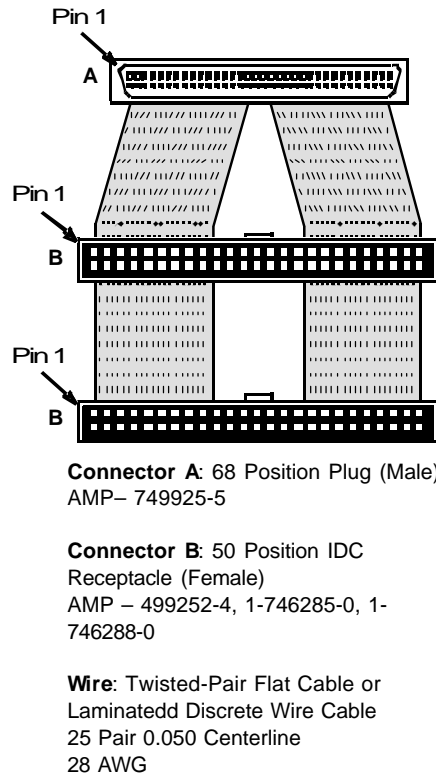

Converting Internal Wide to Internal Non-Wide (Type 30)

The cable assembly for connecting internal wide SCSI devices to internal non-wide SCSI devices is shown below.

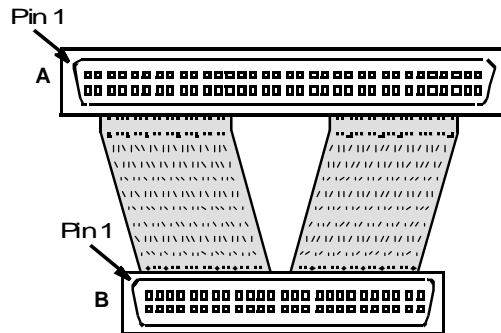


Connector A: 68 Position Plug (Male)
AMP- 749925-5

Connector B: 50 Position Plug (Male)
AMP - 749925-3

Wire: Twisted-Pair Flat Cable or
Laminated Discrete Wire Cable
25 Pair 0.050 Centerline
28 AWG

Converting from Internal Wide to Internal Non-Wide (Type 3)

The cable assembly for connecting internal wide SCSI devices to internal non-wide (Type 3) SCSI devices is shown below:

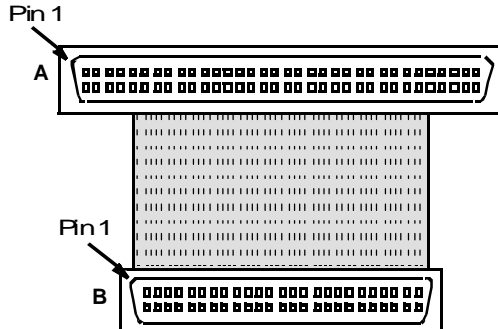

Connector A: 68 Position Plug (Male)
AMP- 786090-7

Connector B: 50 Position Plug (Male)
AMP - 786090-7

Wire: Flat Ribbon or Twisted-Pair Flat Cable
50 Conductor 0.025 Centerline
30 AWG

SCSI Cable Vendors

Table A-1 displays the manufacturer information for SCSI cable vendors.

Table A-1. SCSI Cable Vendors

Manufacturer	Telephone Number
Cables To Go	Voice: 800-826-7904 Fax: 800-331-2841
System Connection	Voice: 800-877-1985
Technical Cable Concepts	Voice: 714-835-1081
GWC	Voice: 800-659-1599

SCSI Connector Vendors

Table A-2 displays the manufacturer information for SCSI connector vendors.

Table A-2. SCSI Connector Vendors

Manufacturer	Connector Part Number	Back Shell Part Number
AMP	749111-4	749193-1
Fujitsu	FCN-237R050-G/F	FCN-230C050-D/E
Honda	PCS-XE50MA	PCS-E50LA

68-Pin Connector Pinout for Single-Ended SCSI

Table A-3 displays the pinout for the 68-pin connector for single-ended SCSI.

Table A-3. 68-Pin Connector Pinout for Single-Ended SCSI

Signal	Connector Pin	Cable Pin	Cable Pin	Connector Pin	Signal
Ground	1	1	2	35	-DB(12)
Ground	2	3	4	36	-DB(13)
Ground	3	5	6	37	-DB(14)
Ground	4	7	8	38	-DB(15)
Ground	5	9	10	39	-DB(P1)
Ground	6	11	12	40	-DB(0)
Ground	7	13	14	41	-DB(1)
Ground	8	15	16	42	-DB(2)
Ground	9	17	18	43	-DB(3)
Ground	10	19	20	44	-DB(4)
Ground	11	21	22	45	-DB(5)
Ground	12	23	24	46	-DB(6)
Ground	13	25	26	47	-DB(7)
Ground	14	27	28	48	-DB(P)
Ground	15	29	30	49	Ground
Ground	16	31	32	50	Ground
TERMPWR	17	33	34	51	TERMPWR
TERMPWR	18	35	36	52	TERMPWR
Reserved	19	37	38	53	Reserved
Ground	20	39	40	54	Ground
Ground	21	41	42	55	-ATN
Ground	22	43	44	56	Ground
Ground	23	45	46	57	-BSY
Ground	24	47	48	58	-ACK
Ground	25	49	50	59	-RST
Ground	26	51	52	60	-MSG
Ground	27	53	54	61	-SEL
Ground	28	55	56	62	-C/D
Ground	29	57	58	63	-REQ
Ground	30	59	60	64	-I/O
Ground	31	61	62	65	-DB(8)
Ground	32	63	64	66	-DB(9)
Ground	33	65	66	67	-DB(10)
Ground	34	67	68	68	-DB(11)

High-Density Connector

The following applies to the high-density SCSI connector table on page 103:

- A hyphen before a signal name indicates that signal is active low
- The connector pin refers to the conductor position when using 0.025 inch centerline flat ribbon cable with a high-density connector (AMPLIMITE.050 Series connectors)
- Eight-bit devices connected to the P-Cable must leave the following signals open: -DB (8), -DB (9), -DB (10), -DB (11), -DB(12), -DB (13), -DB (14), -DB 15), and -DB (P1)
- All other signals should be connected as defined

Caution

Lines labeled RESERVED should be connected to Ground in the bus terminator assemblies or in the end devices on the SCSI cable.

RESERVED lines should be open in the other SCSI devices, but can be connected to Ground.

68-Pin Connector Pinout for Low-Voltage Differential SCSI

Table A-4 displays the pinout for the 68-pin connector for low-voltage differential SCSI.

Table A-4. 68-Pin Connector Pinout for Low-voltage Differential SCSI

Signal	Connector Pin	Cable Pin	Cable Pin	Connector Pin	Signal
+DB(12)	1	1	2	35	-DB(12)
+DB(13)	2	3	4	36	-DB(13)
+DB(14)	3	5	6	37	-DB(14)
+DB(15)	4	7	8	38	-DB(15)
+DB(P1)	5	9	10	39	-DB(P1)
+DB(0)	6	11	12	40	-DB(0)
+DB(1)	7	13	14	41	-DB(1)
+DB(2)	8	15	16	42	-DB(2)
+DB(3)	9	17	18	43	-DB(3)
+DB(4)	10	19	20	44	-DB(4)
+DB(5)	11	21	22	45	-DB(5)
+DB(6)	12	23	24	46	-DB(6)
+DB(7)	13	25	26	47	-DB(7)
+DB(P)	14	27	28	48	-DB(P)
Ground	15	29	30	49	Ground
DIFFSENS	16	31	32	50	Ground
TERMPWR	17	33	34	51	TERMPWR
TERMPWR	18	35	36	52	TERMPWR
Reserved	19	37	38	53	Reserved
Ground	20	39	40	54	Ground
+ATN	21	41	42	55	-ATN
Ground	22	43	44	56	Ground
+BSY	23	45	46	57	-BSY
+ACK	24	47	48	58	-ACK
+RST	25	49	50	59	-RST
+MSG	26	51	52	60	-MSG
+SEL	27	53	54	61	-SEL
+C/D	28	55	56	62	-C/D
+REQ	29	57	58	63	-REQ
+I/O	30	59	60	64	-I/O
+DB(8)	31	61	62	65	-DB(8)
+DB(9)	32	63	64	66	-DB(9)
+DB(10)	33	65	66	67	-DB(10)
+DB(11)	34	67	68	68	-DB(11)



NOTE: The conductor number refers to the conductor position when using flat-ribbon cable.

Appendix B

Audible Warnings

MegaRAID has an onboard tone generator that indicates events and errors. Table B-1 describes the tones and their meanings.

Table B-1. 68-Pin Connector Pinout for Low-voltage Differential SCSI

Tone Pattern	Meaning	Examples
Three seconds on and one second off	A logical drive is offline.	One or more drives in a RAID 0 configuration failed. Two or more drives in a RAID 1 or 5 configuration failed.
One second on and one second off	A logical drive is running in degraded mode.	One drive in a 5 configuration failed.
One second on and three seconds off	An automatically initiated rebuild has been completed.	While you were away from the system, a disk drive in a RAID 1 or 5 configuration failed and was rebuilt.

Glossary

- Array** A grouping or array of disk drives combines the storage space on the disk drives into a single segment of contiguous storage space. MegaRAID can group disk drives on one or more SCSI channels into an array. A hot spare drive does not participate in an array.
- Array Management Software** Software that provides common control and management for a disk array. Array Management Software most often executes in a disk controller or intelligent host bus adapter, but can also execute in a host computer. When it executes in a disk controller or adapter, Array Management Software is often called firmware.
- Array Spanning** Array spanning by a logical drive combines storage space in two arrays of disk drives into a single, contiguous storage space in a logical drive. MegaRAID logical drives can span consecutively numbered arrays that each consist of the same number of disk drives. Array spanning promotes RAID levels 1 and 5 to RAID levels 10 and 50, respectively. See also *Disk Spanning*.
- Asynchronous Operations** Operations that bear no relationship to each other in time and can overlap. The concept of asynchronous I/O operations is central to independent access arrays in throughput-intensive applications.
- Cache I/O** A small amount of fast memory that holds recently accessed data. Caching speeds subsequent access to the same data. It is most often applied to processor-memory access, but can also be used to store a copy of data accessible over a network. When data is read from or written to main memory, a copy is also saved in cache memory with the associated main memory address. The cache memory software monitors the addresses of subsequent reads to see if the required data is already stored in cache memory. If it is already in cache memory (a cache hit), it is read from cache memory immediately and the main memory read is aborted (or not started.) If the data is not cached (a cache miss), it is fetched from main memory and saved in cache memory.
- Channel** An electrical path for the transfer of data and control information between a disk and a disk controller.
- Consistency Check** An examination of the disk system to determine whether all conditions are valid for the specified configuration (such as parity.)
- Cold Swap** A cold swap requires that you turn the power off before replacing a defective hard drive in a disk subsystem.
- Data Transfer Capacity** The amount of data per unit time moved through a channel. For disk I/O, bandwidth is expressed in megabytes per second (MB/s).
- Degraded** A drive that has become non-functional or has decreased in performance.
- Disk** A non-volatile, randomly addressable, rewritable mass storage device, including both rotating magnetic and optical disks and solid-state disks, or non-volatile electronic storage elements. It does not include specialized devices such as write-once-read-many (WORM) optical disks, nor does it include so-called RAM disks implemented using software to control a dedicated portion of a host computer volatile random access memory.

- Disk Array** A collection of disks from one or more disk subsystems combined with array management software. It controls the disks and presents them to the array operating environment as one or more virtual disks.
- Disk Duplexing** A variation on disk mirroring where a second disk adapter or host adapter and redundant disk drives are present.
- Disk Mirroring** Writing duplicate data to more than one (usually two) hard disks to protect against data loss in the event of device failure. It is a common feature of RAID systems.
- Disk Spanning** Disk spanning allows multiple disk drives to function like one big drive. Spanning overcomes lack of disk space and simplifies storage management by combining existing resources or adding relatively inexpensive resources. For example, four 400 MB disk drives can be combined to appear to the operating system as one single 1600 MB drive. See also *Array Spanning* and *Spanning*.
- Disk Striping** A type of disk array mapping. Consecutive stripes of data are mapped round-robin to consecutive array members. A striped array (RAID Level 0) provides high I/O performance at low cost, but provides lower data reliability than any of its member disks.
- Disk Subsystem** A collection of disks and the hardware that connects them to one or more host computers. The hardware can include an intelligent controller or the disks can attach directly to a host computer I/O bus adapter.
- Double Buffering** A technique that achieves maximum data transfer bandwidth by constantly keeping two I/O requests for adjacent data outstanding. A software component begins a double-buffered I/O stream by issuing two requests in rapid sequence. Thereafter, each time an I/O request completes, another is immediately issued. If the disk subsystem is capable of processing requests fast enough, double buffering allows data to be transferred at the full-volume transfer rate.
- Failed Drive** A drive that has ceased to function or consistently functions improperly.
- Fast SCSI** A variant on the SCSI-2 bus. It uses the same 8-bit bus as the original SCSI-1, but runs at up to 10MB (double the speed of SCSI-1.)
- Firmware** Software stored in read-only memory (ROM) or Programmable ROM (PROM). Firmware is often responsible for the behavior of a system when it is first turned on. A typical example would be a monitor program in a computer that loads the full operating system from disk or from a network and then passes control to the operating system.
- FlexRAID Power Fail Option** The FlexRAID Power Fail option allows a reconstruction to restart if a power failure occurs. This is the advantage of this option. The disadvantage is, once the reconstruction is active, the performance is slower because an additional activity is added.
- Format** The process of writing zeros to all data fields in a physical drive (hard drive) to map out unreadable or bad sectors. Because most hard drives are factory formatted, formatting is usually only done if a hard disk generates many media errors.
- GB** Shorthand for 1,000,000,000 (10 to the ninth power) bytes. It is the same as 1,000 MB (megabytes).
- Host-based Array** A disk array with an Array Management Software in its host computer rather than in a disk subsystem.
- Host Computer** Any computer that disks are directly attached to. Mainframes, servers, workstations, and personal computers can all be considered host computers.

Hot Spare	A stand-by drive ready for use if another drive fails. It does not contain any user data. Up to eight disk drives can be assigned as hot spares for an adapter. A hot spare can be dedicated to a single redundant array or it can be part of the global hot-spare pool for all arrays controlled by the adapter.
Hot Swap	The substitution of a replacement unit in a disk subsystem for a defective one, where the substitution can be performed while the subsystem is running (performing its normal functions). Hot swaps are manual.
I/O Driver	A host computer software component (usually part of the operating system) that controls the operation of peripheral controllers or adapters attached to the host computer. I/O drivers communicate between applications and I/O devices, and in some cases participates in data transfer.
Initialization	The process of writing zeros to the data fields of a logical drive and generating the corresponding parity to put the logical drive in a Ready state. Initializing erases previous data and generates parity so that the logical drive will pass a consistency check. Arrays can work without initializing, but they can fail a consistency check because the parity fields have not been generated.
Logical Disk	A set of contiguous chunks on a physical disk. Logical disks are used in array implementations as constituents of logical volumes or partitions. Logical disks are normally transparent to the host environment, except when the array containing them is being configured.
Logical Drive	A virtual drive within an array that can consist of more than one physical drive. Logical drives divide the contiguous storage space of an array of disk drives or a spanned group of arrays of drives. The storage space in a logical drive is spread across all the physical drives in the array or spanned arrays. Each MegaRAID adapter can be configured with up to 40 logical drives in any combination of sizes. Configure at least one logical drive for each array.
Mapping	The conversion between multiple data addressing schemes, especially conversions between member disk block addresses and block addresses of the virtual disks presented to the operating environment by Array Management Software.
MB	(Megabyte) An abbreviation for 1,000,000 (10 to the sixth power) bytes. It is the same as 1,000 KB (kilobytes).
Multi-threaded	Having multiple concurrent or pseudo-concurrent execution sequences. Used to describe processes in computer systems. Multi-threaded processes allow throughput-intensive applications to efficiently use a disk array to increase I/O performance.
Operating Environment	The operating environment includes the host computer where the array is attached, any I/O buses and adapters, the host operating system, and any additional software required to operate the array. For host-based arrays, the operating environment includes I/O driver software for the member disks, but does not include Array Management Software, which is regarded as part of the array itself.
Parity	Parity is an extra bit added to a byte or word to reveal errors in storage (in RAM or disk) or transmission. Parity is used to generate a set of redundancy data from two or more parent data sets. The redundancy data can be used to reconstruct one of the parent data sets. However, parity data does not fully duplicate the parent data sets. In RAID, this method is applied to entire drives or stripes across all disk drives in an array. Parity consists of dedicated parity, in which the parity of the data on two or more drives is stored on an additional drive, and distributed parity, in which the parity data are distributed among all the drives in the system. If a single drive fails, it can be rebuilt from the parity of the respective data on the remaining drives.

Partition	An array virtual disk made up of logical disks rather than physical ones. Also known as logical volume.
Physical Disk	A hard disk drive that stores data. A hard disk drive consists of one or more rigid magnetic discs rotating about a central axle with associated read/write heads and electronics.
Physical Disk Roaming	The ability of some adapters to detect when hard drives have been moved to a different slots in the computer, for example, after a hot swap.
Protocol	A set of formal rules describing how to transmit data, especially across a network. Low level protocols define the electrical and physical standards to be observed, bit- and byte-ordering, and the transmission and error detection and correction of the bit stream. High level protocols deal with the data formatting, including the message syntax, the terminal-to-computer dialogue, character sets, and sequencing of messages.
RAID	Redundant Array of Independent Disks (originally Redundant Array of Inexpensive Disks) is an array of multiple small, independent hard disk drives that yields performance exceeding that of a Single Large Expensive Disk (SLED). A RAID disk subsystem improves I/O performance on a server using only a single drive. The RAID array appears to the host server as a single storage unit. I/O is expedited because several disks can be accessed simultaneously.
RAID Levels	A style of redundancy applied to a logical drive. It can increase the performance of the logical drive and can decrease usable capacity. Each logical drive must have a RAID level assigned to it. The RAID level drive requirements are: RAID 0 requires one or more physical drives, RAID 1 requires exactly two physical drives., RAID 5 requires at least three physical drives. RAID levels 10 and 50 result when logical drives span arrays. RAID 10 results when a RAID 1 logical drive spans arrays. RAID 50 results when a RAID 5 logical drive spans arrays.
RAID Migration	RAID migration is used to move between optimal RAID levels or to change from a degraded redundant logical drive to an optimal RAID 0. In Novell, the utility used for RAID migration is MEGAMGR and in Windows NT its Power Console. If a RAID 1 is being converted to a RAID 0, instead of performing RAID migration, one drive can be removed and the other reconfigured on the controller as a RAID 0. This is due to the same data being written to each drive.
Read-Ahead	A memory caching capability in some adapters that allows them to read sequentially ahead of requested data and store the additional data in cache memory, anticipating that the additional data will be needed soon. Read-Ahead supplies sequential data faster, but is not as effective when accessing random data.
Ready State	A condition in which a workable hard drive is neither online nor a hot spare and is available to add to an array or to designate as a hot spare.
Rebuild	The regeneration of all data from a failed disk in a RAID level 1, 3, 4, 5, or 6 array to a replacement disk. A disk rebuild normally occurs without interruption of application access to data stored on the array virtual disk.
Rebuild Rate	The percentage of CPU resources devoted to rebuilding.
Reconstruct	The act of remaking a logical drive after changing RAID levels or adding a physical drive to an existing array.
Redundancy	The provision of multiple interchangeable components to perform a single function to cope with failures or errors. Redundancy normally applies to hardware; a common form of hardware redundancy is disk mirroring.
Replacement Disk	A disk available to replace a failed member disk in a RAID array.

Replacement Unit	A component or collection of components in a disk subsystem that are always replaced as a unit when any part of the collection fails. Typical replacement units in a disk subsystem includes disks, controller logic boards, power supplies, and cables. Also called a hot spare.
SAF-TE	SCSI Accessed Fault-Tolerant Enclosure. An industry protocol for managing RAID enclosures and reporting enclosure environmental information.
SCSI	(Small Computer System Interface) A processor-independent standard for system-level interfacing between a computer and intelligent devices, including hard disks, floppy disks, CD-ROM, printers, scanners, etc. SCSI can connect up to seven devices to a single adapter (or host adapter) on the computer's bus. SCSI transfers eight or 16 bits in parallel and can operate in either asynchronous or synchronous modes. The synchronous transfer rate is up to 320 MB/s. SCSI connections normally use single ended drivers, as opposed to differential drivers. The original standard is now called SCSI-1 to distinguish it from SCSI-2 and SCSI-3, which include specifications of Wide SCSI (a 16-bit bus) and Fast SCSI (10 MB/s transfer.) Ultra160 SCSI is a subset of Ultra3 SCSI and allows a maximum throughput of 160 MB/s, which is more than twice as fast as Wide Ultra2 SCSI.
SCSI Channel	MegaRAID controls the disk drives via SCSI-2 buses (channels) over which the system transfers data in either Fast and Wide or Ultra SCSI mode. Each adapter can control up to three SCSI channels.
Service Provider	The Service Provider, (SP), is a program that resides in the desktop system or server and is responsible for all DMI activities. This layer collects management information from products (whether system hardware, peripherals or software) stores that information in the DMI's database and passes it to management applications as requested.
SMARTer	Self-Monitoring, Analysis, and Reporting Technology with Error Recovery. An industry standard protocol for reporting server system information. Self-Monitoring, Analysis and Reporting Technology for disk drives is a specification designed to offer an early warning for some disk drive failures. These failures are predicted based upon actual performance degradation of drive components that are then reported through a graphical interface.
SNMP	Simple Network Management Protocol is the most widely used protocol for communication management information between the managed elements of a network and a network manager. It focuses primarily on the network backbone. The Internet standard protocol developed to manage nodes on an Internet Protocol (IP) network.
Spanning	Array spanning by a logical drive combines storage space in two arrays of disk drives into a single, contiguous storage space in a logical drive. MegaRAID logical drives can span consecutively numbered arrays that each consist of the same number of disk drives. Array spanning promotes RAID levels 1 and 5 to RAID levels 10 and 50, respectively. See also <i>Disk Spanning</i> and <i>Spanning</i> .
Stripe Size	The amount of data contiguously written to each disk. You can specify stripe sizes of 2 KB, 4 KB, 8 KB, 16 KB, 32 KB, 64 KB, and 128 KB for each logical drive. For best performance, choose a stripe size equal to or smaller than the block size used by the host computer.
Stripe Width	The number of disk drives across which the data are striped.
Spare	A hard drive available to back up the data of other drives.

- Striping** Segmentation of logically sequential data, such as a single file, so that segments can be written to multiple physical devices in a round-robin fashion. This technique is useful if the processor can read or write data faster than a single disk can supply or accept it. While data is being transferred from the first disk, the second disk can locate the next segment. Data striping is used in some modern databases and in certain RAID devices.
- Terminator** A resistor connected to a signal wire in a bus or network for impedance matching to prevent reflections, e.g., a 50 ohm resistor connected across the end of an Ethernet cable. SCSI chains and some LocalTalk wiring schemes also require terminators.
- Ultra320** Ultra320 SCSI is a subset of Ultra3 SCSI and allows a maximum throughput of 320 MB/s, which is twice as fast as Wide Ultra2 SCSI. It provides 320 MBs on a 16-bit connection.
- Virtual Sizing** FlexRAID Virtual Sizing is used to create a logical drive up to 80 GB. A maximum of 40 logical drives can be configured on a RAID controller and RAID migration is possible for all logical drives except the fortieth. Because it is not possible to do migration on the last logical drive, the maximum space available for RAID migration is 560 GB.
- Write-Through/Write-Back** When the processor writes to main memory, the data is first written to cache memory, assuming that the processor will probably read this data again soon. In write-through cache, data is written to main memory at the same time it is written to cache memory. In write-back cache, data is written only to main memory when it is forced out of cache memory. Write-through caching is simpler than write-back because an entry to cache memory that must be replaced can be overwritten in cache memory because it will already have been copied to main memory. Write-back requires cache memory to initiate a main memory write of the flushed entry followed (for a processor read) by a main memory read. However, write-back is more efficient because an entry can be written many times to cache memory without a main memory access.

Index

6

68-Pin High Density Connectors, 97

A

AMPLIMITE .050 Series connectors, 104

Array, 109

Array Configuration Planner, 39

Array Management Software, 109

Array Performance Features, 22

Array Spanning, 109

Assigning Drive Letters, 75

Assigning RAID Levels, 36

Asynchronous Operations, 109

Audible Warnings, 107

Automatic Failed Drive Detection and Rebuild,
27

B

Battery Disposal Laws, 58

Battery Pack, 55

BIOS Boot Error Messages, 90

BIOS Setup, 63

Bus Data Transfer Rate, 23

Bus Type, 23

C

Cable Assembly for Internal Wide SCSI Devices,
98

Cables To Go, 102

Cache Configuration, 23

Cache I/O, 109

Cache Memory, 25

Installing, 44

Card Size, 23

Changing DRAM Modules, 57

Changing the Battery Pack, 57

Channel, 109

Charging the Battery Pack, 57

Cluster Configuration Wizard, 76

Cluster Disks

Configuration, 80

Cluster Installation, 68

Overview, 68

Validation, 86

Cluster Node Network Adapter

Configuration, 71

Cluster Service

Assigning Drive Letters, 75

Cluster Node Network Adapter, 71

Cluster User Account, 73

Configuring Cluster Disks, 80

Connectivity and Name Resolution, 72

Disk Access and Functionality, 76

Domain Membership, 73

SCSI Drive Installations, 88

Setting Up Networks, 69

Shared Disks Configuration, 75

Shared Disks Setup, 74

Software Installation, 76

Validating the Cluster Installation, 86

Cluster User Account

Setup, 73

Clustering

Network Requirements, 68

Shared Disk Requirements, 68

Clustering Support, 28

Cold Swap, 109

Compatibility, 27

Components, 25

Configuration Features, 21

Configuration on Disk, 20

Configuration Strategies, 35

Maximize Capacity, 35

Maximize Drive Availability, 36

Maximize Drive Performance, 36

Configuring Arrays, 34

Arranging Arrays, 34

Creating Hot Spares, 35

Creating Logical Drives, 35

Configuring Logical Drives, 37

Configuring SCSI Physical Drives, 29

Basic Configuration Rules, 29

Distributing Drives, 29

SCSI Channels, 29

Connecting Internal and External Wide Devices,
99

Consistency Check, 6, 109

Converting from Internal Wide to Internal Non-
Wide (Type 3), 102

Converting Internal Wide to Internal Non-Wide,
100

- Converting Internal Wide to Internal Non-Wide (Type 30), 101
- CPU, 25
- Current Configuration, 30

D

- Data redundancy
 - Using mirroring, 6
- Data Transfer Capacity, 109
- Dedicated Parity, 9
- Degraded, 109
- Devices per SCSI Channel, 24
- DIMM socket, 44
- DIMMs, 44
- Dirty Cache LED Connector, 47
- Disconnect/Reconnect, 26
- Disk, 109
- Disk Access and Functionality, 76
- Disk Array, 110
- Disk Array Types, 11
 - Bus Based, 12
 - SCSI to SCSI, 11
 - Software-Based, 11
- Disk Duplexing, 110
- Disk Mirroring, 6, 110
- Disk Rebuild, 10
- Disk Spanning, 8, 110
- Disk Striping, 7, 110
- Disk Subsystem, 110
- Disposing of a Battery Pack, 57
- Distributed Parity, 9
- DOS, 23
- Double Buffering, 110
- Drive roaming, 20
- Drive States, 11

E

- Enclosure Management, 12

F

- Fail, 11
- Failed Drive, 110
- Fast SCSI, 110
- Fault Tolerance, 6
- Fault Tolerance Features, 22
- Fault-Tolerance, 27
- Features, 19
- Firmware, 23, 110
- Flash ROM, 1
- FlexRAID Power Fail Option, 110
- Format, 110

G

- GB, 110
- Glossary, 109
- GWC, 102

H

- Hardware Installation, 41
 - Optimal Equipment, 41
 - Requirements, 41
- Hardware Requirements, 20
- High-Density 68-Pin SCSI Connector and P-Cable Single-Ended Cable Pinouts, 103, 105, 107
- High-Density Connector, 104
- Host Computer, 110
- Host-based Array, 110
- Hot spare
 - Using during disk rebuild, 10
- Hot Spare, 9, 11, 111
- Hot Swap, 10, 27, 111

I

- I/O Driver, 111
- Initialization, 111
- Install Cache Memory, 44
- Installation Steps
 - Custom, 43

J

- Jumper information, 46
- Jumpers, 46

L

- Linux
 - Red Hat, 23
- Logical Disk, 111
- Logical Drive, 10, 111
- Logical Drive Configuration, ix, 31
- Logical Drive States, 11
 - Degraded, 11
 - Failed, 11
 - Offline, 11
 - Optimal, 11
- LSI Part Number
 - Battery, 57

M

- Mapping, 111
- Maximum Cable Length, 2
- MB, 111
- MegaRAID BIOS, 25
- MegaRAID BIOS Setup, 27
- MegaRAID Card
 - Installing, 58
- MegaRAID Manager, 27, 57
- MegaRAID SCSI 320-2 Ultra320 Card Layout, 47
- MegaRAID Specifications, 23
 - Bus Data Transfer Rate, 23
 - Bus Type, 23
 - Cache Configuration, 23
 - Card Size, 23
 - Devices per SCSI Channel, 24
 - Firmware, 23
 - Nonvolatile RAM, 23
 - Operating Voltage, 24
 - Processor, 23
 - RAID Levels Supported, 24
 - SCSI Bus, 24
 - SCSI cables, 24
 - SCSI Connectors, 24
 - SCSI Controller, 24
 - SCSI Data Transfer Rate, 24
 - SCSI Device Types Supported, 24
 - Serial Port, 24
 - Termination Disable, 24
- Memory installation, 45
- Mirroring, 6
- Motherboard
 - Configure, 44
- MS-DOS, 63
- Multi-threaded, 111
- Multi-threading, 26

N

- Nonvolatile RAM, 23
- Novell NetWare, 23, 63
- NVRAM, 1

O

- Onboard Speaker, 25
- Online
 - Drive state, 11
- Operating Environment, 111
- Operating System Software Drivers, 23
- Operating Voltage, 24
- Optimizing Data Storage, 38
 - Array Functions, 38
 - Data Access Requirement, 38

- Other BIOS error messages, 93
- Other BIOS Error Messages, 93

P

- Package Contents, vii
- Packing Slip, vii
- Parity, 9, 111
- Partition, 112
- Physical Array, 10
- Physical Device Layout, 32
- Physical Disk, 112
- Physical Disk Roaming, 112
- Physical drive, 10
- Planning the Array Configuration, 38
- Power Console, 27
- Power Console Plus, 27, 57
- Power Down, 44
- Processor, 23
- Protocol, 112

R

- RAID, 112
 - Introduction to, 5
- RAID 0, 14
- RAID 1, 15
 - Spanning to configure RAID 10, 8
- RAID 10, 17
 - Configuring, 8
- RAID 5, 16
 - Spanning to make RAID 50, 8
- RAID 50, 18
 - Configuring, 8
- RAID Levels, 5, 13, 112
- RAID Levels Supported, 24
- RAID Management, 26
- RAID Management Features, 22
- RAID Migration, 112
- Read-Ahead, 112
- Ready, 11
- Ready State, 112
- Rebuild, 11, 26
- Rebuild Rate, 10, 112
- Rebuilding a disk, 10
- Reconnect, 26
- Reconstruct, 112
- Reconstruction, 112
- Red Hat Linux, 63
- RedAlert, 28
- Redundancy, 112
- Replacement Disk, 112
- Replacement Unit, 113

S

- SAF-TE, 113
- Scatter/Gather, 26
- SCSI, 113
- SCSI backup and utility software, 28
- SCSI Bus, 24, 25
- SCSI Bus Widths and Maximum Throughput, 2
- SCSI Cable Vendors, 102, 103, 105, 107
- SCSI cables, 24
- SCSI Cables
 - Attaching, 60
- SCSI Channel, 113
- SCSI Connectors, 24, 26, 97
- SCSI Controller, 24
- SCSI Data Transfer Rate, 24
- SCSI Device Compatibility, 28
- SCSI Device Types Supported, 24
- SCSI Devices
 - Configuration, 88
- SCSI Drive Installations, 88
- SCSI Drive States, 11
- SCSI Firmware, 26
- SCSI Termination, 24, 26, 49
 - Connecting Non-Disk SCSI Devices, 53
 - Selecting a Terminator, 49
 - Set, 49
 - Terminating External Disk Arrays, 51
 - Terminating Internal and External Disk Arrays, 52
 - Terminating Internal SCSI Disk Arrays, 50
- SCSI terminator power (TermPWR Setting), 54
- Serial Port, 24, 25
- Server Management, 28
- Service Provider, 113
- Set SCSI Termination, 49
- Shared Disks
 - Configuration, 75
 - Setup, 74
- Shared SCSI Bus
 - Termination, 88
- SMART Technology, 20
- SMARTer, 113
- SNMP, 113
- SNMP agent, 28
- SNMP managers, 28
- Software Utilities, 23

- Spanning, 8, 113
- Spare, 113
- Standby rebuild, 10
- Stripe Size, 7, 26, 113
- Stripe Width, 7, 113
- Striping, 114
- System Connection, 102
- System Management and Reporting Technologies with Error Recovery., 113

T

- Tagged Command Queuing, 26
- Target identifiers
 - Setting, 61
- Technical Cable Concepts, 102
- Technical Support, viii
- Termination Disable, 24
- Terminator, 114
- TermPWR Enable, 48
- Troubleshooting, 89

U

- Ultra320 and WIDE SCSI, 19
- Ultra3-SCSI (320M), 114
- Unpack, 43

V

- Virtual Sizing, 114

W

- WebBIOS Configuration Utility, 27
- Windows .NET, 63
- Windows 2000, 63
- Windows 2000 Operating System
 - Installation, 69
- Windows NT, 23, 63
- Windows XP, 63
- Write-back caching, 57
- Write-Through/Write-Back, 114