

Motherboard Jumper Settings for ASUS AP100 Server

IMPORTANT: The User's Manual contains important notes. You may use this diagram for reference purposes only after reading the User's Manual completely.

Intel Pentium II Processor
 450MHz = 4.5x 100MHz
 400MHz = 4.0x 100MHz
 350MHz = 3.5x 100MHz
 333MHz = 5.0x 66MHz
 300MHz = 4.5x 66MHz
 266MHz = 4.0x 66MHz
 233MHz = 3.5x 66MHz

