



# Settings for ASUS AP3000/AP8000 Server (XG-DLS)

**IMPORTANT:** The User's Manual contains important notes. You may use this diagram for reference purposes only after reading the User's Manual completely.

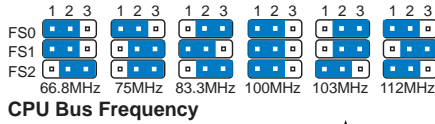

**Intel Xeon Processor**  
 550MHz = 5.5x 100MHz  
 500MHz = 5.0x 100MHz  
 450MHz = 4.5x 100MHz

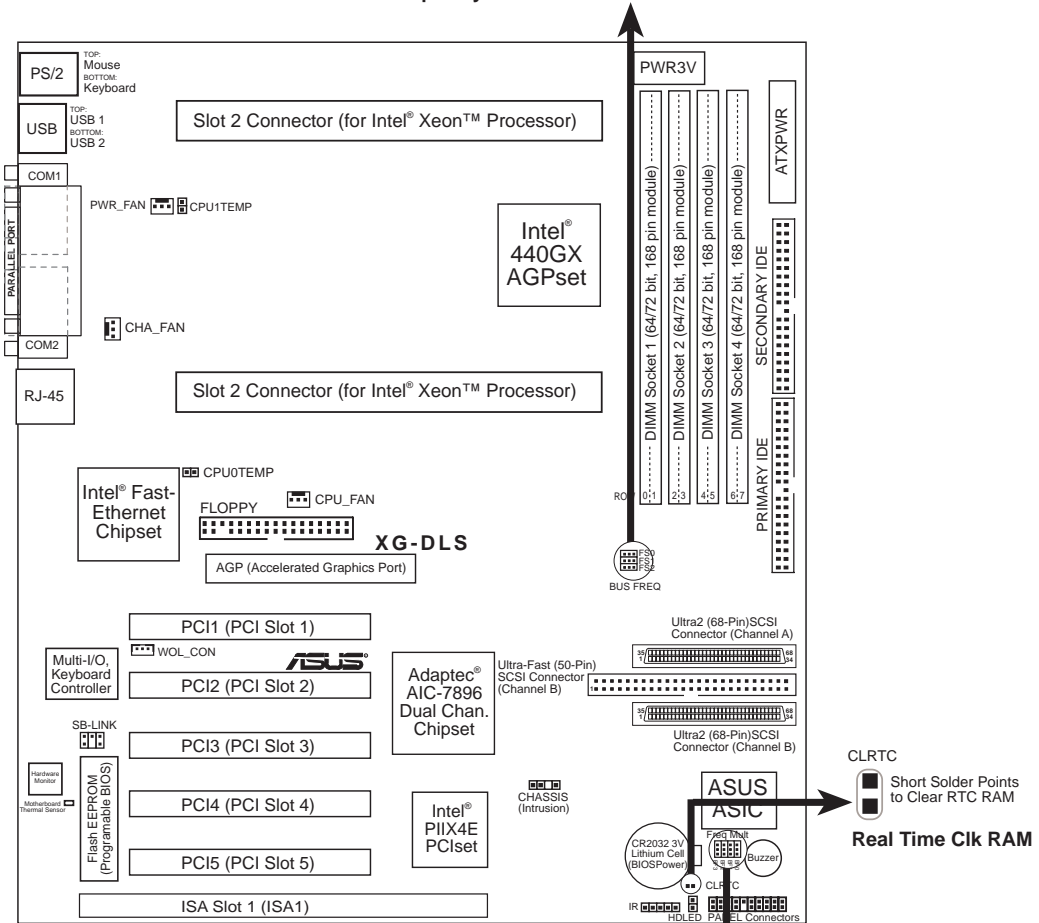

**CLRTC**  
 Short Solder Points to Clear RTC RAM  
**Real Time Clk RAM**

