


Settings for ASUS AP200/2000/AP6000 Server (P2B-DS)

IMPORTANT: The User's Manual contains important notes. You may use this diagram for reference purposes only after reading the User's Manual completely.

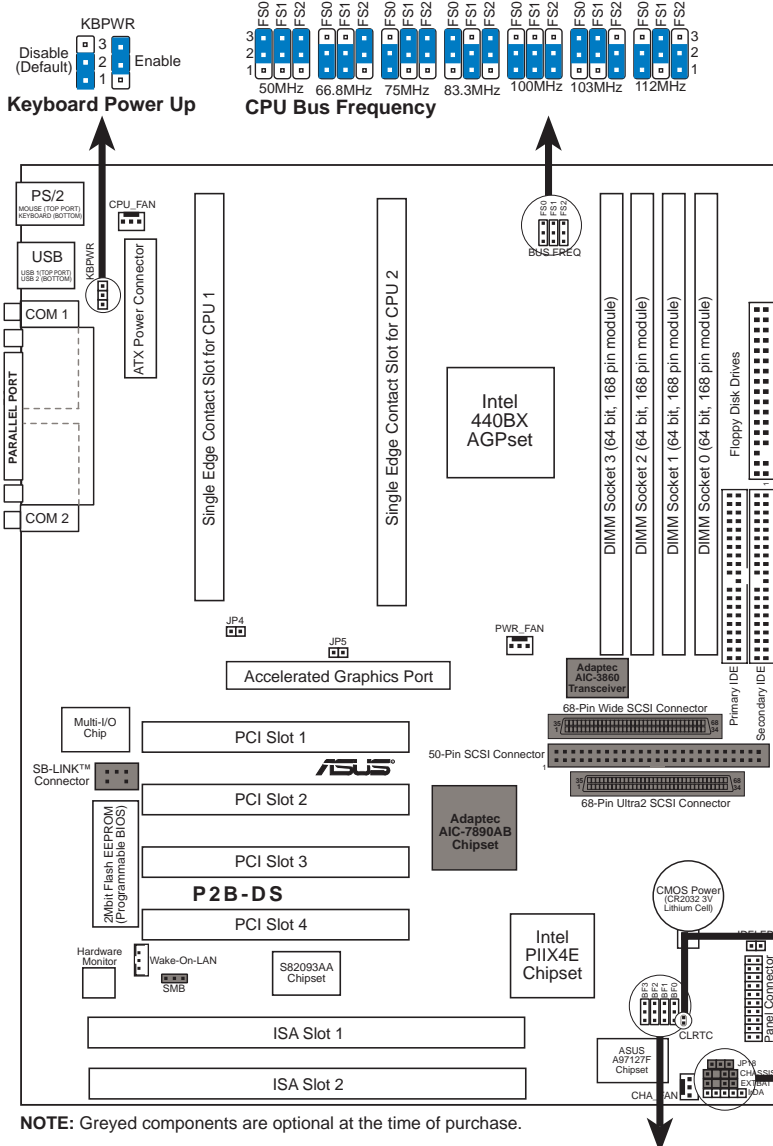

Intel Pentium III/II
 600MHz = 6.0x 100MHz
 550MHz = 5.5x 100MHz
 500MHz = 5.0x 100MHz
 450MHz = 4.5x 100MHz
 400MHz = 4.0x 100MHz
 350MHz = 3.5x 100MHz
 333MHz = 5.0x 66MHz
 300MHz = 4.5x 66MHz
 266MHz = 4.0x 66MHz
 233MHz = 3.5x 66MHz

CLRTC
 Short Solder Points to Clear RTC RAM

Real Time Clk RAM

JP18
 1 Disable (Def)
 2
 3 Enable

Chassis Intrusion

NOTE: Grayed components are optional at the time of purchase.

